

Lenovo Network

REST API Programming Guide

For Lenovo Cloud Network Operating System 10.6

Lenovo
™

Note: Before using this information and the product it supports, read the general information in the *Safety information and Environmental Notices* and *User Guide* documents on the Lenovo *Documentation CD* and the *Warranty Information* document that comes with the product.

First Edition (December 2017)

© Copyright Lenovo 2017
Portions © Copyright IBM Corporation 2014.

LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant a General Services Administration “GSA” contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

Lenovo and the Lenovo logo are trademarks of Lenovo in the United States, other countries, or both.

Contents

Preface	13
Who Should Use This Guide	14
What You'll Find in This Guide.	15
Additional References	16
Typographic Conventions	17
Chapter 1. Introduction	19
REST API Components	20
Using the REST Server.	21
Starting and Stopping the REST Server.	21
Communicating with the REST Server	22
Server Security	24
HTTPS Support.	25
REST Server Limitations	29
Chapter 2. REST Server JSON Calls	31
AAA	33
Get AAA Accounting Configuration.	34
Update AAA Accounting Configuration	35
Get AAA User EXEC Commands Authorization Setting	36
Update AAA User EXEC Commands Authorization Settings	37
Get AAA Configuration Commands Authorization Settings	38
Update AAA Configuration Commands Authorization Settings.	39
Get AAA Console User Login Authentication Configuration	40
Update AAA Console User Login Authentication Configuration	41
Get AAA Remote User Login Authentication Configuration	42
Update AAA Remote User Login Authentication Configuration.	43
Get AAA Authentication Login Error Message Status	44
Update AAA Authentication Login Error Message Status.	45
Get AAA Local Authentication Configuration.	46
Update AAA Local Authentication Configuration	47
Get AAA User Default Role Status.	48
Update AAA User Default Role Status	49
Get AAA Groups	50

ARP	51
Get ARP System Properties	52
Update ARP System Properties	53
Get ARP Properties of All Interfaces.	54
Get ARP Interface Properties	55
Update ARP Interface Properties	56
Get Static ARP Entries of All Interfaces	57
Get Static ARP Entries of One Interface	58
Create Static ARP Entry	59
Get Static ARP Entry	60
Update Static ARP Entry.	61
Delete Static ARP Entry	62
Get ARP Refresh Configuration.	63
Update ARP Refresh Configuration	64
BGP	65
Get BGP Global Statistics	67
Clear BGP Global Statistics.	69
Get BGP Neighbor Received RIB Information	70
Get BGP Neighbor RIB Advertised Information.	72
Get BGP Global Configuration	74
Get BGP Best Path Configuration	76
Get BGP Confederation Configuration.	78
Get BGP Graceful-Restart Configuration	79
Get BGP Route Reflector Information	80
Get BGP RIB Information	81
Get BGP Detailed RIB Information	83
Get BGP Summary Information.	87
Get BGP Neighbor Details	89
Get BGP Neighbor Statistics	94
Get BGP Distance Configuration	95
Get BGP Address Family Global Configuration	96
Get BGP Multipath ECMP Numbers Configuration	97
Get BGP Nexthop Trigger-Delay Configuration.	98
Get BGP Aggregate Configuration	99
Get BGP Dampening Parameters Configuration.	100
Get BGP Dampened Path Configuration	102
Get BGP Network Configuration	104
Get BGP Redistribute Configuration.	105
Get BGP Neighbor Configuration	107
Update BGP Neighbor Configuration	111
Update Global BGP Unnumbered Configuration	122
Update BGP Unnumbered Interface Configuration	123

CEE	125
Get CEE Configuration	126
Update CEE Configuration	127
Get PFC Configuration	128
Update PFC Configuration	129
Get PFC Interface Configuration	131
Update PFC Interface Configuration	132
Get PFC Interface Statistics	133
Get ETS Configuration	134
Update ETS Configuration	137
Get Application Protocol Configuration	141
Create Application Protocol Configuration	142
Delete Application Protocol Configuration	145
Get DCBX Configuration	146
Update DCBX Configuration	148
Get DCBX Control Interface Information	151
Get DCBX Administrative Interface Information	152
Get DCBX Operational Interface Information	157
Get DCBX Remote Interface Information	161
DHCP	165
Get the Global DHCP Client Feature Property	167
Update DHCP Client Feature Property	168
Get DHCP Client Properties of All Interfaces	169
Update DHCP Client Interface Properties	170
Delete the Vendor Class Identifier of an Interface	172
Get the Global DHCP Relay Service Property	173
Update the Global DHCP Relay Service Property	174
Get the DHCP Relay Properties of All Interfaces	175
Get DHCP Relay Interface Properties	176
Update DHCP Relay Interface Properties	178
Delete DHCP Relay Interface Properties	180
Get DHCP Snooping Binding Table Entry	181
Create DHCP Snooping Binding Table Entry	182
Delete DHCP Snooping Binding Table Entry	183
Get DHCP Snooping Configuration	184
Update DHCP Snooping Configuration	185
Get DHCP Snooping VLAN Configuration	186
Update DHCP Snooping VLAN Configuration	187
Delete DHCP Snooping VLAN Configuration	188
Get DHCP Snooping Trusted Ports Configuration	189
Update DHCP Snooping Trusted Ports Configuration	190
Get DHCP Snooping Statistics	191
Clear DHCP Snooping Statistics	192

DNS	193
Get DNS Host Information	194
Configure DNS Client Service	196
Configure DNS Name Server	197
Delete DNS Name Server	198
Configure DNS Default Domain Name	199
Delete DNS Default Domain Name	200
Configure DNS Domain Name	201
Delete DNS Domain Name	202
Configure DNS Hostname to IP Address Mapping	203
Delete DNS Hostname to IP Address Mapping	204
ECMP	205
Get Weighted ECMP Status	206
Update Weighted ECMP Status	207
Get IPv4 Next-hop ECMP Weight	208
Configure IPv4 Next-hop ECMP Weight	209
Get IPv6 Next-hop ECMP Weight	210
Configure IPv6 Next-hop ECMP Weight	211
Get Interface ECMP Weight	212
Configure Interface ECMP Weight	213
FDB	215
Get List of MAC Addresses	216
Get Number of MAC Addresses	218
Get Global FDB Runtime Settings	220
Get Global FDB Configured Settings	221
Update Global FDB Settings	222
Get MAC Address Learning Interface Runtime Setting	223
Get MAC Address Learning Interface Configured Setting	224
Update Interface MAC Address Learning Setting	225
Get Static MAC Addresses	226
Create Static MAC Address	227
Delete MAC Address or Interface for Multicast MAC Address	229
IGMP	231
Get IGMP Groups	232
Get IGMP Mrouter	235
Update IGMP Mrouter Interface for a VLAN	236
Get IGMP Querier	237
Update IGMP Querier on a VLAN	238
Get IGMP Snooping System Properties	239
Update IGMP Snooping System Properties	240
Get IGMP Snooping Properties of All VLANs	241
Get IGMP Snooping VLAN Properties	242
Update IGMP Snooping VLAN Properties	243
Interface	245
Get All Interfaces	246
Get Interface	248
Update Interface	250
Get Transceiver Information for All Interfaces	252
Get Transceiver Information for One Interfaces	254

IP Interface	257
Get IP Properties of All Interfaces	258
Get IP Interface Properties	259
Update IP Interface Properties	260
LACP	261
Get LACP System Properties	262
Update LACP System Properties	263
LAG	265
Get All LAGs	266
Create LAG	268
Get LAG Properties	270
Update LAG	272
Get LAG Load Balance Settings	274
Update LAG Load Balance Settings	275
Delete LAG	277
LDAP	279
Get LDAP Configuration	280
Update LDAP Configuration	281
Get LDAP Profile Configuration	283
Add LDAP Profile	287
Delete LDAP Profile	293
Get LDAP Server Group Information	294
Add LDAP Server Group	298
Delete LDAP Server Group	302
LLDP	303
Get LLDP System Properties	304
Update LLDP System Properties	305
Get LLDP Properties for All Interfaces	306
Get LLDP Interface Properties	307
Update LLDP Interface Properties	308
Get LLDP Interface Statistics	309
Get LLDP Interface Neighbor information	310
Get LLDP Neighbor Information for All Interfaces	311
MSTP	313
Get MSTP System Properties	314
Update MSTP System Properties	315
Get Properties of All MSTP Instances	316
Create MSTP Instance	317
Get MSTP Instance	318
Update MSTP Instance	319
Delete MSTP Instance	320
Get Interface Properties of an MSTP Instance	321
Update Interface Properties of an MSTP Instance	322

NOS Copy	323
Determine Whether the Running Configuration Needs to be Saved	324
Reset Switch	325
Save Configuration	326
Download Image to Switch.	327
Download Configuration to Switch	328
Upload Configuration to Server.	330
Upload Tech Support to Server	332
Get Download Transfer Status	333
Get Upload Transfer Status.	334
NPA	337
Get VM Information.	338
Get VM Information by VM UUID	340
Get VM Information by VM Name	342
Get VM Interface Information	344
Get VM Information for Specific Interface	346
Get Virtual Network Information	348
Get Virtual Network Information by UUID.	349
Get VNIC Statistics	351
Get VNIC Statistics for Specific VM by VM UUID	354
Get VNIC Statistics for Specific VM by VM Name	357
Get VNIC Interface Statistics	360
Get VNIC Statistics for Specific Interface	363
NTP	367
Get NTP Properties	368
Update NTP Servers and Peers	369
Delete NTP Servers and Peers	370
OSPF	371
Get OSPF Global Statistics	372
Get OSPF Traffic Statistics	378
Get OSPF Neighbors	381
Get OSPF Routes	382
Get OSPF Database	384
PKI	387
Get PKI Profile Summary Information	388
Delete PKI Profile.	390
Get CA Certificate	391
Import CA Certificate	393
Delete CA Certificate	395
Get Host Certificate	396
Import Host Certificate	398
Generate Host Certificate	400
Delete Host Certificate.	402
Generate CSR	403
Get CSR	405
Export CSR and Import Signed CSR.	407

RADIUS	409
Get RADIUS Configuration	410
Update RADIUS Configuration	412
Get RADIUS Server Configuration	414
Add RADIUS Server	416
Delete RADIUS Server	418
Get RADIUS Server Group Configuration	419
Add RADIUS Server Group	421
Delete RADIUS Server Group	424
Security Mode	425
Get Security Mode Configuration	426
Update Security Mode Configuration	427
sFlow	429
Get sFlow Configuration	430
Update sFlow Global Configuration	432
Update sFlow Interface Configuration	434
Get sFlow Statistics	435
Clear sFlow Statistics	436
SNMP	437
Get the SNMPv3 Account for XClarity	438
Set the SNMPv3 Account for XClarity	439
Delete the SNMPv3 Account for XClarity	441
Get the SNMPv3 Trap Host IP Address for XClarity	442
Set the SNMPv3 Trap Host IP Address for XClarity	443
Delete the SNMPv3 Trap Host IP Address for XClarity	445
Startup Information	447
Get System Startup Information	448
Put System ZTP Interface	449
Get System ZTP Setting	450
Put System Startup Image	451
Get System Startup Image	452
STP	453
Get STP Properties for All Interfaces	454
Get STP Interface Properties	455
Update STP Interface Properties	456
Get STP Properties Per VLAN	458
Set STP Properties Per VLAN	459
Get STP Interface Properties	460
Update STP Interface Properties	461
Get STP Interface VLAN Properties	462
Update STP Interface VLAN Properties	463
System	465
Get System Properties	465

System Configuration	467
Get Hostname	468
Set Hostname	469
Get Clock Date	470
Set Clock Date	471
Set Clock Format	473
Set Clock Protocol.	474
Set Clock Timezone	475
Set Clock Summer Time	476
Get Device Contact	479
Update Device Contact	480
Get Device Description	481
Update Device Description.	482
Get Rack Properties	483
Update Rack Properties	484
System Information.	485
Get All System Information	486
Get System Fan Information	489
Get System Power Information	490
Get System Temperature Information	491
Get System Inventory	492
Get System Serial Number	493
Get Panic Dump Information.	494
Get Global Health Status.	495
Get System Resource Statistics	496
Telemetry	497
Get Switch Properties	498
Set System Feature	500
Get System Feature	501
Set BST Tracking	502
Get BST Tracking	504
Set BST Feature.	506
Get BST Feature	508
Get BST Report	510
Get BST Congestion Drop Counters	513
Set BST Threshold	519
Get BST Threshold	521
Clear BST Threshold	524
Clear BST Statistics	525
Clear BST Congestion Drops	526
Cancel BST Request	527
Get Interface Statistics	528
Clear Interface Statistics	530

TACACS+	531
Get TACACS+ Configuration	532
Update TACACS+ Configuration	533
Get TACACS+ Server Configuration	535
Add TACACS+ Server	536
Delete TACACS+ Server	538
Get TACACS+ Server Group Configuration	539
Add TACACS+ Server Group	541
Delete TACACS+ Server Group	543
vLAG	545
Get vLAG Configuration	546
Update vLAG Configuration	547
Get Global vLAG Information	549
Get vLAG ISL Information	551
Configure vLAG ISL	552
Get vLAG Health Check Information	553
Configure vLAG Health Check Parameters	554
Create vLAG Instance	556
Update vLAG Instance	557
Delete vLAG Instance	558
Get vLAG Instance Configuration	559
Get vLAG Instance Information	560
VLAN	561
Get All VLANs	562
Create VLAN	563
Get VLAN	564
Update VLAN	565
Delete VLAN	567
Get VLAN Properties of All Interfaces	568
Get VLAN Interface Properties	570
Update VLAN Interface Properties	572
Add and Modify Subnet VLAN Rule	575
Delete Subnet VLAN Rule	577
Get Subnet VLAN Rule	578
Get Interface Subnet VLAN Control Status	580
Update Interface Subnet VLAN Control Status	581
VLAN Interface Properties	583
Get VLAN Properties of All Interfaces	584
Get VLAN Interface Properties	585
Update VLAN Interface Properties	586
Update VLAN Interface Allowed VLAN List	588
VRF	591
Get All VRFs	592
Get VRF	593

VRRP	595
Get VRRP VRs of All Interfaces	596
Get VRRP VRs of One Interface	598
Create VRRP VR	600
Get VRRP VR	603
Update VRRP VR	605
Delete VRRP VR	608
Appendix A. Getting Help and Technical Assistance	609
Appendix B. Notices	611
Trademarks	613
Important Notes	614
Recycling Information.	615
Particulate Contamination.	616
Telecommunication Regulatory Statement.	617
Electronic Emission Notices	618
Federal Communications Commission (FCC) Statement	618
Industry Canada Class A Emission Compliance Statement	618
Avis de Conformité à la Réglementation d'Industrie Canada	618
Australia and New Zealand Class A Statement	618
European Union - Compliance to the Electromagnetic Compatibility Directive	
619	
Germany Class A Statement	619
Japan VCCI Class A Statement	620
Japan Electronics and Information Technology Industries Association	
(JEITA) Statement.	621
Korea Communications Commission (KCC) Statement.	621
Russia Electromagnetic Interference (EMI) Class A statement.	621
People's Republic of China Class A electronic emission statement.	621
Taiwan Class A compliance statement	621

Preface

The *REST API Programming Guide for Lenovo CNOS 10.6* describes how to configure and use the Cloud Network Operating System 10.6 software on the following Lenovo RackSwitches:

- Lenovo RackSwitch G8272. For documentation on installing the switch physically, see the *Lenovo RackSwitch G8272 Installation Guide*.
- Lenovo RackSwitch G8296. For documentation on installing the switch physically, see the *Lenovo RackSwitch G8296 Installation Guide*.
- Lenovo RackSwitch G8332. For documentation on installing the switch physically, see the *Lenovo RackSwitch G8332 Installation Guide*.
- ThinkSystem NE1032 RackSwitch. For documentation on installing the switch physically, see the *Lenovo ThinkSystem NE1032 RackSwitch Installation Guide*.
- ThinkSystem NE1032T RackSwitch. For documentation on installing the switch physically, see the *Lenovo ThinkSystem NE1032T RackSwitch Installation Guide*.
- ThinkSystem NE1072T RackSwitch. For documentation on installing the switch physically, see the *Lenovo ThinkSystem NE1072T RackSwitch Installation Guide*.
- ThinkSystem NE10032 RackSwitch. For documentation on installing the switch physically, see the *Lenovo ThinkSystem NE10032 RackSwitch Installation Guide*.
- ThinkSystem NE2572 RackSwitch. For documentation on installing the switch physically, see the *Lenovo ThinkSystem NE2572 RackSwitch Installation Guide*.

Who Should Use This Guide

This guide is intended for network installers and system administrators engaged in configuring and maintaining a network. The administrator should be familiar with Ethernet concepts, IP addressing, Spanning Tree Protocol, and SNMP configuration parameters.

What You'll Find in This Guide

This guide will help you plan, implement, and administer Cloud NOS software. Where possible, each section provides feature overviews, usage examples, and configuration instructions. The following material is included:

This book contains the following chapters:

- [Chapter 1, “Introduction,”](#) gives an overview of the Lenovo REST API and how to start the server.
- [Chapter 2, “REST Server JSON Calls,”](#) describes the URIs and functions available in the REST API.
- [Appendix A, “Getting Help and Technical Assistance,”](#) describes where to get help with your product.
- [Appendix B, “Notices,”](#) contains legal notices.

Additional References

Additional information about installing and configuring the switch is available in the following guides:

- *Lenovo Network Application Guide for Lenovo Cloud Network Operating System 10.6*
- *Lenovo Network Command Reference for Lenovo Cloud Network Operating System 10.6*
- *Lenovo Network Release Notes for Lenovo Cloud network Operating System 10.6*
- *Lenovo Python Programming Guide for Lenovo Cloud Network Operating System 10.6*

Typographic Conventions

The following table describes the typographic styles used in this book.

Table 1. *Typographic Conventions*

Typeface or Symbol	Meaning	Example
ABC123	This type is used for names of commands, files, and directories used within the text. It also depicts on-screen computer output and prompts.	View the <code>readme.txt</code> file. Switch#
ABC123	This bold type appears in command examples. It shows text that must be typed in exactly as shown.	Switch# ping
<ABC123>	This italicized type appears in command examples as a parameter placeholder. Replace the indicated text with the appropriate real name or value when using the command. Do not type the brackets. This also shows book titles, special terms, or words to be emphasized.	To establish a Telnet session, enter: Switch# telnet <IP address> Read your <i>User's Guide</i> thoroughly.
{}	Command items shown inside brackets are mandatory and cannot be excluded. Do not type the brackets.	Switch# cp {ftp sftp}
[]	Command items shown inside brackets are optional and can be used or excluded as the situation demands. Do not type the brackets.	Switch# configure [device]
	The vertical bar () is used in command examples to separate choices where multiple options exist. Select only one of the listed options. Do not type the vertical bar.	Switch# cp {ftp sftp}
<AaBb123>	This block type depicts menus, buttons, and other controls that appear in graphical interfaces.	Click the < Save > button.

Chapter 1. Introduction

The Lenovo REST Application Programming Interface (API) enables you to remotely configure and manage a Lenovo switch using REST, HyperText Transfer Protocol (HTTP), and Hyper Text Transfer Protocol over SSL (HTTPS).

The REST (REpresentational State Transfer) architecture has six constraints:

- Uniform Interface
- Stateless
- Cacheable
- Client-Server
- Layered Systems
- Code on Demand

The REST API is a JavaScript Object Notation-based (JSON) wrapper around Lenovo's Python On-Box Scripting interface. It is a component of Configuration, Management, and Reporting (CMR) on CNOS.


Note: The Lenovo REST API calls have been tested with:

- The Advanced Rest Client extension (version 6.19.17.118 or earlier) in Chrome
- The RESTClient extension in Firefox
- The Python3 http.client module

REST API Components

The following figure shows components of the REST API and JSON:

Figure 1. REST/JSON Components

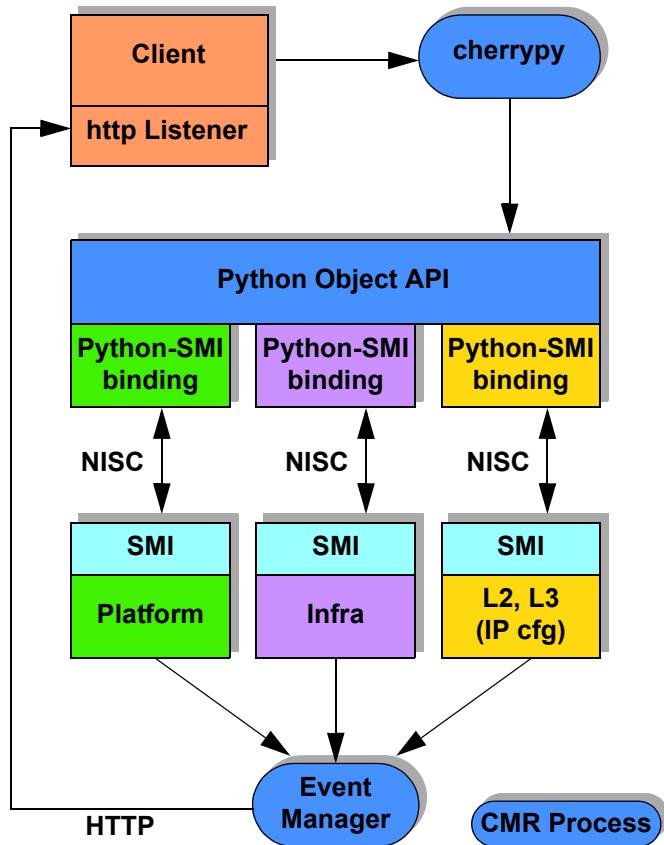

The cherrypy server interprets the REST JSON code. When the cherrypy server receives a REST API request, it executes the appropriate Python code on Cloud NOS and translates it into a series of Simple Management Interface (SMI) calls. For each CLI connection through the console, SSH, or Telnet, a separate Cloud NOS process is spawned to service CLI commands.

Using the REST Server

This section discusses starting, stopping, and communicating with the REST server.

Starting and Stopping the REST Server

Use the CNOS CLI to start or stop the REST server.

Starting the REST Server

To start the REST server listening on the HTTPS port (443), in Global Configuration Mode on the switch, enter:

```
Switch(config)# feature restApi
```

To start the REST server listening in HTTP mode on port 8090, in Global Configuration Mode on the switch, enter:

```
Switch(config)# feature restApi http
```

This starts the REST server (cherrypy) listening on the specified port (443 or 8090) and writes the Process ID to the following PID file:

/var/run/restfib<VRF ID>.pid

where:

- *VRF ID* = 0 for the default Virtual Routing and Forwarding (VRF) ID
- *VRF ID* = 1 for the management Virtual Routing and Forwarding (VRF) ID

A separate REST server instance is created for each VRF ID created (one default, one management).

Stopping the REST Server

To stop the REST server, in Global Configuration Mode on the switch, enter:

```
Switch(config)# no feature restApi
```

This stops the REST server from listening on all ports for all VRF IDs.

Communicating with the REST Server

To log onto the REST server, use the URL:

`http://<management switch IP address>:<port>/nos/api/login`

The default *port* is 443.

Confirm adding a security exception. Enter your username and password.

Note: You must be a “network-admin” user to use the REST API. Requests from users with other roles will be rejected.

The REST API uses the following types of HTTP methods:

- POST
- GET
- PUT
- DELETE

Request Formats

The format of a URI or URL for a resource depends upon which type of request is being sent.

Table 2. REST API URI/URL Conventions

Request Type	URI Format
POST	<code>http://<switch address>:<port>/nos/api/cfg/<resource> [parameters={<parameters>}]</code>
GET	<code>http://<switch address>:<port>/nos/api/cfg/<resource>/<ID></code> <code>http://<switch address>:<port>/nos/api/info/<resource>/<ID></code>
PUT	<code>http://<switch address>:<port>/nos/api/cfg/<resource> [parameters={<parameters>}]</code>
DELETE	<code>http://<switch address>:<port>/nos/api/cfg/<resource>/<ID></code>

where:

Parameter	Description
<i>switch address:port</i>	The switch IP address and port where the REST server is installed.
<i>resource</i>	Any network or switch resource, such as an interface or a VLAN.
<i>parameters</i>	Additional parameters related to the request, presented in JSON format.

The following example shows a PUT request for interface `ethernet1/1`:

```
PUT /nos/api/cfg/interface/Ethernet1%2F1
{
    "duplex": "full",
    "mtu": 1500,
    "admin_state": "up",
}
```

Note: When a port or other parameter in the URI has a slash (/) in it, such as `ethernet1/1`, you need to substitute the hexadecimal code for the slash (%2F, as in `ethernet1%2F1`) so the slash is not read as a directory delimiter. Slash characters *are* allowed in the JSON Request.

The following example shows the response to the previous PUT request:

```
PUT /nos/api/cfg/interface/Ethernet1%2F1
{
    "duplex": "full",
    "if_name": "Ethernet1/1",
    "mtu": 1500,
    "admin_state": "up",
    "mac_addr": "a897.dcf8.1101",
    "ifindex": "9",
    "oper_state": "up",
    "speed": "10000"
}
```

Getting the REST Server Status

To get the current status of the REST server, including the listening port number, from the CLI, enter:

```
Switch# display restApi server
```

Authenticating Users on the REST Server

To log onto the switch via the REST server, use the following URL:

`https://<IP address>/nos/api/login`

where *IP address* is the management IP address of the switch you are accessing.

Your user session expires based on the switch timeout value, which defaults to 10 minutes.

To log out of the switch via the REST server, use the following URL:

`https://<IP address>/nos/api/logout`

Server Security

The REST API uses the local user database in CNOS on the switch for authentication. All REST requests must be issued by a “network-admin” user. Requests made by any other type of user will be rejected by the REST API server.

The REST server uses cookies to identify sessions. Specifically, a cookie is assigned for each session, and its passback will be requested by the REST server. A REST API client must first issue a “Set-Cookie” request and then must pass the cookie back on all subsequent REST requests.

HTTPS Support

When REST API via HTTPS is enabled by default, a self-signed certificate is generated automatically.

Note: Lenovo recommends using CSR or CA signed certificates rather than self-signed certificate. For more information on how to generate CSR or CA certificates, see the *CNOS Application Guide*.

To refresh a self-signed certificate, use the following steps:

1. Disable the REST server:

```
Switch(config)# no feature restApi
```

To verify that the REST server is not running, enter:

```
Switch(config)# display restApi server  
rest server disabled port: 8090(HTTP)
```

2. Enter the Public Key Infrastructure (PKI) configuration mode.

```
Switch(config)# pki rest_mgmt  
Switch(config-pki)#
```

3. Create the certificate:

```
Switch(config-pki)#host-cert generate  
Country Name (2 letter code) [US]:  
State or Province Name (full name) [California]:  
Locality Name (eg, city) [Santa Clara]:  
Organization Name (eg, company) [Lenovo Networking Operating System]:  
Organizational Unit Name (eg, section) [Network Engineering]:  
Common Name (eg, FQDN or YOUR name) []: netuser  
Email (eg, email address) []: netuser@lenovo.com  
Confirm generate certificate? (y/n) [n] y  
.....++  
.....++  
Host certificate generation succeeded
```

Note: The default values are in square brackets ([text]); press **Enter** to use the default values.

4. Re-enable the REST server:

```
Switch(config)# feature restApi
```

5. Make sure the REST server is running:

```
Switch(config)# display restApi server  
rest server enabled port: 443  
restApi pki rest_mgmt vrf management  
restApi pki rest_default vrf default
```

6. The REST PKI profiles are automatically generated.

To display host certificate information, use the following commands::

```
Switch(config)#display pki rest_mgmt host-certificate
Certificate:
  Data:
    Version: 3 (0x2)
    Serial Number: 0 (0x0)
    Signature Algorithm: sha512WithRSAEncryption
    Issuer: C=US, ST=California, L=Santa Clara, O=Lenovo Networking
    Operating System, OU=Network Engineering,
    CN=acomsa/emailAddress=netuser@lenovo.com
    Validity
      Not Before: May 3 14:49:49 2017 GMT
      Not After : May 3 14:49:49 2018 GMT
    Subject: C=US, ST=California, L=Santa Clara, O=Lenovo Networking
    Operating System, OU=Network Engineering,
    CN=acomsa/emailAddress=netuser@lenovo.com
    Subject Public Key Info:
      Public Key Algorithm: rsaEncryption
      Public-Key: (2048 bit)
        Modulus:
          00:d2:e6:5d:11:c1:0c:f0:5e:75:09:ac:ab:77:2b:
          a2:c2:ca:fd:33:79:f9:58:6c:c6:d9:89:87:a4:d8:
          94:79:ab:ca:f2:15:f3:ab:43:66:27:2f:8f:40:76:
          7f:ed:4c:5a:e2:23:18:98:68:fe:4b:51:bf:4a:6b:
          64:08:4f:00:90:0e:df:71:d7:c4:db:48:99:4f:3d:
          47:4b:ae:0a:9a:ba:d8:f0:15:93:4e:c0:6d:2c:64:
          a9:1f:c0:a7:6f:7f:4f:87:2d:b5:c7:8a:d5:09:37:
          5c:8b:6f:14:b5:e7:8c:5d:99:da:ae:20:2c:0d:94:
          b3:c3:f8:4c:5f:04:8f:71:4f:19:b2:18:11:64:e4:
          9a:96:41:2b:bf:de:9a:87:32:6b:a5:22:f3:eb:32:
          da:c5:ac:c8:d4:cf:83:14:6a:39:23:b9:49:2e:bc:
          ec:84:e6:5c:f9:d6:df:2d:97:e7:f3:dd:cb:6d:c0:
          94:e1:a1:9a:94:ea:3a:65:04:e7:63:45:fa:70:7d:
          f6:89:2d:af:7d:bf:d4:7d:f2:f1:45:b7:a4:11:16:
          29:c4:4a:56:58:63:6e:b6:4d:6a:aa:c8:2e:c0:7b:
          15:b5:7b:bf:00:00:f6:9c:75:6a:cd:50:2d:6e:68:
          24:74:77:dc:29:dc:7e:35:b0:4a:02:f9:76:b0:7c:
          65:23
```

```

Exponent: 65537 (0x10001)
X509v3 extensions:
    X509v3 Basic Constraints: critical
        CA:TRUE
    X509v3 Key Usage: critical
        Certificate Sign, CRL Sign
    X509v3 Subject Key Identifier:
51:7A:5E:95:9D:0E:23:17:57:DF:13:63:D1:07:A6:05:07:B3:38:7F
Signature Algorithm: sha512WithRSAEncryption
    74:b4:16:bf:06:a9:69:8f:dc:8f:de:cf:5d:18:f8:ba:82:71:
    b4:8b:8c:22:b4:1e:66:55:d3:3f:a1:71:cc:7b:1a:bd:fd:5b:
    56:d7:c8:4c:4c:32:09:47:1c:7e:8a:f1:f6:f4:67:95:d6:88:
    7f:f5:ad:af:09:e8:5c:ca:46:54:93:71:38:b6:00:e8:b3:fa:
    cc:71:e7:cb:67:ac:8f:ec:22:01:3e:da:54:04:f8:77:3d:2c:
    78:80:a1:01:6e:d6:19:23:1a:f2:d0:8e:af:71:e3:1a:b0:a5:
    9b:fa:53:04:eb:92:2b:b0:b5:c2:51:d0:e0:85:b5:04:f7:24:
    5b:20:58:76:f8:e3:bc:a6:c4:15:2a:5a:ee:60:bb:eb:f5:96:
    ce:2d:9a:78:bd:5b:c5:68:a3:c7:5a:41:a4:48:43:5d:f6:8a:
    ee:9f:cf:e8:8c:48:b6:2a:9a:93:aa:ed:00:87:2b:12:92:b6:
    2f:1d:9b:70:43:57:98:a2:70:16:8e:0c:7d:ac:b2:9e:d0:99:
    2d:76:2f:20:f7:49:c9:ac:08:e2:cc:a6:4e:10:12:bd:c0:15:
    a3:e6:1c:6e:5d:96:8f:31:ab:19:92:42:70:e7:c0:3a:f7:cb:
    43:a0:c4:db:99:68:37:ca:69:e7:e0:35:52:7d:6c:ec:9e:0a:
    56:25:4b:09

Switch(config)#display pki rest_default host-certificate
Certificate:
Data:
    Version: 3 (0x2)
    Serial Number:
        95:22:0b:f1:2b:b8:96:69
    Signature Algorithm: sha256WithRSAEncryption
    Issuer: C=US, ST=California, L=Santa Clara, O=Lenovo Network
    Operating System CNOS, OU=Network Engineering, CN=0.0.0
    Validity
        Not Before: Mar 7 12:53:02 2017 GMT
        Not After : Mar 7 12:53:02 2018 GMT
    Subject: C=US, ST=California, L=Santa Clara, O=Lenovo Network
    Operating System CNOS, OU=Network Engineering, CN=0.0.0
    Subject Public Key Info:
        Public Key Algorithm: rsaEncryption
        Public-Key: (2048 bit)
        Modulus:
            00:e3:81:8f:dd:a2:d9:ef:9b:3e:50:4f:f6:79:e2:
            d2:07:06:3e:db:46:fd:05:7b:ea:84:f0:34:a1:b7:
            e7:4c:f0:3d:c3:b0:c0:82:1d:60:85:b5:ec:82:ea:
            e2:65:a3:a3:6b:27:f5:17:b1:fe:52:c1:ea:4c:40:
            55:0a:c0:2f:6f:4c:42:ef:74:72:ef:a4:5b:b2:4d:
            90:74:97:48:51:bd:d8:9b:56:2c:ee:e4:41:5e:4f:
            b9:0a:31:91:c6:08:94:cb:21:6e:d2:69:0d:db:12:
            56:2a:33:2c:1b:de:53:93:2d:f4:00:74:38:65:e3:
            f5:2d:09:f3:14:36:63:23:33:d8:9d:1b:d6:ba:4c:
            8f:0c:de:e7:3e:56:d4:4e:ab:3c:cc:27:a1:0f:15:
            e5:8c:a8:f0:cf:84:7c:3f:3d:23:19:71:25:7d:19:
            26:b6:79:47:a1:f6:6c:ee:91:2f:db:55:3e:17:7a:
            89:ab:43:6e:73:9b:bc:b7:54:b6:83:d7:a5:9a:5c:
            8f:d0:a6:d1:65:f0:d2:6a:70:25:ce:9b:9a:06:49:
            4e:5a:cd:d5:4c:96:1f:84:f1:b9:97:ea:a9:de:c5:
            26:80:ee:48:3b:aa:b8:4c:fd:bc:71:0e:96:40:64:
            38:20:da:0e:a4:42:a9:95:ae:43:de:14:2b:2a:4c:
            3e:a9

```

```
Exponent: 65537 (0x10001)
X509v3 extensions:
    X509v3 Subject Key Identifier:
        D5:FC:6B:30:CD:D9:7B:4D:57:30:80:6A:AD:96:E6:02:27:06:EF:DA
        X509v3 Authority Key Identifier:
            keyid:D5:FC:6B:30:CD:D9:7B:4D:57:30:80:6A:AD:96:E6:02:27:06:EF:DA
            X509v3 Basic Constraints:
                CA:FALSE
            Signature Algorithm: sha256WithRSAEncryption
                b1:e5:ad:cb:9c:c9:fe:7a:8f:2f:73:2a:eb:76:cc:9d:f2:41:
                16:b7:c6:5b:aa:84:30:37:b2:8c:f3:5a:71:2e:77:28:56:1c:
                42:76:6c:fa:8c:ef:53:4d:db:34:3d:1c:45:c1:80:64:1c:04:
                18:8e:79:8b:d7:92:55:13:89:ad:d4:d0:47:e0:d4:10:db:37:
                72:5d:a2:45:f8:7d:ed:fd:18:f7:04:c8:64:98:2d:c5:76:43:
                ef:1e:33:c8:05:63:10:cf:db:28:e5:8d:c1:6d:4b:2e:2a:54:
                df:c1:96:34:6f:3a:64:18:f3:97:7f:2a:58:6b:f2:8e:ee:10:
                da:48:1d:58:47:9d:5d:26:44:22:d6:10:ce:11:68:21:db:ea:
                e8:3f:1a:5c:d0:33:2b:92:23:f5:44:de:43:32:d6:b7:fc:ef:
                76:97:b7:65:b4:f2:f5:a9:d4:7e:1a:3d:fb:f3:ce:c0:2f:8a:
                fb:33:98:a4:5c:9a:44:9f:10:81:24:78:d5:36:7d:3c:b5:3c:
                da:2d:6c:7a:48:8b:a3:4c:0a:2b:99:1f:23:ef:1a:4e:3d:b7:
                ea:b2:41:dc:20:54:d2:06:6f:b9:10:7a:58:55:f3:ba:ba:72:
                23:f3:11:ec:32:11:71:4d:70:5a:2a:6c:07:c2:0d:75:25:aa:
                77:2d:f2:af
```

REST Server Limitations

The following limitations apply to the REST server:

- Authentication via RADIUS or TACACS+ is not supported.
- REST API calls can *only* be made by a “network-admin” user. Requests made by any other type of user will be rejected by the REST API server.
- The only MIME type supported is “application/json”. Any other values, including no MIME type, will be rejected.
- Each request from a client must contain all information necessary for the REST server to fulfill the request. Requests with partial information will be ignored.

Chapter 2. REST Server JSON Calls

This chapter contains the JavaScript Object Notation (JSON) calls you can make to the REST server on the switch.

- [“AAA” on page 33](#) - lists URIs and functions with regards to Authentication, Authorization and Accounting (AAA)
- [“ARP” on page 51](#) - lists URIs and functions with regards to Address Resolution Protocol (ARP)
- [“BGP” on page 65](#) - lists URIs and functions with regards to Border Gateway Protocol (BGP)
- [“CEE” on page 125](#) - lists URIs and functions with regards to Converged Enhanced Ethernet (CEE)
- [“DHCP” on page 165](#) - lists URIs and functions with regards to Dynamic Host Configuration Protocol (DHCP)
- [“DNS” on page 193](#) - lists URIs and functions with regards to Domain Name System (DNS)
- [“ECMP” on page 205](#) - lists URIs and functions with regards to Equal Cost Multiple Paths (ECMP)
- [“FDB” on page 215](#) - lists URIs and functions with regards to Forwarding Database (FDB)
- [“IGMP” on page 231](#) - lists URIs and functions with regards to Internet Group Management Protocol (IGMP)
- [“Interface” on page 245](#) - lists URIs and functions with regards to switch interfaces, such ethernet ports or loopback interfaces
- [“IP Interface” on page 257](#) - lists URIs and functions with regards to routed switch interfaces
- [“LACP” on page 261](#) - lists URIs and functions with regards to Link Aggregation Control Protocol (LACP)
- [“LAG” on page 265](#) - lists URIs and functions with regards to Link Aggregation Groups (LAGs)
- [“LDAP” on page 279](#) - lists URIs and functions with regards to Lightweight Directory Access Protocol (LDAP)
- [“LLDP” on page 303](#) - lists URIs and functions with regards to Link Layer Discovery Protocol (LLDP)
- [“MSTP” on page 313](#) - lists URIs and functions with regards to Multiple Spanning Tree Protocol (MSTP)
- [“NOS Copy” on page 323](#) - lists URIs and functions with regards to copying NOS images and configuration files
- [“NPA” on page 337](#) - lists URIs and functions with regards to Network Policy Agent (NPA)
- [“NTP” on page 367](#) - lists URIs and functions with regards to Network Time Protocol (NTP)

- “[OSPF](#)” on page 371 - lists URIs and functions with regards to Open Shortest Path First (OSPF)
- “[PKI](#)” on page 387 - lists URIs and functions with regards to Private Key Infrastructure (PKI)
- “[RADIUS](#)” on page 409 - lists URIs and functions with regards to Remote Authentication Dial-In User Service (RADIUS)
- “[Security Mode](#)” on page 425 - lists URIs and functions with regards to the switch security mode
- “[sFlow](#)” on page 429 - lists URIs and functions with regards to sampled flow (sFlow)
- “[SNMP](#)” on page 437 - lists URIs and functions with regards to Simple Network Management Protocol (SNMP)
- “[Startup Information](#)” on page 447 - lists URIs and functions with regards to startup information, such as the current startup image or Zero Touch Provisioning (ZTP) settings
- “[STP](#)” on page 453 - lists URIs and functions with regards to Spanning Tree Protocol (STP)
- “[System](#)” on page 465 - lists URIs and functions with regards to system properties
- “[System Configuration](#)” on page 467 - lists URIs and functions with regards to system configuration, such as hostname or switch clock settings
- “[System Information](#)” on page 485 - lists URIs and functions with regards to system information, such as the status of system resources
- “[Telemetry](#)” on page 497 - lists URIs and functions with regards to telemetry information and configuration
- “[TACACS+](#)” on page 531 - lists URIs and functions with regards to Terminal Access Controller Access-Control System Plus (TACACS+)
- “[vLAG](#)” on page 545 - lists URIs and functions with regards to Virtual Link Aggregation Group (vLAG)
- “[VLAN](#)” on page 561 - lists URIs and functions with regards to virtual LANs
- “[VLAN Interface Properties](#)” on page 583 - lists URIs and functions with regards to Switch Virtual Interfaces (SVIs)
- “[VRF](#)” on page 591 - lists URIs and functions with regards to Virtual Routing and Forwarding (VRF)
- “[VRRP](#)” on page 595 - lists URIs and functions with regards to Virtual Router Redundancy Protocol (VRRP)

AAA

The following Authentication, Authorization and Accounting (AAA) URIs are available:

- /nos/api/cfg/aaa/accounting/default GET, PUT
- /nos/api/cfg/aaa/authorization/commands/default GET, PUT
- /nos/api/cfg/aaa/authorization/config-commands/default GET, PUT
- /nos/api/cfg/aaa/authentication/login/console GET, PUT
- /nos/api/cfg/aaa/authentication/login/default GET, PUT
- /nos/api/cfg/aaa/authentication/login/error-enable GET, PUT
- /nos/api/cfg/aaa/local/authentication/ GET, PUT
- /nos/api/cfg/aaa/user/default-role GET, PUT
- /nos/api/info/aaa/groups GET

The following AAA commands are available:

- [Get AAA Accounting Configuration](#)
- [Update AAA Accounting Configuration](#)
- [Get AAA User EXEC Commands Authorization Setting](#)
- [Update AAA User EXEC Commands Authorization Settings](#)
- [Get AAA Configuration Commands Authorization Settings](#)
- [Update AAA Configuration Commands Authorization Settings](#)
- [Get AAA Console User Login Authentication Configuration](#)
- [Update AAA Console User Login Authentication Configuration](#)
- [Get AAA Remote User Login Authentication Configuration](#)
- [Update AAA Remote User Login Authentication Configuration](#)
- [Get AAA Authentication Login Error Message Status](#)
- [Update AAA Authentication Login Error Message Status](#)
- [Get AAA Local Authentication Configuration](#)
- [Update AAA Local Authentication Configuration](#)
- [Get AAA User Default Role Status](#)
- [Update AAA User Default Role Status](#)
- [Get AAA Groups](#)

Get AAA Accounting Configuration

This command returns the AAA accounting configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/aaa/accounting/default
Request Body (JSON)	

Response

Response Body (JSON)	{ "methods": "[group <i>{group_name}</i> +] [local]" }
----------------------	--

where:

Element	Description
methods	The AAA accounting methods. Valid values: <ul style="list-style-type: none">• group - followed by a list of maximum 8 AAA groups (optionally followed by local)• local

Update AAA Accounting Configuration

This command updates the AAA accounting configuration.

Request

Method Type	PUT
Request URI	/nos/api/cfg/aaa/accounting/default
Request Body (JSON)	{ "methods": "[group <i>{group_name}</i> +] [local]" }

where:

Element	Description
methods	The AAA accounting methods. Valid values: <ul style="list-style-type: none">● group - followed by a list of maximum 8 AAA groups (optionally followed by local)● local

Response

Response Body (JSON)	{ "methods": "[group <i>{group_name}</i> +] [local]" }
----------------------	--

where:

Element	Description
methods	The AAA accounting methods. Valid values: <ul style="list-style-type: none">● group - followed by a list of maximum 8 AAA groups (optionally followed by local)● local

Get AAA User EXEC Commands Authorization Setting

This command returns the current User EXEC command mode authorization settings.

Request

Method Type	GET
Request URI	/nos/api/cfg/aaa/authorization/commands/default
Request Body (JSON)	

Response

Response Body (JSON)	{ "methods": "[group {group_name}+] [local]" }
----------------------	--

where:

Element	Description
methods	The AAA accounting methods. Valid values: <ul style="list-style-type: none">• group - followed by a list of maximum 8 AAA groups (optionally followed by local)• local

Update AAA User EXEC Commands Authorization Settings

This command updates the AAA User EXEC command mode authorization settings.

Request

Method Type	PUT
Request URI	/nos/api/cfg/aaa/authorization/commands/default
Request Body (JSON)	{ "methods": "[group {group_name}+] [local]" }

where:

Element	Description
methods	The AAA accounting methods. Valid values: <ul style="list-style-type: none">● group - followed by a list of maximum 8 AAA groups (optionally followed by local)● local

Response

Response Body (JSON)	{ "methods": "[group {group_name}+] [local]" }
----------------------	--

where:

Element	Description
methods	The AAA accounting methods. Valid values: <ul style="list-style-type: none">● group - followed by a list of maximum 8 AAA groups (optionally followed by local)● local

Get AAA Configuration Commands Authorization Settings

This command returns the current configuration command mode authorization settings.

Request

Method Type	GET
Request URI	/nos/api/cfg/aaa/authorization/config-commands/default
Request Body (JSON)	

Response

Response Body (JSON)	{ "methods": "[group {group_name}+] [local]" }
----------------------	--

where:

Element	Description
methods	The AAA accounting methods. Valid values: <ul style="list-style-type: none">• group - followed by a list of maximum 8 AAA groups (optionally followed by local)• local

Update AAA Configuration Commands Authorization Settings

This command updates the AAA User EXEC command mode authorization settings.

Request

Method Type	PUT
Request URI	/nos/api/cfg/aaa/authorization/config-commands/default
Request Body (JSON)	{ "methods": "[group {group_name}+] [local]" }

where:

Element	Description
methods	The AAA accounting methods. Valid values: <ul style="list-style-type: none">● group - followed by a list of maximum 8 AAA groups (optionally followed by local)● local

Response

Response Body (JSON)	{ "methods": "[group {group_name}+] [local]" }
----------------------	--

where:

Element	Description
methods	The AAA accounting methods. Valid values: <ul style="list-style-type: none">● group - followed by a list of maximum 8 AAA groups (optionally followed by local)● local

Get AAA Console User Login Authentication Configuration

This command returns the current console user login authentication configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/aaa/authentication/login/console
Request Body (JSON)	

Response

Response Body (JSON)	{ "methods": "[group <i>{group_name}</i> +] [local] [none]" }
----------------------	---

where:

Element	Description
methods	The AAA accounting methods. Valid values: <ul style="list-style-type: none">● group - followed by a list of maximum 8 AAA groups (optionally followed by local)● local● none

Update AAA Console User Login Authentication Configuration

This command updates the console user login authentication configuration.

Request

Method Type	PUT
Request URI	/nos/api/cfg/aaa/authentication/login/console
Request Body (JSON)	{ "methods": "[group {group_name}+] [local] [none]" }

where:

Element	Description
methods	The AAA accounting methods. Valid values: <ul style="list-style-type: none">● group - followed by a list of maximum 8 AAA groups (optionally followed by local)● local● none

Response

Response Body (JSON)	{ "methods": "[group {group_name}+] [local] [none]" }
----------------------	---

where:

Element	Description
methods	The AAA accounting methods. Valid values: <ul style="list-style-type: none">● group - followed by a list of maximum 8 AAA groups (optionally followed by local)● local● none

Get AAA Remote User Login Authentication Configuration

This command returns the current remote user login authentication configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/aaa/authentication/login/default
Request Body (JSON)	

Response

Response Body (JSON)	{ "methods": "[group <i>{group_name}</i> +] [local] [none]" }
----------------------	---

where:

Element	Description
methods	The AAA accounting methods. Valid values: <ul style="list-style-type: none">● group - followed by a list of maximum 8 AAA groups (optionally followed by local)● local● none

Update AAA Remote User Login Authentication Configuration

This command updates the remote user login authentication configuration.

Request

Method Type	PUT
Request URI	/nos/api/cfg/aaa/authentication/login/default
Request Body (JSON)	{ "methods": "[group {group_name}+] [local] [none]" }

where:

Element	Description
methods	The AAA accounting methods. Valid values: <ul style="list-style-type: none">● group - followed by a list of maximum 8 AAA groups (optionally followed by local)● local● none

Response

Response Body (JSON)	{ "methods": "[group {group_name}+] [local] [none]" }
----------------------	---

where:

Element	Description
methods	The AAA accounting methods. Valid values: <ul style="list-style-type: none">● group - followed by a list of maximum 8 AAA groups (optionally followed by local)● local● none

Get AAA Authentication Login Error Message Status

This command checks if error messages are displayed when users fail to authenticate.

Request

Method Type	GET
Request URI	/nos/api/cfg/aaa/authentication/login/error-enable
Request Body (JSON)	

Response

Response Body (JSON)	{ "status": "{enable disable}" }
----------------------	--

where:

Element	Description
status	The status of authentication login error messages. Valid values: <ul style="list-style-type: none">• <i>enable</i>• <i>disable</i>

Update AAA Authentication Login Error Message Status

This command updates the status of authentication login error messages.

Request

Method Type	PUT
Request URI	/nos/api/cfg/aaa/authentication/login/error-enable
Request Body (JSON)	{ "status": "{enable disable}" }

where:

Element	Description
status	The status of authentication login error messages. Valid values: <ul style="list-style-type: none">● <i>enable</i>● <i>disable</i>

Response

Response Body (JSON)	{ "status": "{enable disable}" }
----------------------	--

where:

Element	Description
status	The status of authentication login error messages. Valid values: <ul style="list-style-type: none">● <i>enable</i>● <i>disable</i>

Get AAA Local Authentication Configuration

This command returns the AAA local authentication configuration, such as the maximum number of unsuccessful authentication attempts before a user is locked out.

Request

Method Type	GET
Request URI	/nos/api/cfg/aaa//local/authentication
Request Body (JSON)	

Response

Response Body (JSON)	{ "maxfail_attempts": { <i>maxfail_attempts</i> } }
----------------------	---

where:

Element	Description
<code>maxfail_attempts</code>	The maximum number of unsuccessful authentication attempts before a user is locked out. Valid value: <ul style="list-style-type: none">• 1-25 Default value: <ul style="list-style-type: none">• 3

Update AAA Local Authentication Configuration

This command updates the AAA local authentication configuration, such as the maximum number of unsuccessful authentication attempts before a user is locked out.

Request

Method Type	PUT
Request URI	/nos/api/cfg/aaa/local/authentication
Request Body (JSON)	

where:

Element	Description
maxfail_attempts	The maximum number of unsuccessful authentication attempts before a user is locked out. Valid value: <ul style="list-style-type: none">● 1-25 Default value: <ul style="list-style-type: none">● 3

Response

Response Body (JSON)	{ "maxfail_attempts":{ <i>maxfail_attempts</i> } }
----------------------	--

where:

Element	Description
maxfail_attempts	The maximum number of unsuccessful authentication attempts before a user is locked out. Valid value: <ul style="list-style-type: none">● 1-25 Default value: <ul style="list-style-type: none">● 3

Get AAA User Default Role Status

This command checks if users are allowed to login even if the TACACS+ server does not provide a default role. The default role is network-operator.

Request

Method Type	GET
Request URI	/nos/api/cfg/aaa/user/default-role
Request Body (JSON)	

Response

Response Body (JSON)	{ "status": "{enable disable}" }
----------------------	--

where:

Element	Description
status	The status of allowing users to login even if the TACACS+ server does not provide a role. Valid values: <ul style="list-style-type: none">• <i>enable</i>• <i>disable</i>

Update AAA User Default Role Status

This command updates the status of allowing users to login even if the TACACS+ server does not provide a role. The default role is network-operator.

Request

Method Type	PUT
Request URI	/nos/api/cfg/aaa/user/default-role
Request Body (JSON)	{ "status": "{enable disable}" }

where:

Element	Description
status	The status of allowing users to login even if the TACACS+ server does not provide a role. Valid values: <ul style="list-style-type: none">● <i>enable</i>● <i>disable</i>

Response

Response Body (JSON)	{ "status": "{enable disable}" }
----------------------	--

where:

Element	Description
status	The status of allowing users to login even if the TACACS+ server does not provide a role. Valid values: <ul style="list-style-type: none">● <i>enable</i>● <i>disable</i>

Get AAA Groups

This command returns AAA group information.

Request

Method Type	GET
Request URI	/nos/api/info/aaa/groups
Request Body (JSON)	

Response

Response Body (JSON)	[{ "group_name": "{group_name}", "type": "TACACS+" }]
----------------------	--

where:

Element	Description
group_name	The name of the AAA group. Valid value: <ul style="list-style-type: none">• <i>string representing the name of the group</i>
type	The type of the AAA group. Valid value: <ul style="list-style-type: none">• TACACS+

Note: Currently, the only supported AAA group type is TACACS+.

ARP

The following ARP URIs are available:

- /nos/api/cfg/arp GET, PUT
- /nos/api/cfg/arp_interface GET
- /nos/api/cfg/arp_interface/<if_name> GET, PUT
- /nos/api/cfg/arp_entry GET
- /nos/api/cfg/arp_entry/<if_name> GET, POST
- /nos/api/cfg/arp_entry/<if_name>/<ip_addr> GET, PUT, DELETE
- /nos/api/cfg/arp_refresh GET, PUT

The following ARP commands are available:

- [Get ARP System Properties](#)
- [Update ARP System Properties](#)
- [Get ARP Properties of All Interfaces](#)
- [Get ARP Interface Properties](#)
- [Update ARP Interface Properties](#)
- [Get Static ARP Entries of All Interfaces](#)
- [Get Static ARP Entries of One Interface](#)
- [Create Static ARP Entry](#)
- [Get Static ARP Entry](#)
- [Update Static ARP Entry](#)
- [Delete Static ARP Entry](#)
- [Get ARP Refresh Configuration](#)
- [Update ARP Refresh Configuration](#)

Get ARP System Properties

Get global ARP properties of the system.

Request

Method Type	GET
Request URI	/nos/api/cfg/arp
Request Body (JSON)	

Response

Response Body (JSON)	{ "ageout_time": "<ageout_time>" }
-------------------------	--

where:

Element	Description
<i>ageout_time</i>	The global ARP entry age-out time, in seconds; an integer from 60-28800. Default value: 1500 seconds.

Update ARP System Properties

Update the global ARP properties of the system.

Request

Method Type	PUT
Request URI	/nos/api/cfg/arp
Request Body (JSON)	{ "ageout_time": "<ageout_time>" }

where:

Element	Description
<i>ageout_time</i>	The global ARP entry age-out time, in seconds; an integer from 60-28800. Default value: 1500 seconds.

Response

Response Body (JSON)	{ "ageout_time": "<ageout_time>" }
-------------------------	--

Get ARP Properties of All Interfaces

Get ARP properties of all interfaces.

Request

Method Type	GET
Request URI	/nos/api/cfg/arp_interface
Request Body (JSON)	

Response

Response Body (JSON)	[{ "if_name": "<if_name>", "ageout_time": "<ageout_time>" }]
-------------------------	---

where:

Element	Description
<i>if_name</i>	IP interface name (String). Note: The interface must exist.
<i>ageout_time</i>	The global ARP entry age-out time, in seconds; an integer from 60-28800. Default value: 1500 seconds.

Get ARP Interface Properties

Get ARP properties of one interface.

Request

Method Type	GET
Request URI	/nos/api/cfg/arp_interface/<if_name>
Request Body (JSON)	

Response

Response Body (JSON)	[{ "if_name": "<if_name>", "ageout_time": "<ageout_time>" }]
-------------------------	---

where:

Element	Description
<i>if_name</i>	IP interface name (String). Note: The interface must exist.
<i>ageout_time</i>	The global ARP entry age-out time, in seconds; an integer from 60-28800. Default value: 1500 seconds.

Update ARP Interface Properties

Update the ARP properties of one interface.

Request

Method Type	PUT
Request URI	/nos/api/cfg/arp_interface/<if_name>
Request Body (JSON)	

where:

Element	Description
<i>if_name</i>	The IP interface name (String). Note: The interface must exist.
<i>ageout_time</i>	The global ARP entry age-out time, in seconds; an integer from 60-28800. Default value: 1500 seconds.

Response

Response Body (JSON)	[{ "if_name": "<if_name>", "ageout_time": "<ageout_time>" }]
-------------------------	---

where:

Element	Description
<i>if_name</i>	The IP interface name (String).
<i>ageout_time</i>	The global ARP entry age-out time, in seconds; an integer from 60-28800. Default value: 1500 seconds.

Get Static ARP Entries of All Interfaces

Get all static ARP entries of all interfaces.

Request

Method Type	GET
Request URI	/nos/api/cfg/arp_entry
Request Body (JSON)	

Response

Response Body (JSON)	[{ "if_name": "<if_name>", "ip_addr": "<ip_addr>", "mac_addr": "<mac_addr>" }]
-------------------------	--

where:

Element	Description
<i>if_name</i>	Interface name. Note: The interface must exist.
<i>ip_addr</i>	The IP address.
<i>mac_addr</i>	The MAC address (in xxxx.xxxx.xxxx format).

Get Static ARP Entries of One Interface

Get all static ARP entries under the specified interface.

Request

Method Type	GET
Request URI	/nos/api/cfg/arp_entry/<if_name>
Request Body (JSON)	

Response

Response Body (JSON)	[{ "if_name": "<if_name>", "ip_addr": "<ip_addr>", "mac_addr": "<mac_addr>" }]
-------------------------	--

where:

Element	Description
<i>if_name</i>	Interface name. Note: The interface must exist.
<i>ip_addr</i>	The IP address.
<i>mac_addr</i>	The MAC address (in xxxx.xxxx.xxxx format).

Create Static ARP Entry

Create a static ARP entry under the specified interface.

Request

Method Type	POST
Request URI	/nos/api/cfg/arp_entry/<if_name>
Request Body (JSON)	{ "if_name": "<if_name>", "ip_addr": "<ip_addr>", "mac_addr": "<mac_addr>" }

where:

Element	Description
<i>if_name</i>	Interface name. Note: The interface must exist.
<i>ip_addr</i>	The IP address.
<i>mac_addr</i>	The MAC address (in xxxx.xxxx.xxxx format).

Response

Response Body (JSON)	[{ "if_name": "<if_name>", "ip_addr": "<ip_addr>", "mac_addr": "<mac_addr>" }]
-------------------------	--

Get Static ARP Entry

Get one static ARP entry under the specified interface.

Request

Method Type	GET
Request URI	/nos/api/cfg/arp_entry/<if_name>/<ip_addr>
Request Body (JSON)	

Response

Response Body (JSON)	{ "if_name": "<if_name>", "ip_addr": "<ip_addr>", "mac_addr": "<mac_addr>" }
-------------------------	--

where:

Element	Description
<i>if_name</i>	Interface name. Note: The interface must exist.
<i>ip_addr</i>	The IP address.
<i>mac_addr</i>	The MAC address (in xxxx.xxxx.xxxx format).

Update Static ARP Entry

Update properties of one static ARP entry under the specified interface.

Request

Method Type	PUT
Request URI	/nos/api/cfg/arp_entry/<if_name>/<ip_addr>
Request Body (JSON)	{ "if_name": "<if_name>", "ip_addr": "<ip_addr>", "mac_addr": "<mac_addr>" }

where:

Element	Description
<i>if_name</i>	Interface name. Note: The interface must exist.
<i>ip_addr</i>	The IP address.
<i>mac_addr</i>	The MAC address (in xxxx.xxxx.xxxx format).

Response

Response Body (JSON)	{ "if_name": "<if_name>", "ip_addr": "<ip_addr>", "mac_addr": "<mac_addr>" }
-------------------------	--

Delete Static ARP Entry

Delete a static ARP entry under the specified interface.

Note: If the specified *ip_addr* is all, all static ARP entries under specified interface will be deleted.

Request

Method Type	DELETE
Request URI	/nos/api/cfg/arp_entry/<if_name>/<ip_addr>
Request Body (JSON)	

Get ARP Refresh Configuration

This command returns the ARP refresh configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/arp_refresh
Request Body (JSON)	

Response

Response Body (JSON)	{ "state": "{enabled disabled}" }
----------------------	---

where:

Element	Description
state	The status of ARP refresh on the switch. Valid value: <ul style="list-style-type: none">• <i>enabled</i>• <i>disabled</i>

Update ARP Refresh Configuration

This command updates the ARP refresh configuration.

Request

Method Type	PUT
Request URI	/nos/api/cfg/arp_refresh
Request Body (JSON)	{ "state": "{enabled disabled}" }

where:

Element	Description
state	The status of ARP refresh on the switch. Valid value: <ul style="list-style-type: none">• <i>enabled</i>• <i>disabled</i>

Response

Response Body (JSON)	{ "state": "{enabled disabled}" }
----------------------	---

where:

Element	Description
state	The status of ARP refresh on the switch. Valid value: <ul style="list-style-type: none">• <i>enabled</i>• <i>disabled</i>

BGP

The following BGP URIs are available:

- /nos/api/cfg/bgp/global/stats GET, DELETE
- /nos/api/info/bgp/neighbor/adj_rib_in GET
- /nos/api/info/bgp/neighbor/adj_rib_out GET
- /nos/api/cfg/bgp/global GET
- /nos/api/cfg/bgp/bestpath GET
- /nos/api/cfg/bgp/confed GET
- /nos/api/cfg/bgp/graceful-restart GET
- /nos/api/cfg/bgp/route-reflector/<vrf_name>/ GET
- /nos/api/info/bgp/global/rib GET
- /nos/api/info/bgp/global/rib/network GET
- /nos/api/info/bgp/neighbor/summary GET
- /nos/api/info/bgp/neighbor/details/ GET
- /nos/api/info/bgp/neighbor/stats GET
- /nos/api/cfg/bgp/distance/<af_name>/<saf_name>/<vrf_name> GET
- /nos/api/cfg/bgp/af GET
- /nos/api/cfg/bgp/af/maximum_paths GET
- /nos/api/cfg/bgp/af/nht_delay GET
- /nos/api/cfg/bgp/af/aggregate GET
- /nos/api/cfg/bgp/af/dampening GET
- /nos/api/info/bgp/dampening/dampened_path GET
- /nos/api/cfg/bgp/af/network GET
- /nos/api/cfg/bgp/af/redistribute GET
- /nos/api/cfg/bgp/neighbor/details GET
- /nos/api/cfg/bgp/unnumbered PUT
- /nos/api/cfg/interface/bgp_unnumbered/<if_name> PUT

The following BGP interface property commands are available:

- [Get BGP Global Statistics](#)
- [Clear BGP Global Statistics](#)
- [Get BGP Neighbor Received RIB Information](#)
- [Get BGP Neighbor RIB Advertised Information](#)
- [Get BGP Global Configuration](#)

- Get BGP Best Path Configuration
- Get BGP Confederation Configuration
- Get BGP Graceful-Restart Configuration
- Get BGP Route Reflector Information
- Get BGP RIB Information
- Get BGP Detailed RIB Information
- Get BGP Summary Information
- Get BGP Neighbor Details
- Get BGP Neighbor Statistics
- Get BGP Distance Configuration
- Get BGP Address Family Global Configuration
- Get BGP Multipath ECMP Numbers Configuration
- Get BGP Nexthop Trigger-Delay Configuration
- Get BGP Aggregate Configuration
- Get BGP Dampening Parameters Configuration
- Get BGP Dampened Path Configuration
- Get BGP Network Configuration
- Get BGP Redistribute Configuration
- Get BGP Neighbor Configuration
- Update BGP Neighbor Configuration
- Update Global BGP Unnumbered Configuration
- Update BGP Unnumbered Interface Configuration

Get BGP Global Statistics

Get global BGP statistics.

Request

Method Type	GET
Request URI	/nos/api/cfg/bgp/stats/<vrf_name>
Request Body (JSON)	

where:

Element	Description
vrf_name	Virtual Routing and Forwarding name; one of the VRF name, "default," "all". Default value: default.

Response

Response Body (JSON)	[{ "vrf_name": "<vrf_name>", "stats": { "in_msgs": "<in_msgs>", "out_msgs": "<sent_msg>", "bytes_in": "<bytes_in>", "bytes_out": "<bytes_out>", "open_in": "<open_in>", "open_out": "<open_out>", "update_in": "<update_in>", "update_out": "<update_out>", "keepalive_in": "<keepalive_in>", "keepalive_out": "<keepalive_out>", "notify_in": "<notify_in>", "notify_out": "<notify_out>", "refresh_in": "<refresh_in>", "refresh_out": "<refresh_out>", "dynamic_cap_in": "<dynamic_cap_in>", "dynamic_cap_out": "<dynamic_cap_out>" } }]
-------------------------	---

where:

Element	Description
vrf_name	VRF name (string).
in_msgs	Received message number; a positive integer.
out_msgs	Send message number; a positive integer.

Element	Description
<i>bytes_in</i>	Bytes received; a positive integer.
<i>bytes_out</i>	Bytes sent; a positive integer.
<i>open_in</i>	Open message input count; a positive integer.
<i>open_out</i>	Open message output count; a positive integer.
<i>update_in</i>	Update message input count; a positive integer.
<i>update_out</i>	Update message ouput count; a positive integer.
<i>keepalive_in</i>	Keepalive input count; a positive integer.
<i>keepalive_out</i>	Keepalive output count; a positive integer.
<i>notify_in</i>	Notify input count; a positive integer.
<i>notify_out</i>	Notify output count; a positive integer.
<i>refresh_in</i>	Route Refresh input count; a positive integer.
<i>refresh_out</i>	Route Refresh output count; a positive integer.
<i>dynamic_cap_in</i>	Dynamic Capability input count.; a positive integer.
<i>dynamic_cap_out</i>	Dynamic Capability output count; a positive integer.

Clear BGP Global Statistics

Clear global BGP statistics.

Request

Method Type	DELETE
Request URI	/nos/api/cfg/bgp/stats/<vrf_name>
Request Body (JSON)	

where:

Element	Description
vrf_name	Virtual Routing and Forwarding name; one of the VRF name, "default," "all". Default value: default.

Response

Response Body (JSON)	
-------------------------	--

Get BGP Neighbor Received RIB Information

Get the BGP neighbor received Routing Information Base information.

Request

Method Type	GET
Request URI	/nos/api/info/bgp/neighbor/adj_rib_in/<neighbor_ip>/<af_name>/<vrf_name>/<subaf_name>
Request Body (JSON)	

where:

Element	Description
<i>neighbor_ip</i>	Neighbor IP address; a valid IPv4 or IPv6 address.
<i>vrf_name</i>	(Optional) Address family name; one of <code>ipv4</code> or <code>ipv6</code> . Default value: <code>ipv4</code> .
<i>af_name</i>	(Optional) VRF name; one of the VRF name, <code>default</code> , <code>all</code> . Default value: <code>default</code> .
<i>subaf_name</i>	(Optional) Subaddress family name; one of <code>unicast</code> , <code>multicast</code> . Default value: <code>unicast</code> .

Response

Response Body (JSON)	<pre>[{ "routes": [{ "origin": "<origin>", "network": "<network>", "mask_len": "<mask_len>", "weight": "<attr_weight>", "Metric": "<metric>", "nexthop": "<nexthop>", "aspath4B": "<aspath4B>", "status": "<flag>", "local_pref": "<local_pref>", "aspath": "<aspath>", }] }]</pre>
-------------------------	---

where:

Element	Description
<i>origin</i>	Route origin attribute; one of: <ul style="list-style-type: none"> ● i - IGP ● e - EGP ● ? - incomplete
<i>network</i>	Route destination IP address; a valid IPv4 or IPv6 address.
<i>mask_len</i>	Route mask length; an integer from 0-32.
<i>weight</i>	Route weight attribute; an integer from 0-65535.
<i>metric</i>	Route Multi-Exit Discriminator attribute; an integer from 0~4294967295.
<i>nexthop</i>	Route next hop; a valid IP address.
<i>aspath4B</i>	Route 4B AS path; an AS path VTY string.
<i>status</i>	Router status; one of: <ul style="list-style-type: none"> ● s - suppressed ● d - damped ● h - history ● * - valid ● > - best ● i - internal
<i>local_pref</i>	Route local preference attribute; an integer from 0-4294967295.
<i>aspath</i>	Route AS path attribute; an AS path VTY string.

Get BGP Neighbor RIB Advertised Information

Get information about the advertised BGP neighbor Routing Information Base.

Request

Method Type	GET
Request URI	/nos/api/info/bgp/neighbor/adj_rib_out/<neighbor>/<af_name>/<vrf_name>/<subaf_name>
Request Body (JSON)	

where:

Element	Description
<i>neighbor</i>	Neighbor IP address; a valid IPv4 or IPv6 address.
<i>af_name</i>	(Optional) Address family name; one of <code>ipv4</code> or <code>ipv6</code> . Default value: <code>ipv4</code> .
<i>vrf_name</i>	(Optional) VRF name; one of the VRF name, <code>default</code> , <code>all</code> . Default value: <code>default</code> .
<i>subaf_name</i>	(Optional) Subaddress family name; one of <code>unicast</code> , <code>multicast</code> . Default value: <code>unicast</code> .

Response

Response Body (JSON)	<pre>[{ "routes": [{ "origin": "<origin>", "network": "<prefix_addr>", "mask_len": "<mask_len>", "weight": "<weight>", "Metric": "<metric>", "nexthop": "<nexthop>", "aspath4B": "<aspath4B>", "status": "<status>", "local_pref": "<local_pref>", "aspath": "<aspath>", }] }]</pre>
----------------------	--

where:

Element	Description
<i>origin</i>	Route origin attribute; one of: <ul style="list-style-type: none"> ● i - IGP ● e - EGP ● ? - incomplete
<i>network</i>	Route destination IP address; a valid IPv4 or IPv6 address.
<i>mask_len</i>	Route mask length; an integer from 0-32.
<i>weight</i>	Route weight attribute; an integer from 0-65535.
<i>metric</i>	Route med attribute; an integer from 0-4294967295.
<i>nexthop</i>	Route nexthop address; a valid IPv4 or IPv6 address.
<i>aspath4B</i>	Route 4B AS path; an AS path VTY string.
<i>status</i>	Router status; one of: <ul style="list-style-type: none"> ● s - suppressed ● d - damped ● h - history ● * - valid ● > - best ● i - internal
<i>local_pref</i>	Route local preference attribute; an integer from 0-4294967295.
<i>aspath</i>	Route AS path attribute; a valid AS path VTY string.

Get BGP Global Configuration

Get the BGP global configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/bgp/global/<vrf_name>/
Request Body (JSON)	

where:

Element	Description
<i>vrf_name</i>	VRF name; one of the VRF name, default, all. Default value: default.

Response

Response Body (JSON)	[{ "vrf_name": "<vrf_name>", "status": "<status>", "router_id": "<router_id>", "as_number": "<as_number>", "keep-alive timer": "<keep-alive timer>", "hold-down timer": "<hold-down timer>", "as-local-count": "<as-local-count>", "enforce-first-as": "<enforce-first-as>", "fast-external-failover": "<fast-external-failover>", "log-neighbor-changes": "<log-neighbor-changes>", "maxas-limit": "<maxas-limit>", "synchronization": "<synchronization>" }]
-------------------------	---

where:

Element	Description
<i>vrf_name</i>	VRF name; one of the VRF name, default, all. Default value: default.
<i>status</i>	BGP global status; one of disable, enable.
<i>router_id</i>	BGP router ID; a valid IPv4 or IPv6 address.
<i>as_number</i>	BGP AS number; an integer from 1-4294967295.
<i>keep-alive timer</i>	Keep alive interval, in seconds; an integer from 0-3600.

Element	Description
<i>hold-down timer</i>	Hold time, in seconds; an integer from 0-3600.
<i>as-local-count</i>	Number of times the local AS is to be prepended; an integer from 1-64.
<i>enforce-first-as</i>	Enforce the first AS for EBGP routes; one of enable , disable .
<i>fast-external-failover</i>	Immediately reset session if a link to a directly connected external peer goes down; one of enable , disable .
<i>log-neighbor-changes</i>	Log reasons for neighbor going up, down, and resetting; one of enable , disable .
<i>maxas-limit</i>	Allow the AS-PATH attribute from EBGP neighbor to impose a limit on the number of ASes; an integer from 0-2000.
<i>synchronization</i>	Perform IGP synchronization; one of enable , disable .

Get BGP Best Path Configuration

Get the BGP best path configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/bgp/bestpath/<vrf_name>/
Request Body (JSON)	

where:

Element	Description
vrf_name	VRF name; one of the VRF name, default, all. Default value: default.

Response

Response Body (JSON)	[{ "vrf_name": "<vrf_name>", "always-compare-med": "<always-compare-med>", "as-path-ignore": "<as-path-ignore>", "as-path-multipath-relax": "<as-path-multipath-relax>", "compare-confed-aspauth": "<compare-confed-aspauth>", "compare-routerid": "<compare-routerid>", "dont-compare-originator-id": "<dont-compare-originator-id>", "med-confed": "<med-confed>", "med-missing-as-worst": "<med-missing-as-worst>", "med-non-deterministic": "<med-non-deterministic>", "med-remove-recv-med": "<med-remove-recv-med>", "med-remove-send-med": "<med-remove-send-med>", "tie-break-on-age": "<tie-break-on-age>" }]
-------------------------	--

where:

Element	Description
vrf_name	VRF name; one of the VRF name, default, all. Default value: default.
always-compare-med	Allow comparing MED from different neighbors; one of enable, disable.
as-path-ignore	Ignore as-path length in selecting a route; one of enable, disable.

Element	Description
<i>as-path multipath-relax</i>	Relax AS-Path restriction when choosing multipaths; one of enable , disable .
<i>compare-confed-aspAth</i>	Allow comparing confederation AS path length; one of enable , disable .
<i>compare-routerid</i>	Compare router IDs for identical EBGP paths; one of enable , disable .
<i>don't-compare-originator-id</i>	Don't compare originator IDs for BGP; one of enable , disable .
<i>med-confed</i>	Compare MED among confederation paths; one of enable , disable .
<i>med-missing-as-worst</i>	Treat missing MED as the least preferred one; one of enable , disable .
<i>med-non-deterministic</i>	Best MED path among paths not selected from same AS; one of enable , disable .
<i>med-remove-recv-med</i>	Whether to remove received MED attribute; one of enable , disable .
<i>med-remove-send-med</i>	Whether to remove send MED attribute; one of enable , disable .
<i>tie-break-on-age</i>	Whether to prefer the old route when compare-route-id is not set; one of enable , disable .

Get BGP Confederation Configuration

Get the BGP confederation configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/bgp/confed/<vrf_name>/
Request Body (JSON)	

where:

Element	Description
<i>vrf_name</i>	VRF name; one of the VRF name, default, all. Default value: default.

Response

Response Body (JSON)	[{ "vrf_name": "<vrf_name>", "identifier": "<identifier>", "peers": "<peers>", }]
-------------------------	---

where:

Element	Description
<i>vrf_name</i>	VRF name; one of the VRF name, default, all. Default value: default.
<i>identifier</i>	Routing domain confederation AS; an integer from 0-65535.
<i>peers</i>	Peer ASes in BGP confederation; an integer from 1-65535.

Get BGP Graceful-Restart Configuration

Get the BGP graceful-restart configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/bgp/graceful-restart/<vrf_name>/
Request Body (JSON)	

where:

Element	Description
<i>vrf_name</i>	VRF name; one of the VRF name, default, all. Default value: default.

Response

Response Body (JSON)	[{ "vrf_name": "<vrf_name>", "stalepath-time": "<stalepath-time>", "helper-status": "<helper-status>", }]
-------------------------	---

where:

Element	Description
<i>vrf_name</i>	VRF name; one of the VRF name, default, all. Default value: default.
<i>stalepath-time</i>	The delay value, in seconds, to remove routes marked as stale; an integer from 1-3600.
<i>helper-status</i>	Status of Graceful Restart Helper Mode functionality; one of enabled, disabled.

Get BGP Route Reflector Information

Get BGP route reflector information.

Request

Method Type	GET
Request URI	/nos/api/cfg/bgp/rr/<vrf_name>/
Request Body (JSON)	

where:

Element	Description
<i>vrf_name</i>	VRF name; one of the VRF name, default, all. Default value: default.

Response

Response Body (JSON)	[{ "vrf_name": "<vrf_name>", "cluster-id": "<cluster-id>" }]
-------------------------	---

where:

Element	Description
<i>vrf_name</i>	VRF name; one of the VRF name, default, all. Default value: default.
<i>cluster-id</i>	Route reflector cluster ID; a valid IP address.

Get BGP RIB Information

Get BGP Routing Information Base Information.

Request

Method Type	GET
Request URI	/nos/api/info/bgp/global/rib/<af_name>/<vrf_name>/
Request Body (JSON)	

where:

Element	Description
<i>af_name</i>	(Optional) Address family name; one or both of <code>ipv4</code> , <code>ipv6</code> . Default value; both.
<i>vrf_name</i>	VRF name; one of the VRF name, <code>default</code> , <code>all</code> . Default value: <code>default</code> .

Response

Response Body (JSON)	<pre>[{ "status": "<status>", "network": "<network>", "nextHopGlobal": "<nextHopGlobal>", "nextHopLocal": "<nextHopLocal>", "Metric": "<metric>", "local_pref": "<local_pref>", "weight": "<weight>", "pathInfo": "<pathInfo>", "medvalue": "<medvalue>", "med": "<med>", "aspath": "<as path string>", "aspath4B": "<aspath4B>", "origin": "<origin>" },]</pre>
-------------------------	--

where:

Element	Description
<i>status</i>	Router status code; one of: <ul style="list-style-type: none"> ● s - suppressed ● d - damped ● h - history ● * - valid ● > - best ● i – internal
<i>network</i>	Route destination IP address; a valid IPv4 or IPv6 address.
<i>nextHopGlobal</i>	Route nexthop IPv6 address. Not used for IPv4.
<i>nextHopLocal</i>	Route nexthop; a valid IPv4 or IPv6 address.
<i>weight</i>	Route weight attribute; an integer from 0-65535.
<i>pathInfo</i>	Route path information; a valid AS path VTY string.
<i>medvalue</i>	Multi-exit discriminator value if the MED attribute is missing and missing-as-worst is set; an integer from 0-4294967294.
<i>med</i>	Multi-exit discriminator value; an integer from 0-4294967294.
<i>aspath</i>	Route AS path attribute; a valid AS path VTY string.
<i>aspath4B</i>	Route 4B AS path; a valid AS path VTY string.
<i>origin</i>	Route origin attribute; one of the following: <ul style="list-style-type: none"> ● i - IGP ● e - EGP ● ? - incomplete

Get BGP Detailed RIB Information

Get detailed BGP Routing Information Base information.

Request

Method Type	GET
Request URI	/nos/api/info/bgp/global/rib/network/<af_name>/<route>/<network_mask>/<vrf_name>/
Request Body (JSON)	

where:

Element	Description
<i>af_name</i>	(Optional) Address family name; one or both of ipv4 , ipv6 . Default value: both.
<i>route</i>	Route; a valid IPv4 or IPv6 address.
<i>network_mask</i>	Network mask: <ul style="list-style-type: none">● IPv4: An integer from 0-32.● IPv6: An integer from 0-128.
<i>vrf_name</i>	(Optional) VRF name; one of the VRF name, default , all . Default value: default .

Response

Response Body (JSON)	<pre>[{ "table entry for": "<table entry for>" "paths": [{ "as path str": "<as path str>" "aggregator as": "<aggregator as>" "aggregator as4": "<aggregator as4>" "aggregator address": "<aggregator address>" "Rec from RR-client": "<Rec from RR-client>" "suppressed (damp)": "<suppressed (damp)>" "history entry": "<history entry>" "nexthop address": "<nexthop address>" "peer": "<peer>" "inaccessible": "<inaccessible>" "igpmetric": "<igpmetric>" "from peer": "<from peer>" "orig id": "<orig id>" "next-hop local ip": "<next-hop local ip>" "origin": "<origin>" "metric": "<metric>" "local pref": "<local pref>" "weight": "<weight>" "label": "<label>" "valid": "<valid>" "stale": "<stale>" "type": "<type>" "multipath-candidate": "<multipath-candidate>" "installed": "<installed>" "synchronized": "<synchronized>" "atomic aggregate": "<atomic aggregate>" "best": "<best>" "community": "<community>" "extended community": "<extended community>" "originator": "<originator>" "cluster-id": "<cluster-id>" "reuse info": "<reuse info>" "last update": "<last update>" }], "best is no.": "<best is no.>" "advertised to any peer": "<advertised to any peer>" "advertised to EBGP peer": "<advertised to EBGP peer>" "advertised outside local AS": "<Yes/No>" "advertisements suppressed by an aggregate": "<advertisements suppressed by an aggregate>" "advertised to non peer-group peers": "<advertised to non peer-group peers>" "advertised to peer-groups": "<advertised to peer-groups>" "not advertised": "<not advertised>" },]</pre>
----------------------	---

where:

Element	Description
<i>table entry for</i>	Route IP address/mask; a valid IP address and net mask.
<i>paths</i>	Dictionary; marks the beginning of path table for specific route entry.
<i>as path str</i>	Route path information; a valid AS path VTY string.
<i>aggregator as</i>	Aggregator AS number.
<i>aggregator as4</i>	Aggregator 4-byte AS number.
<i>aggregator address</i>	Aggregator address.
<i>Rec from RR-client</i>	Received from RR-client; Yes. Note: This value only appears if it has been set.
<i>suppressed (damp)</i>	Suppressed due to dampening; Yes. Note: This value only appears if it has been set.
<i>history entry</i>	History entry; Yes. Note: This value only appears if it has been set.
<i>nexthop address</i>	Route nexthop; a valid IPv4 or IPv6 address.
<i>peer</i>	Peer address.
<i>inaccessible</i>	Whether the RIB is can be accessed; one of Yes, No.
<i>igpmetric</i>	IGP metric value; No. Note: This value only appears if it is No.
<i>from peer</i>	Whether the from peer address can be accessed, No. Note: This value only appears if it is No.
<i>orig id</i>	Whether the originator ID can be accessed; No.
<i>next-hop local ip</i>	Whether the next-hop IP address can be accessed; a valid IP address or No. Note: The value No only appears if it is inaccessible.
<i>metric</i>	Metric; one of the metric value, removed.
<i>local pref</i>	Local preference value; only appears if set.
<i>weight</i>	Route weight attribute; an integer from 0-65535. Note: This value only appears if it is set.
<i>label</i>	Label; only appears if set.
<i>valid</i>	Whether the path is valid; Yes. Note: This value only appears if the path is valid.

Element	Description
<i>stale</i>	Whether the state is stale; Yes. Note: This value only appears if the state is stale.
<i>Multipath-candidate</i>	Whether this is a multipath candidate; one of Yes, No.
<i>installed</i>	Whether installed; one of Yes, No.
<i>synchronized</i>	Whether synchronized; one of Yes, No.
<i>Atomic aggregate</i>	Whether this is an atomic aggregate; Yes. Note: This value only appears if it is Yes.
<i>best</i>	Whether this is the best path; one of Yes, No.
<i>community</i>	Community string.
<i>Extended community</i>	Extended community string.
<i>originator</i>	Originator ID.
<i>Cluster id</i>	Cluster ID.
<i>Reuse info</i>	Reuse information.
<i>Last update</i>	Last update time.
<i>best is no.</i>	Which path number is best; the maximum number of paths for this destination.
<i>advertised to any peer</i>	Whether this is advertised to any peers; one of Yes, No.
<i>advertised to EBGP peer</i>	Whether this is advertised to an EBGP peer; one of Yes, No.
<i>advertised outside local AS</i>	Whether this is advertised outside the local AS; one of Yes, No.
<i>advertisement is suppressed by an aggregate</i>	Whether advertisements are suppressed by an aggregate; one of Yes, No.
<i>advertised to non peer-group peers</i>	IP address advertised to non peer-group peers.
<i>advertised to peer-groups</i>	IP address addvertised to peer groups.
<i>Not advertised</i>	Not advertised to any peer. Note: This value only appears if true.

Get BGP Summary Information

Get BGP summary information.

Request

Method Type	GET
Request URI	/nos/api/info/bgp/neighbor/summary/<vrf_name>/<af_name>/<subaf_name>/
Request Body (JSON)	

where:

Element	Description
<i>vrf_name</i>	(Optional) VRF name; one of the VRF name, default , all . Default value: default .
<i>af_name</i>	(Optional) Address family name; one or both of ipv4 , ipv6 . Default value: ipv4 .
<i>subaf_name</i>	Subsequent Address Family Identifier name; unicast . Default value: unicast .

Response

Response Body (JSON)	[{ "router id": "<router id>" "peer": "<peer>" "peer version": "<peer version>" "peer AS": "<peer AS>" "open in": "<open in>" "update in": "<update in>" "keepalive in": "<keepalivein>" "refresh in": "<refresh in>" "dynamic cap in": "<dynamic cap in>" "open out": "<open out>" "update out": "<update out>" "keepalive out": "<keepalive out>" "refresh out": "<refresh out>" "dynamic cap out": "<dynamic cap out>" },]
-------------------------	--

where:

Element	Description
<i>router id</i>	Router ID; a valid IPv4 or IPv6 address.
<i>peer</i>	Peer address; a valid IPv4 or IPv6 address.

Element	Description
<i>peer version</i>	Peer version.
<i>peer AS</i>	Peer AS.
<i>open in</i>	Number of received open messages.
<i>update in</i>	Number of received updates.
<i>keepalive in</i>	Number of received keepalives.
<i>refresh in</i>	Number of received route refresh.
<i>dynamic cap in</i>	Dynamic capabilities imput count.
<i>open out</i>	Number of sent open messages.
<i>update out</i>	Number of sent updates.
<i>keepalive out</i>	Number of sent keepalive messages.
<i>refresh out</i>	Number of sent route refresh messages.
<i>dynamic cap out</i>	Dynamic capabilities output count.

Get BGP Neighbor Details

Get BGP neighbor detailed information.

Request

Method Type	GET
Request URI	/nos/api/info/bgp/neighbor/details/<nbr-ip>/<vrf_name>
Request Body (JSON)	

where:

Element	Description
<i>nbr-ip</i>	(Optional) Neighbor IP address; a valid IPv4 or IPv6 address.
<i>vrf_name</i>	(Optional) VRF name; one of the VRF name, default, all. Default value: default.

Response

Response Body (JSON)	[{ "neighbor": "<neighbor>" "vrfname": "<vrfname>" "remote AS": "<remote AS>" "local AS": "<local AS>" "address family": "<address family>" "table version": "<table version>" "neighbor version": "<neighbor version>" "index val": "<index val>" "index offset": "<index offset>" "index mask": "<index mask>" "link type": "<link type>" "version": "<version>" "description": "<description>" "remote router-ID": "<remote router-ID>" "admin": "<admin>" "ifbound": "<ifbound>" "state": "<state>" "dyncap_adv": "<dyncap_adv>" "dyncap_rec": "<dyncap_rec>" "refresh_adv": "<refresh_adv>" "refresh_new_rec": "<refresh_new_rec>" "refresh_old_rec": "<refresh_old_rec>" "ext_asn_adv": "<ext_asn_adv>" "ext_asn_rec": "<ext_asn_rec>" "afc_adv": "<afc_adv>" "afc_recv": "<afc_recv>" "afc_VPN_adv": "<afc_VPN_adv>" "afc_VPN_recv": "<afc_VPN_recv>" "afc_mcast_adv": "<afc_mcast_adv>" "afc_mcast_recv": "<afc_mcast_recv>" }
-------------------------	---

Response Body (JSON-continued)	<pre> "uptime": "<uptime>" "peer-group name": "<peer-group name>" "holdtime": "<holdtime>" "keepalive": "<keepalive>" "conf holdtime": "<conf holdtime>" "conf keepalive": "<conf keepalive>" "recvMsg": "<recvMsg>" "recvNotf": "<recvNotf>" "recvQueue": "<recvQueue>" "sentMsg": "<sentMsg>" "sentNotf": "<sentNotf>" "sentQueue": "<sentQueue>" "refresh_in": "<refresh_in>" "refresh_out": "<refresh_out>" "routeadv": "<routeadv>" "update_if": "<update_if>" "update_source": "<update_source>" "established": "<established>" "dropped": "<dropped>" "prefix overflow": "<prefix overflow>" "ttl": "<ttl>" "local address": "<local address>" "local port": "<local port>" "remote address": "<remote address>" "remote port": "<remote port>" "nextHopAddress": "<nextHopAddress>" "nextHopLocalV6": "<nextHopLocalV6>" "nextHopGlobalV6": "<nextHopGlobalV6>" "shared_network": "<shared_network>" "next conn retry": "<next conn retry>" "err notif": "<err notif>" "last_reset_time": "<last_reset_time>" "error code": "<error code>" "error subcode": "<error subcode>" "rmap_map": "<rmap_map>" },] </pre>
-----------------------------------	--

where:

Element	Description
<i>neighbor</i>	Neighbor address.
<i>vrfname</i>	VRF name.
<i>remote AS</i>	AS number.
<i>local AS</i>	Local AS number.
<i>address family</i>	Address family.
<i>table version</i>	Table version.
<i>neighbor version</i>	Neighbor index value.
<i>index val</i>	Index offset.
<i>index offset</i>	Index mask.
<i>index mask</i>	Link type; one of internal , external .

Element	Description
<i>link type</i>	Link type; one of internal, external.
<i>version</i>	Version.
<i>description</i>	Description.
<i>remote router-ID</i>	Remote router ID.
<i>admin</i>	Admin state.
<i>ifbound</i>	Whether the interface is bound; one of No interface binding, Interface bound.
<i>state</i>	Neighbor state.
<i>dyncap_adv</i>	Dynamic capability advertised, only if advertised.
<i>dyncap_rec</i>	Dynamic capability received, only if received.
<i>refresh_adv</i>	Refresh capability advertised, only if advertised.
<i>refresh_new_rec</i>	Refresh New received, only if received.
<i>refresh_old_rec</i>	Refresh Old received, only if received.
<i>ext_asn_adv</i>	Extended ASN capability advertised.
<i>ext_asn_rec</i>	Extended ASN capability received.
<i>afc_adv</i>	Address family unicast sent.
<i>afc_recv</i>	Address family unicast received.
<i>afc_VPN_adv</i>	Address family VPN sent.
<i>afc_VPN_recv</i>	Address family VPN received.
<i>afc_mcast_adv</i>	Address family multicast sent.
<i>afc_mcast_recv</i>	Address family multicast received.
<i>uptime</i>	Uptime.
<i>peer-group name</i>	Peer IP address.
<i>holdtime</i>	Holdtime.
<i>keepalive</i>	Keepalive time.
<i>conf holdtime</i>	Configured holdtime.
<i>conf keepalive</i>	Configured keepalive time.
<i>recvMsg</i>	Number of received messages.

Element	Description
<i>recvNotf</i>	Number of received notifications.
<i>recvQueue</i>	Received messages queue count.
<i>sentMsg</i>	Number of sent messages.
<i>sentNotf</i>	Number of sent notifications.
<i>sentQueue</i>	Sent messages queue count.
<i>refresh_in</i>	Number of route refresh messages received.
<i>refresh_out</i>	Number of route refresh messages sent.
<i>routeadv</i>	Number of router advertisements.
<i>update_if</i>	Update interface.
<i>update_source</i>	Update source address.
<i>established</i>	Established count.
<i>dropped</i>	Dropped count.
<i>prefix overflow</i>	Whether there is a prefix overflow; one of Yes, No.
<i>ttl</i>	Time to live value.
<i>local address</i>	Local neighbor IP address.
<i>local port</i>	Local port number.
<i>remote address</i>	Remote peer IP address.
<i>remote port</i>	Remote port number.
<i>nextHop Address</i>	Next-hop address.
<i>nextHopLocal V6</i>	Next-hop address (link local).
<i>nextHop GlobalV6</i>	Next-hop address (global).
<i>shared network</i>	Shared network.
<i>next conn retry</i>	Number of retries.
<i>err notif</i>	Whether there was an error notification; one of sent, received.
<i>last_reset_time</i>	Last reset time.
<i>err code</i>	Code string.

Element	Description
<i>err subcode</i>	Subcode string.
<i>rmap_name</i>	Default originating route map.

Get BGP Neighbor Statistics

Get BGP neighbor detailed statistics.

Request

Method Type	GET
Request URI	/nos/api/info/bgp/neighbor/stats/<nbr-ip>/<item>/<vrf_name>
Request Body (JSON)	

where:

Element	Description
<i>nbr-ip</i>	IP address; one or more valid IPv4 or IPv6 addresses. Default; all neighbor IP addresses.
<i>item</i>	The type of statistics; one or more of <code>keepalive</code> , <code>notification</code> , <code>open</code> , <code>update</code> , <code>recv_msgs</code> , <code>sent_msgs</code> . Default; show all items.
<i>vrf_name</i>	(Optional) VRF name; one of the VRF name, <code>default</code> , <code>all</code> . Default value: <code>default</code> .

Response

Response Body (JSON)	[{ "statistic_type": "<statistic>" "received": "<received>" "sent": "<sent>" }]
-------------------------	---

where:

Element	Description
<i>statistic type</i>	Statistic type; one or more of <code>keepalive</code> , <code>notification</code> , <code>open</code> , <code>update</code> , <code>recv_msgs</code> , <code>sent_msgs</code> .
<i>received</i>	Number of received messages of the specified type or types.
<i>sent</i>	Number of sent messages of the specified type or types.

Get BGP Distance Configuration

Get the BGP distance configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/bgp/distance/<af_name>/<saf_name>/<vrf_name>
Request Body (JSON)	

where:

Element	Description
<i>af_name</i>	Address family name; one or both of <code>ipv4</code> , <code>ipv6</code> . Default value: both.
<i>saf_name</i>	Subsequent Address Family Identifier name; <code>unicast</code> . Default value: <code>unicast</code> .
<i>vrf_name</i>	(Optional) VRF name; one of the VRF name, <code>default</code> , <code>all</code> . Default value: <code>default</code> .

Response

Response Body (JSON)	[{ "vrf_name": "<vrf_name>" "distance_ebgp": "<distance_ebgp>" "distance_ibgp": "<distance_ibgp>" "distance_local": "<distance_local>" }]
-------------------------	--

where:

Element	Description
<i>vrf_name</i>	VRF name; one of the VRF name, <code>default</code> , <code>all</code> . Default value: <code>default</code> .
<i>distance_ebgp</i>	Distance for routes external to the AS; an integer from 0-255.
<i>distance_ibgp</i>	Distance for routes internal to the AS; an integer from 0-255.
<i>distance_local</i>	Distance for routes local to the AS; an integer from 0-255.

Get BGP Address Family Global Configuration

Get the BGP address family global configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/bgp/af/<af_name>/<saf_name>/<vrf_name>
Request Body (JSON)	

where:

Element	Description
<i>af_name</i>	Address family name; one or both of <code>ipv4</code> , <code>ipv6</code> . Default value: <code>both</code> .
<i>saf_name</i>	Subsequent Address Family Identifier name; <code>unicast</code> . Default value: <code>unicast</code> .
<i>vrf_name</i>	(Optional) VRF name; one of the VRF name, <code>default</code> , <code>all</code> . Default value: <code>default</code> .

Response

Response Body (JSON)	[{ "vrf_name": "<vrf_name>" "cc_reflection": "<cc_reflection>" "synchronization": "<synchronization>" "network_synchronization": "<network_synchronization>" }]
-------------------------	--

where:

Element	Description
<i>vrf_name</i>	VRF name; one of the VRF name, <code>default</code> , <code>all</code> . Default value: <code>default</code> .
<i>cc_reflection</i>	Client-to-client reflect; one of <code>enable</code> , <code>disable</code> .
<i>synchronization</i>	Perform IGP synchronization; one of <code>enable</code> , <code>disable</code> .
<i>network_synchronization</i>	Perform IGP synchronization on network routes; one of <code>enable</code> , <code>disable</code> .

Get BGP Multipath ECMP Numbers Configuration

Get the BGP multipath maximum ECMP numbers configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/bgp/af/maximum_paths/<af_name>/<saf_name>/<vrf_name>
Request Body (JSON)	

where:

Element	Description
<i>af_name</i>	Address family name; one or both of <code>ipv4</code> , <code>ipv6</code> . Default value; both.
<i>saf_name</i>	Subsequent Address Family Identifier name; <code>unicast</code> . Default value: <code>unicast</code> .
<i>vrf_name</i>	(Optional) VRF name; one of the VRF name, <code>default</code> , <code>all</code> . Default value: <code>default</code> .

Response

Response Body (JSON)	[{ "vrf_name": "<vrf_name>", "ibgp_max_number": "<ibgp_max_number>", "ebgp_max_number": "<ebgp_max_number>" }]
-------------------------	--

where:

Element	Description
<i>vrf_name</i>	VRF name; one of the VRF name, <code>default</code> , <code>all</code> . Default value: <code>default</code> .
<i>ibgp_max_number</i>	IBGP multipath maximum ECMP number; an integer from 1-32.
<i>ebgp_max_number</i>	EBGP multipath maximum ECMP number; an integer from 1-32.

Get BGP Nexthop Trigger-Delay Configuration

Get the BGP nexthop trigger-delay configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/bgp/af/nht_delay/<af_name>/<saf_name>
Request Body (JSON)	

where:

Element	Description
<i>af_name</i>	Address family name; one or both of <code>ipv4</code> , <code>ipv6</code> . Default value: <code>both</code> .
<i>saf_name</i>	Subsequent Address Family Identifier name; <code>unicast</code> . Default value: <code>unicast</code> .

Response

Response Body (JSON)	[{ " <i>critical</i> ": "< <i>critical</i> >" " <i>non-critical</i> ": "< <i>noncritical</i> >" }]
-------------------------	---

where:

Element	Description
<i>critical</i>	Nexthop changes affecting reachability; an integer from 1-4294967295.
<i>non-critical</i>	Nexthop changes affecting metric; an integer from 1-4294967295.

Get BGP Aggregate Configuration

Get the BGP aggregate configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/bgp/af/aggregate/<af_name>/<saf_name>/<vrf_name>
Request Body (JSON)	

where:

Element	Description
<i>af_name</i>	Address family name; one or both of <code>ipv4</code> , <code>ipv6</code> . Default value; both.
<i>saf_name</i>	Subsequent Address Family Identifier name; <code>unicast</code> . Default value: <code>unicast</code> .
<i>vrf_name</i>	(Optional) VRF name; one of the VRF name, <code>default</code> , <code>all</code> . Default value: <code>default</code> .

Response

Response Body (JSON)	[{ "vrf_name": "<vrf_name>" "prefix": "<prefix>" "type": "<type>" }]
-------------------------	--

where:

Element	Description
<i>vrf_name</i>	VRF name; one of the VRF name, <code>default</code> , <code>all</code> . Default value: <code>default</code> .
<i>prefix</i>	Aggregate prefix; an IP address in one of the following forms: <ul style="list-style-type: none">● A.B.C.D/M● X:X::X:X/M.
<i>type</i>	Aggregate type; one of the following: <ul style="list-style-type: none">● <code>as_set</code> - Generate AS set path information.● <code>summary_only</code> - Filter more specific routes from updates.● <code>as_set_summary_only</code> - Both <code>as-set</code> and <code>summary-only</code>.

Get BGP Dampening Parameters Configuration

Get the BGP dampening parameters configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/bgp/af/dampening/<af_name>/<saf_name>/<vrf_name>
Request Body (JSON)	

where:

Element	Description
<i>af_name</i>	Address family name; one or both of <code>ipv4</code> , <code>ipv6</code> . Default value: <code>both</code> .
<i>saf_name</i>	Subsequent Address Family Identifier name; <code>unicast</code> . Default value: <code>unicast</code> .
<i>vrf_name</i>	(Optional) VRF name; one of the VRF name, <code>default</code> , <code>all</code> . Default value: <code>default</code> .

Response

Response Body (JSON)	[{ "vrf_name": "<vrf_name>", "half_life": "<half_life>", "reuse_penalty": "<reuse_penalty>", "suppress_penalty": "<suppress_penalty>", "max_suppress": "<max_suppress>", "unreach_half_life": "<unreach_half_life>", "rmap_name": "<rmap_name>" }]
-------------------------	--

where:

Element	Description
<i>vrf_name</i>	VRF name; one of the VRF name, <code>default</code> , <code>all</code> . Default value: <code>default</code> .
<i>half_life</i>	Reachability half-life time for the penalty, in minutes; an integer from 1-45.
<i>reuse_penalty</i>	Value to start reusing a route; an integer from 1-20000.
<i>suppress_penalty</i>	Value to start suppressing a route; an integer from 1-20000.

Element	Description
<i>max_suppress</i>	Maximum duration to suppress a stable route, in minutes; an integer from 1-255.
<i>unreach_half_life</i>	Unreachability half-life time for the penalty, in minutes; an integer from 1-45.
<i>rmap_name</i>	Route-map name; a string up to 63 characters long.

Get BGP Damped Path Configuration

Get the BGP damped path configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/bgp/af/dampening/damped_path/<af_name>/<saf_name>/<vrf_name>
Request Body (JSON)	

where:

Element	Description
<i>af_name</i>	Address family name; one or both of <code>ipv4</code> , <code>ipv6</code> . Default value: both.
<i>saf_name</i>	Subsequent Address Family Identifier name; <code>unicast</code> . Default value: <code>unicast</code> .
<i>vrf_name</i>	(Optional) VRF name; one of the VRF name, <code>default</code> , <code>all</code> . Default value: <code>default</code> .

Response

Response Body (JSON)	[{ "statusCode": "<statusCodeVal>", "network": "<networkVal>", "nextHopGlobal": "<nextHopGlobalVal>", "nextHopLocal": "<nextHopLocalVal>", "metric": "<metricVal>", "pathInfo": "<pathInfoVal>", "reuseTime": "<reuseTimeVal>", "asPathStr": "<asPathStrVal>", "asPath4BStr": "<asPath4BStrVal>", "routeOriginType": "<routeOriginTypeVal>" }]
-------------------------	---

where:

Element	Description
<i>statusCode</i>	Router status code; one of: <ul style="list-style-type: none">● s - suppressed● d - damped● h - history● * - valid● > - best● i – internal
<i>network</i>	Route destination IP address; a valid IPv4 or IPv6 address.
<i>nextHopGlobal</i>	Route nexthop IPv6 address. Not used for IPv4.
<i>nextHopLocal</i>	Route nexthop; a valid IPv4 or IPv6 address.
<i>metric</i>	Route metric; an integer.
<i>pathInfo</i>	Route path information; a valid AS path VTY string.
<i>reuseTime</i>	Route reuse time; a string.
<i>asPathStr</i>	Route AS path attribute; a valid AS path VTY string.
<i>asPath4BStr</i>	Route 4B AS path; a valid AS path VTY string.
<i>routeOrigin Type</i>	Route origin type; one of the following: <ul style="list-style-type: none">● i - IGP● e - EGP● ? - incomplete

Get BGP Network Configuration

Get the BGP network configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/bgp/af/network/<af_name>/<saf_name>/<vrf_name>
Request Body (JSON)	

where:

Element	Description
<i>af_name</i>	Address family name; one or both of <code>ipv4</code> , <code>ipv6</code> . Default value: <code>both</code> .
<i>saf_name</i>	Subsequent Address Family Identifier name; <code>unicast</code> . Default value: <code>unicast</code> .
<i>vrf_name</i>	(Optional) VRF name; one of the VRF name, <code>default</code> , <code>all</code> . Default value: <code>default</code> .

Response

Response Body (JSON)	[{ "vrf_name": "<vrf_name>", "prefix": "<prefix>", "backdoor": "<backdoor>", "rmap_name": "<rmap_name>" }]
-------------------------	---

where:

Element	Description
<i>vrf_name</i>	VRF name; one of the VRF name, <code>default</code> , <code>all</code> . Default value: <code>default</code> .
<i>prefix</i>	Network prefix; an IP address in one of the following forms: <ul style="list-style-type: none">• A.B.C.D/M• X:X::X:X/M.
<i>backdoor</i>	Whether a BGP backdoor route is specified; one of <code>enable</code> , <code>disable</code> .
<i>rmap_name</i>	Route map name; a string up to 63 characters long.

Get BGP Redistribute Configuration

Get the BGP network redistribute configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/bgp/af/redistribute/<af_name>/<saf_name>/<vrf_name>
Request Body (JSON)	

where:

Element	Description
<i>af_name</i>	Address family name; one or both of <code>ipv4</code> , <code>ipv6</code> . Default value: <code>both</code> .
<i>saf_name</i>	Subsequent Address Family Identifier name; <code>unicast</code> . Default value: <code>unicast</code> .
<i>vrf_name</i>	(Optional) VRF name; one of the VRF name, <code>default</code> , <code>all</code> . Default value: <code>default</code> .

Response

Response Body (JSON)	[{ "vrf_name": "<vrf_name>", "redist_direct": "<redist_direct>", "direct_rmap_name": "<direct_rmap_name>", "redist_ospf": "<redist_ospf>", "ospf_rmap_name": "<ospf_rmap_name>", "redist_static": "<redist_static>", "static_rmap_name": "<static_rmap_name>" }]
-------------------------	--

where:

Element	Description
<i>vrf_name</i>	VRF name; one of the VRF name, <code>default</code> , <code>all</code> . Default value: <code>default</code> .
<i>redist_direct</i>	Whether redistribute direct is enabled; one of <code>enable</code> , <code>disable</code> .
<i>direct_rmap_name</i>	Route map name for redistribute direct; a string up to 63 characters long.
<i>redist_ospf</i>	Whether redistribute OSPF is enabled; one of <code>enable</code> , <code>disable</code> .

Element	Description
<i>ospf_rmap_name</i>	Route map name for redistribute OSPF; a string up to 63 characters long.
<i>redist_static</i>	Whether redistribute static is enabled; one of <code>enable</code> , <code>disable</code> .
<i>static_rmap_name</i>	Route map name for redistribute static; a string up to 63 characters long.

Get BGP Neighbor Configuration

Get the BGP network neighbor configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/bgp/neighbor/details/<neighbor_ip>/<vrf_name>
Request Body (JSON)	

where:

Element	Description
<i>neighbor_ip</i>	(Optional) The IP address of the neighbor; a valid IPv4 or IPv6 address. No value will display all neighbors.
<i>vrf_name</i>	(Optional) VRF name; one of the VRF name, <code>default</code> , <code>all</code> . Default value: <code>default</code> .

Response

Response Body (JSON)	<pre>[{ "neighbor": "<neighbor>", "vrfname": "<vrfname>", "remote as": "<remote as>", "local as": "<local as>", "address family": "<address family>", "advertisement interval": "<advertisement interval>", "bfd": "<bfd>", "connection retry time": "<connection retry time>", "description": "<description>", "disallow infinite holdtime": "<disallow infinite holdtime>", "do not capability negotiate": "<do not capability negotiate>", "advertise dynamic capability": "<advertise dynamic capability>", "EBGP multihop": "<EBGP multihop>", "remote private as": "<remote private as>", "maximum peers": "<maximum peers>", "password": "<password>", "shutdown": "<shutdown>", "peer holdtime": "<peer holdtime>", "peer keepalive": "<peer keepalive>", "connection-mode passive": "<connection-mode passive>", "ttl security hops": "<ttl security hops>", "update-source": "<update-source>", "weight": "<weight>", "allow as in": "<allow as in>", "default originate": "<default originate>", "default originate rmap": "<default originate rmap>", "prefix-list in": "<prefix-list in>", "prefix-list out": "<prefix-list out>", "maximum-prefix": "<maximum-prefix>", "maximum-prefix warning": "<maximum-prefix warning>", "maximum-prefix threshold percent": "<maximum-prefix threshold percent>", "next-hop-self": "<next-hop-self>", "filter-list in": "<filter-list in>", "filter-list out": "<filter-list out>", "route-map in": "<route-map in>", "route-map out": "<route-map out>", "route reflector client": "<route reflector client>", "send community": "<send community>", "send community extended": "<send community extended>", "soft reconfiguration inbound": "<soft reconfiguration inbound>", "unsuppress-map": "<unsuppress-map>" }]</pre>
-------------------------	---

where:

Element	Description
<i>neighbor</i>	Neighbor IP address; a valid IPv4 or IPv6 address.
<i>vrf_name</i>	VRF name; one of the VRF name, default , all . Default value: default .
<i>remote as</i>	Current neighbor AS; an AS number.
<i>local as</i>	Switch AS; an AS number.

Element	Description
<i>address family</i>	Neighbor address family; an address family.
<i>advertisement interval</i>	Minimum interval between BGP updates, in seconds; an integer.
<i>bfd</i>	BFD state; one of: <ul style="list-style-type: none">● enabled● disabled● multihop enabled
<i>connection retry time</i>	BGP connect timer, in seconds; an integer.
<i>description</i>	Neighbor description; a string.
<i>disallow infinite holdtime</i>	Neighbor disallow infinite hold time; one of Yes , No .
<i>do not capability negotiate</i>	Whether to perform capability negotiations; one of Yes , No .
<i>advertise dynamic capability</i>	Advertise dynamic capability to this neighbor; one of Yes , No .
<i>EBGP multihop</i>	Number of multihops; an integer from 1 - 255.
<i>remote private as</i>	Whether to remove private AS number from outbound packets; one of Yes , No .
<i>maximum peers</i>	Maximum number of peers for this prefix; an integer from 1-96.
<i>password</i>	Neighbor password; an encrypted password.
<i>shutdown</i>	Neighbor state; one of Yes , No .
<i>peer holdtime</i>	Holdtime value, in seconds; an integer from 0-3600.
<i>peer keepalive</i>	Keepalive value, in seconds; an integer from 0-3600.
<i>connection-mode passive</i>	Whether to allow a passive connection; one of Yes , No .
<i>ttl security hops</i>	Number of hops; an integer from 1-254.
<i>update-source</i>	Source of routing updates; one of: <ul style="list-style-type: none">● ethernet● vlan● loopback interfaces

Element	Description
<i>weight</i>	The default weight for routes from this neighbor; an integer from 0–65535.
<i>allow as in</i>	Accept AS path with own AS in it; an integer from 1-10.
<i>default originate</i>	Whether to originate default route to this neighbor; one of Yes, No.
<i>default originate rmap</i>	Route map that specifies criteria; an RMAP name.
<i>prefix-list in</i>	Filter updates from this neighbor; a filter name.
<i>prefix-list out</i>	Filter updates to this neighbor; a filter name.
<i>maximum-prefix</i>	Maximum number of prefix accept from this peer; an integer from -15782.
<i>maximum-prefix warning</i>	Whether to only give a warning message when limit is exceeded; one of Yes, No.
<i>maximum-prefix threshold percent</i>	Threshold value; an integer from 1-100.
<i>next-hop-self</i>	Whether to disable the next hop calculation for this neighbor; one of Yes, No.
<i>filter-list in</i>	Establish filter for incoming routes; a filter name.
<i>filter-list out</i>	Establish filter for outgoing routes; a filter name.
<i>route-map in</i>	Apply routemap for incoming routes; an RMAP name.
<i>route-map out</i>	Apply routemap for outgoing routes; an RMAP name.
<i>route reflector client</i>	Whether to set neighbor as route reflector client; one of Yes, No.
<i>send community</i>	Whether to send community attribute to this neighbor; one of Yes, No.
<i>send community extended</i>	Whether to send extended community attribute to this neighbor; one of Yes, No.
<i>soft reconfiguration inbound</i>	Whether to allow inbound soft reconfiguration for this neighbor; one of Yes, No.
<i>unsuppress-map</i>	Route map to selectively unsuppress suppressed routes; an RMAP name.

Update BGP Neighbor Configuration

This command updates the configuration of a specific BGP neighbor. If the BGP neighbor is nonexistent, it will be created.

Request

Method Type	PUT
Request URI	/nos/api/cfg/bgp/neighbor/details/{neighbor_ip}/{vrf_name}
Request Body (JSON)	[{ "remote as": "{as value of neighbor}", "local as": "{local as value}", "advertisement interval": "{advertisement interval value}", "bfd": "{enabled/disabled/multihop enabled}", "connection retry time": "{connection retry time value}", "description": "{peer description}", "disallow infinite holdtime": "{yes/no}", "do not capability negotiate": "{yes/no}", "advertise dynamic capability": "{yes/no}", "EBGP multi-hop": "{multihop value}", "remote private as": "{yes/no}", "maximum peers": "{maximum peers value}", "password": "{encrypted password}", "unencrypt-password": "{yes/no}", "shutdown": "{yes/no}", "peer holdtime": "{holdtime value}", "peer keepalive": "{keepalive value}", "connection-mode passive": "{yes/no}", "ttl security hops": "{number of hops}", "update-source": "{update source}", "weight": "{weight value}", "allow as in": "{number of as allowed}", "default originate": "{yes/no}", "default originate rmap": "{rmap name}", "prefix-list in": "{prefix list name}", "prefix-list out": "{prefix list name}", "maximum-prefix": "{max prefix value}", "maximum-prefix warning": "{yes/no}", "maximum-prefix threshold percent": "{percent value}", "next-hop-self": "{yes/no}", "filter-list in": "{list name}", "filter-list out": "{list name}", "route-map in": "{route map name}", "route-map out": "{route map name}", "route reflector client": "{yes/no}", "send community": "{yes/no}", "send community extended": "{yes/no}", "soft reconfiguration inbound": "{yes/no}", "unsuppress-map": "{route map name}" }]

where:

Element	Description
<i>neighbor_ip</i>	The IP address of the BGP neighbor. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
<i>vrf_name</i>	The VRF instance for the BGP neighbor. Valid value: <ul style="list-style-type: none">● <i>VRF instance name</i>
<i>remote as</i>	The current neighbor AS number. Valid value: <ul style="list-style-type: none">● <i>1-4294967295</i>
<i>local as</i>	The current local AS number. Valid value: <ul style="list-style-type: none">● <i>1-4294967295</i>
<i>advertisement interval</i>	The minimum time interval, in seconds, between consecutive BGP updates. Valid value: <ul style="list-style-type: none">● <i>1-65535</i>
<i>bfd</i>	The status of Bidirectional Forwarding Detection (BFD). Valid values: <ul style="list-style-type: none">● <i>enabled</i>● <i>disable</i>● <i>multihop enabled</i>
<i>connection retry time</i>	The connection retry time, in seconds. Valid value: <ul style="list-style-type: none">● <i>1-65535</i>
<i>description</i>	The BGP neighbor description. Valid value: <ul style="list-style-type: none">● <i>string</i>
<i>disallow infinite holdtime</i>	Whether the configuration of infinite hold-time is disallowed. Valid values: <ul style="list-style-type: none">● <i>yes</i>● <i>no</i>
<i>do not capability negotiate</i>	Whether capability negotiations are disabled. Valid values: <ul style="list-style-type: none">● <i>yes</i>● <i>no</i>

Element	Description
advertise dynamic capability	Whether dynamic capability advertisements are enabled. Valid values: <ul style="list-style-type: none">● <i>yes</i>● <i>no</i>
EBGP multihop	The number of EBGP multi-hops. Valid value: <ul style="list-style-type: none">● 1-255
remote private as	Whether the removal of private AS numbers from outbound routes updates is enabled. Valid values: <ul style="list-style-type: none">● <i>yes</i>● <i>no</i>
maximum peers	The maximum number of peers configured for the prefix of the BGP neighbor. Valid value: <ul style="list-style-type: none">● 1-96
password	The encrypted password for the BGP neighbor. Valid value: <ul style="list-style-type: none">● <i>string</i>
unencrypt-password	Whether the password for the BGP neighbor is unencrypted. Valid values: <ul style="list-style-type: none">● <i>yes</i>● <i>no</i>
shutdown	Shuts down the BGP neighbor. Valid values: <ul style="list-style-type: none">● <i>yes</i>● <i>no</i>
peer holdtime	The time interval, in seconds, the switch awaits before transitioning the BGP neighbor to IDLE state, if the switch doesn't receive an update or keepalive message from the neighbor. Valid value: <ul style="list-style-type: none">● 0-3600
peer keepalive	The time interval, in seconds, the switch awaits before sending another keep-alive message to the BGP neighbor. Valid value: <ul style="list-style-type: none">● 0-3600

Element	Description
connection-mode passive	Whether the initiations of TCP sessions with the BGP neighbor are disabled. Valid values: <ul style="list-style-type: none">● <i>yes</i>● <i>no</i>
ttl-security hops	The minimum number of TTL router hops an IP packet must have to not be discarded. Valid value: <ul style="list-style-type: none">● 1-254
update-source	The source of the BGP session and updates. Valid values: <ul style="list-style-type: none">● <i>ethernet port</i>● <i>VLAN interface</i>● <i>loopback interface</i>
weight	The default weight of routes incoming from the BGP neighbor. Valid value: <ul style="list-style-type: none">● 1-65535
allow as in	The number of AS paths with the local AS number that are accepted by the switch. Valid value: <ul style="list-style-type: none">● 1-10
default originate	Whether to distribute a default route to the BGP neighbor. Valid values: <ul style="list-style-type: none">● <i>yes</i>● <i>no</i>
default originate rmap	The name of the route map for the default route. Valid value: <ul style="list-style-type: none">● <i>route map name</i>
prefix-list in	The prefix list for routes incoming from the BGP neighbor. Valid value: <ul style="list-style-type: none">● <i>prefix list name</i>
prefix-list out	The prefix list for routes outgoing to the BGP neighbor. Valid value: <ul style="list-style-type: none">● <i>prefix list name</i>
maximum-prefix	The maximum number of prefixes that can be received from the BGP neighbor. Valid value: <ul style="list-style-type: none">● 1-15872

Element	Description
maximum-prefix warning	<p>Whether warning messages are generated only when the maximum prefix limit is exceeded.</p> <p>Valid values:</p> <ul style="list-style-type: none"> ● <i>yes</i> ● <i>no</i>
maximum-prefix threshold percent	<p>The percentage of the maximum prefix limit at which the switch starts to generate a warning message.</p> <p>Valid value:</p> <ul style="list-style-type: none"> ● <i>1-100</i>
next-hop-self	<p>Whether next-hop calculations for the BGP neighbor are disabled.</p> <p>Valid values:</p> <ul style="list-style-type: none"> ● <i>yes</i> ● <i>no</i>
filter-list in	<p>The AS path ACL for routes incoming from the BGP neighbor.</p> <p>Valid value:</p> <ul style="list-style-type: none"> ● <i>ACL name</i>
filter-list out	<p>The AS path ACL for routes outgoing to the BGP neighbor.</p> <p>Valid value:</p> <ul style="list-style-type: none"> ● <i>ACL name</i>
route-map in	<p>The route map for routes incoming from the BGP neighbor.</p> <p>Valid value:</p> <ul style="list-style-type: none"> ● <i>route map name</i>
route-map out	<p>The route map for routes outgoing to the BGP neighbor.</p> <p>Valid value:</p> <ul style="list-style-type: none"> ● <i>route map name</i>
route reflector client	<p>Whether the BGP neighbor is a route reflector client.</p> <p>Valid values:</p> <ul style="list-style-type: none"> ● <i>yes</i> ● <i>no</i>
send community	<p>Whether community attributes are sent to the BGP neighbor.</p> <p>Valid values:</p> <ul style="list-style-type: none"> ● <i>yes</i> ● <i>no</i>
send community extended	<p>Whether extended community attributes are sent to the BGP neighbor.</p> <p>Valid values:</p> <ul style="list-style-type: none"> ● <i>yes</i> ● <i>no</i>

Element	Description
soft reconfiguration inbound	Whether the switch stores BGP neighbor updates. Valid values: <ul style="list-style-type: none">● yes● no
unsuppress-map	The route map to selectively unsuppress suppressed routes. Valid value: <ul style="list-style-type: none">● <i>route map name</i>

Response

Response Body (JSON)	[{ "neighbor": "{ip_addr}", "vrf_name": "{vrf_name}", "remote as": "{as value of neighbor}", "local as": "{local as value}", "address family": "{address family type}", "advertisement interval": "{advertisement interval value}", "bfd": "{enabled/disabled/multihop enabled}", "connection retry time": "{connection retry time value}", "description": "{peer description}", "disallow infinite holdtime": "{yes/no}", "do not capability negotiate": "{yes/no}", "advertise dynamic capability": "{yes/no}", "EBGP multihop": "{multihop value}", "remote private as": "{yes/no}", "maximum peers": "{maximum peers value}", "password": "{encrypted password}", "shutdown": "{yes/no}", "peer holdtime": "{holdtime value}", "peer keepalive": "{keepalive value}", "connection-mode passive": "{yes/no}", "ttl security hops": "{number of hops}", "update-source": "{update source}", "weight": "{weight value}", "allow as in": "{number of as allowed}", "default originate": "{yes/no}", "default originate rmap": "{rmap name}", "prefix-list in": "{prefix list name}", "prefix-list out": "{prefix list name}", "maximum-prefix": "{max prefix value}", "maximum-prefix warning": "{yes/no}", "maximum-prefix threshold percent": "{percent value}", "next-hop-self": "{yes/no}", "filter-list in": "{list name}", "filter-list out": "{list name}", "route-map in": "{route map name}", "route-map out": "{route map name}", "route reflector client": "{yes/no}", "send community": "{yes/no}", "send community extended": "{yes/no}", "soft reconfiguration inbound": "{yes/no}", "unsuppress-map": "{route map name}" }]
----------------------	--

where:

Element	Description
neighbor_ip	The IP address of the BGP neighbor. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
vrf_name	The VRF instance for the BGP neighbor. Valid value: <ul style="list-style-type: none">● <i>VRF instance name</i>
remote_as	The current neighbor AS number. Valid value: <ul style="list-style-type: none">● <i>1-4294967295</i>
local_as	The current local AS number. Valid value: <ul style="list-style-type: none">● <i>1-4294967295</i>
address_family	The BGP neighbor address family. Valid values: <ul style="list-style-type: none">● <i>IPv4</i>● <i>IPv6</i>
advertisement_interval	The minimum time interval, in seconds, between consecutive BGP updates. Valid value: <ul style="list-style-type: none">● <i>1-65535</i>
bfd	The status of Bidirectional Forwarding Detection (BFD). Valid values: <ul style="list-style-type: none">● <i>enabled</i>● <i>disable</i>● <i>multihop enabled</i>
connection_retry_time	The connection retry time, in seconds. Valid value: <ul style="list-style-type: none">● <i>1-65535</i>
description	The BGP neighbor description. Valid value: <ul style="list-style-type: none">● <i>string</i>
disallow_infinite_holdtime	Whether the configuration of infinite hold-time is disallowed. Valid values: <ul style="list-style-type: none">● <i>yes</i>● <i>no</i>

Element	Description
do not capability negotiate	Whether capability negotiations are disabled. Valid values: <ul style="list-style-type: none">● <i>yes</i>● <i>no</i>
advertise dynamic capability	Whether dynamic capability advertisements are enabled. Valid values: <ul style="list-style-type: none">● <i>yes</i>● <i>no</i>
EBGP multihop	The number of EBGP multi-hops. Valid value: <ul style="list-style-type: none">● 1-255
remote private as	Whether the removal of private AS numbers from outbound routes updates is enabled. Valid values: <ul style="list-style-type: none">● <i>yes</i>● <i>no</i>
maximum peers	The maximum number of peers configured for the prefix of the BGP neighbor. Valid value: <ul style="list-style-type: none">● 1-96
password	The encrypted password for the BGP neighbor. Valid value: <ul style="list-style-type: none">● <i>string</i>
shutdown	Shuts down the BGP neighbor. Valid values: <ul style="list-style-type: none">● <i>yes</i>● <i>no</i>
peer holdtime	The time interval, in seconds, the switch awaits before transitioning the BGP neighbor to IDLE state, if the switch doesn't receive an update or keepalive message from the neighbor. Valid value: <ul style="list-style-type: none">● 0-3600
peer keepalive	The time interval, in seconds, the switch awaits before sending another keep-alive message to the BGP neighbor. Valid value: <ul style="list-style-type: none">● 0-3600

Element	Description
connection-mode passive	Whether the initiations of TCP sessions with the BGP neighbor are disabled. Valid values: <ul style="list-style-type: none">● <i>yes</i>● <i>no</i>
ttl security hops	The minimum number of TTL router hops an IP packet must have to not be discarded. Valid value: <ul style="list-style-type: none">● <i>1-254</i>
update-source	The source of the BGP session and updates. Valid values: <ul style="list-style-type: none">● <i>ethernet port</i>● <i>VLAN interface</i>● <i>loopback interface</i>
weight	The default weight of routes incoming from the BGP neighbor. Valid value: <ul style="list-style-type: none">● <i>1-65535</i>
allow as in	The number of AS paths with the local AS number that are accepted by the switch. Valid value: <ul style="list-style-type: none">● <i>1-10</i>
default originate	Whether to distribute a default route to the BGP neighbor. Valid values: <ul style="list-style-type: none">● <i>yes</i>● <i>no</i>
default originate rmap	The name of the route map for the default route. Valid value: <ul style="list-style-type: none">● <i>route map name</i>
prefix-list in	The prefix list for routes incoming from the BGP neighbor. Valid value: <ul style="list-style-type: none">● <i>prefix list name</i>
prefix-list out	The prefix list for routes outgoing to the BGP neighbor. Valid value: <ul style="list-style-type: none">● <i>prefix list name</i>
maximum-prefix	The maximum number of prefixes that can be received from the BGP neighbor. Valid value: <ul style="list-style-type: none">● <i>1-15872</i>

Element	Description
maximum-prefix warning	Whether warning messages are generated only when the maximum prefix limit is exceeded. Valid values: <ul style="list-style-type: none">● <i>yes</i>● <i>no</i>
maximum-prefix threshold percent	The percentage of the maximum prefix limit at which the switch starts to generate a warning message. Valid value: <ul style="list-style-type: none">● 1-100
next-hop-self	Whether next-hop calculations for the BGP neighbor are disabled. Valid values: <ul style="list-style-type: none">● <i>yes</i>● <i>no</i>
filter-list in	The AS path ACL for routes incoming from the BGP neighbor. Valid value: <ul style="list-style-type: none">● <i>ACL name</i>
filter-list out	The AS path ACL for routes outgoing to the BGP neighbor. Valid value: <ul style="list-style-type: none">● <i>ACL name</i>
route-map in	The route map for routes incoming from the BGP neighbor. Valid value: <ul style="list-style-type: none">● <i>route map name</i>
route-map out	The route map for routes outgoing to the BGP neighbor. Valid value: <ul style="list-style-type: none">● <i>route map name</i>
route reflector client	Whether the BGP neighbor is a route reflector client. Valid values: <ul style="list-style-type: none">● <i>yes</i>● <i>no</i>
send community	Whether community attributes are sent to the BGP neighbor. Valid values: <ul style="list-style-type: none">● <i>yes</i>● <i>no</i>
send community extended	Whether extended community attributes are sent to the BGP neighbor. Valid values: <ul style="list-style-type: none">● <i>yes</i>● <i>no</i>

Element	Description
soft reconfigur ation inbound	Whether the switch stores BGP neighbor updates. Valid values: <ul style="list-style-type: none">● <i>yes</i>● <i>no</i>
unsuppress -map	The route map to selectively unsuppress suppressed routes. Valid value: <ul style="list-style-type: none">● <i>route map name</i>

Update Global BGP Unnumbered Configuration

This command updates the global BGP unnumbered configuration.

Request

Method Type	PUT
Request URI	/nos/api/cfg/bgp/unnumbered
Request Body (JSON)	{ "state": "{enabled disabled}" }

where:

Element	Description
state	The status of the global BGP unnumbered feature. Valid value: <ul style="list-style-type: none">• <i>enabled</i>• <i>disabled</i>

Response

Response Body (JSON)	{ "state": "{enabled disabled}" }
----------------------	---

where:

Element	Description
state	The status of the global BGP unnumbered feature. Valid value: <ul style="list-style-type: none">• <i>enabled</i>• <i>disabled</i>

Update BGP Unnumbered Interface Configuration

This command updates the BGP unnumbered configuration for a specific switch interface.

Request

Method Type	PUT
Request URI	/nos/api/cfg/interface/bgp_unnumbered/<if_name>
Request Body (JSON)	{ "state": "{enabled disabled}" }

where:

Element	Description
<i>if_name</i>	The name of the switch interface. Valid value: <ul style="list-style-type: none">● <i>interface name</i> (for example, <i>Ethernet1/12</i>)
state	The status of the global BGP unnumbered feature. Valid value: <ul style="list-style-type: none">● <i>enabled</i>● <i>disabled</i>

Response

Response Body (JSON)	{ "state": "{enabled disabled}" }
----------------------	---

where:

Element	Description
state	The status of the global BGP unnumbered feature. Valid value: <ul style="list-style-type: none">● <i>enabled</i>● <i>disabled</i>

CEE

The following Converged Enhanced Ethernet (CEE) URIs are available:

- /nos/api/cfg/cee GET, PUT
- /nos/api/cfg/cee/pfc GET, PUT
- /nos/api/cfg/cee/pfc/{if_name} GET, PUT
- /nos/api/info/cee/pfc/counters/{if_name} GET
- /nos/api/cfg/cee/ets GET, PUT
- /nos/api/cfg/cee/app-proto GET, POST, DELETE
- /nos/api/cfg/cee/dcbx/{if_name} GET, PUT
- /nos/api/info/cee/dcbx/ctrl/{if_name} GET
- /nos/api/info/cee/dcbx/admin/{if_name} GET
- /nos/api/info/cee/dcbx/oper/{if_name} GET
- /nos/api/info/cee/dcbx/remote/{if_name} GET

The following CEE commands are available:

- [Get CEE Configuration](#)
- [Update CEE Configuration](#)
- [Get PFC Configuration](#)
- [Update PFC Configuration](#)
- [Get PFC Interface Configuration](#)
- [Update PFC Interface Configuration](#)
- [Get PFC Interface Statistics](#)
- [Get ETS Configuration](#)
- [Update ETS Configuration](#)
- [Get Application Protocol Configuration](#)
- [Create Application Protocol Configuration](#)
- [Delete Application Protocol Configuration](#)
- [Get DCBX Configuration](#)
- [Update DCBX Configuration](#)
- [Get DCBX Control Interface Information](#)
- [Get DCBX Administrative Interface Information](#)
- [Get DCBX Operational Interface Information](#)
- [Get DCBX Remote Interface Information](#)

Get CEE Configuration

This command returns the current CEE configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/cee
Request Body (JSON)	

Response

Response Body (JSON)	{ "status": "{off on}", }
----------------------	---------------------------------

where:

Element	Description
status	The status of the CEE service on the switch. Valid value: <ul style="list-style-type: none">● <i>off (disabled)</i>● <i>on (enabled)</i> Default Value: off

Update CEE Configuration

This command updates the CEE configuration.

Request

Method Type	PUT
Request URI	/nos/api/cfg/cee
Request Body (JSON)	{ "status": "{off on}", }

where:

Element	Description
status	The status of the CEE service on the switch. Valid value: <ul style="list-style-type: none">● <i>off (disabled)</i>● <i>on (enabled)</i> Default value: off

Response

Response Body (JSON)	{ "status": "{off on}", }
----------------------	---------------------------------

where:

Element	Description
status	The status of the CEE service on the switch. Valid value: <ul style="list-style-type: none">● <i>off (disabled)</i>● <i>on (enabled)</i>

Get PFC Configuration

This command returns the current Priority Flow Control (PFC) configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/cee/pfc
Request Body (JSON)	

Response

Response Body (JSON)	{ "state":"{off on}", "priority_map":"{priority_map}" }
----------------------	--

where:

Element	Description
state	The status of PFC on the switch. Valid value: <ul style="list-style-type: none">● <i>off (disabled)</i>● <i>on (enabled)</i> Default value: on
priority_map	The PFC priority flow map. Valid value: <ul style="list-style-type: none">● list of enabled priorities: 0-7 Default value: 3

Update PFC Configuration

This command updates the PFC configuration.

Note: Unlike the CLI command, the PUT operation overwrites any previous configurations.

Request

Method Type	PUT
Request URI	/nos/api/cfg/cee/pfc
Request Body (JSON)	{ "state": "{off on}", "priority_map": "{priority_map}" }

where:

Element	Description
state	The status of PFC on the switch. Valid value: <ul style="list-style-type: none">● <i>off (disabled)</i>● <i>on (enabled)</i> Default value: <i>on</i>
priority_map	The PFC priority flow map. Valid value: <ul style="list-style-type: none">● list of enabled priorities: 0-7 Default value: 3 Notes: <ul style="list-style-type: none">● Up to two PFC priorities can be simultaneously enabled, except for the NE10032, where the limit is one priority.● The PFC priority flow map must not contain a combination of enabled and disabled priorities. Configure ETS appropriately and then enable PFC to avoid configuration issues.

Response

Response Body (JSON)	{ "state":"{off on}", "priority_map":"{priority_map}" }
----------------------	--

where:

Element	Description
state	The status of PFC on the switch. Valid value: <ul style="list-style-type: none">● <i>off (disabled)</i>● <i>on (enabled)</i>
priority_map	The PFC priority flow map. Valid value: <ul style="list-style-type: none">● list of enabled priorities: 0-7

Get PFC Interface Configuration

This command returns the current PFC configuration for a specific switch interface.

Request

Method Type	GET
Request URI	/nos/api/cfg/cee/pfc/{if_name}
Request Body (JSON)	

where:

Element	Description
<i>if_name</i>	The name of the switch interface. Valid values: <ul style="list-style-type: none">● <i>Interface name</i> (for example, <i>Ethernet1/12</i>)

Response

Response Body (JSON)	{ "if_name": "{if_name}", "state": "{off on}" }
----------------------	--

where:

Element	Description
<i>if_name</i>	The name of the switch interface. Valid values: <ul style="list-style-type: none">● <i>Interface name</i> (for example, <i>Ethernet1/12</i>)
<i>state</i>	The status of PFC on the switch. Valid value: <ul style="list-style-type: none">● <i>off (disabled)</i>● <i>on (enabled)</i>

Update PFC Interface Configuration

This command updates the PFC configuration for a specific switch interface.

Request

Method Type	PUT
Request URI	/nos/api/cfg/cee/pfc/{if_name}
Request Body (JSON)	{ "if_name": "{if_name}", "state": "{off on}" }

where:

Element	Description
if_name	The name of the switch interface. Valid values: <ul style="list-style-type: none">● <i>Interface name</i> (for example, <i>Ethernet1/12</i>)
state	The status of PFC on the switch. Valid value: <ul style="list-style-type: none">● <i>off (disabled)</i>● <i>on (enabled)</i> Default value: <i>on</i>

Response

Response Body (JSON)	{ "if_name": "{if_name}", "state": "{off on}" }
----------------------	--

where:

Element	Description
if_name	The name of the switch interface. Valid values: <ul style="list-style-type: none">● <i>Interface name</i> (for example, <i>Ethernet1/12</i>)
state	The status of PFC on the switch. Valid value: <ul style="list-style-type: none">● <i>off (disabled)</i>● <i>on (enabled)</i>

Get PFC Interface Statistics

This command returns PFC statistics for a specific switch interface.

Request

Method Type	GET
Request URI	/nos/api/info/cee/pfc/counters/{if_name}
Request Body (JSON)	

Response

Response Body (JSON)	{ "if_name": "{if_name}", "pfc_received": {Rx count}, "pfc_sent": {Tx count} }
----------------------	--

where:

Element	Description
if_name	The name of the switch interface. Valid values: <ul style="list-style-type: none">● <i>Interface name</i> (for example, <i>Ethernet1/12</i>)
pfc_received	The number of received PFC packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
pfc_sent	The number of sent PFC packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>

Get ETS Configuration

This command returns the current Enhanced Transmission Selection (ETS) configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/cee/ets
Request Body (JSON)	

Response

Response Body (JSON)	<pre>[{ "pgid": 0, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" }, { "pgid": 1, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" }, { "pgid": 2, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" }, { "pgid": 3, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" }, { "pgid": 4, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" }, { "pgid": 5, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" }, { "pgid": 6, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" }, { "pgid": 7, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" }, { "pgid": 15, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" },]</pre>
----------------------	---

where:

Element	Description
pgid	The ID of the ETS priority group. Valid value: <ul style="list-style-type: none">● 0-7, or 15
bandwidth	The bandwidth percentage allocated to the priority group. Valid value: <ul style="list-style-type: none">● 0-100
priority_pgid_mapping	The priorities mapped to the priority group. Valid value: <ul style="list-style-type: none">● 0-7

Update ETS Configuration

This command updates the ETS configuration.

Request

Method Type	PUT
Request URI	/nos/api/cfg/cee/ets
Request Body (JSON)	<pre>[{ "pgid": 0, "bandwidth": "{bandwidth}", "priority_pgid_mapping": "{priority_map}" }, { "pgid": 1, "bandwidth": "{bandwidth}", "priority_pgid_mapping": "{priority_map}" }, { "pgid": 2, "bandwidth": "{bandwidth}", "priority_pgid_mapping": "{priority_map}" }, { "pgid": 3, "bandwidth": "{bandwidth}", "priority_pgid_mapping": "{priority_map}" }, { "pgid": 4, "bandwidth": "{bandwidth}", "priority_pgid_mapping": "{priority_map}" }, { "pgid": 5, "bandwidth": "{bandwidth}", "priority_pgid_mapping": "{priority_map}" }, { "pgid": 6, "bandwidth": "{bandwidth}", "priority_pgid_mapping": "{priority_map}" }, { "pgid": 7, "bandwidth": "{bandwidth}", "priority_pgid_mapping": "{priority_map}" }, { "pgid": 15, "bandwidth": "{bandwidth}", "priority_pgid_mapping": "{priority_map}" },]</pre>

where:

Element	Description
<code>pgid</code>	The ID of the ETS priority group. Valid value: <ul style="list-style-type: none">● 0-7, or 15
<code>bandwidth</code>	The bandwidth percentage allocated to the priority group. Valid value: <ul style="list-style-type: none">● 0-100 Note: The total bandwidth percentage for all priority groups must not exceed 100%
<code>priority_pgid_mapping</code>	The priorities mapped to the priority group. Valid value: <ul style="list-style-type: none">● 0-7

Response

Response Body (JSON)	<pre>[{ "pgid": 0, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" }, { "pgid": 1, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" }, { "pgid": 2, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" }, { "pgid": 3, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" }, { "pgid": 4, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" }, { "pgid": 5, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" }, { "pgid": 6, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" }, { "pgid": 7, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" }, { "pgid": 15, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" },]</pre>
----------------------	---

where:

Element	Description
pgid	The ID of the ETS priority group. Valid value: <ul style="list-style-type: none">● 0-7, or 15
bandwidth	The bandwidth percentage allocated to the priority group. Valid value: <ul style="list-style-type: none">● 0-100
priority_pgid_mapping	The priorities mapped to the priority group. Valid value: <ul style="list-style-type: none">● 0-7

Get Application Protocol Configuration

This command returns the current application protocol configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/cee/app-proto
Request Body (JSON)	

Response

Response Body (JSON)	[{ "config_name": "{config_name}", "protocol": "{protocol}", "protoid": "{proto_id}", "priority": "{priority}" },]
----------------------	---

where:

Element	Description
config_name	The name of application protocol configuration. Valid value: <ul style="list-style-type: none">● <i>string</i>
protocol	The name of the protocol Valid value: <ul style="list-style-type: none">● <i>string</i> (for example, Ethertype, TCP, or UDP)
protoid	The protocol identifier. Valid values: <ul style="list-style-type: none">● <i>hexadecimal</i> for Ethernet type (for example, <i>0x8900</i>)● <i>fcoe</i>, <i>iscsi</i>, <i>roce</i>, or <i>rocev2</i> for well known protocols● <i>0-65535</i> for TCP or UDP ports
priority	The priority mapped to the application protocol configuration. Valid value: <ul style="list-style-type: none">● <i>0-7</i>

Create Application Protocol Configuration

This command creates a new application protocol configuration.

Request

Method Type	POST
Request URI	/nos/api/cfg/cee/app-proto
Request Body (JSON)	[{ "config_name": "{config_name}", "protocol": "{protocol}", "protoid": "{proto_id}", "priority": "{priority}" },]

where:

Element	Description
config_name	The name of application protocol configuration. Valid value: <ul style="list-style-type: none">● <i>string</i>
protocol	(Optional) The unique name of the configured application protocol. Valid value: <ul style="list-style-type: none">● <i>string</i> (for example, Ethertype, TCP, or UDP) Note: For well known protocols (fcoe, iscsi, roce, rocev2) this variable is not mandatory. For user defined protocols, the value of the variable must be <i>ethertype</i> and <i>protoid</i> must be a valid Ethernet type value (0x800 - 0x9100)

Element	Description
protoId	<p>The protocol identifier. Valid values:</p> <ul style="list-style-type: none"> ● <i>hexadecimal</i> for Ethernet type (for example, <i>0x8900</i>) ● <i>fcoe</i>, <i>iscsi</i>, <i>roce</i>, or <i>rocev2</i> for well known protocols ● <i>0-65535</i> for TCP or UDP ports <p>Note: This variable is optional for well known protocols</p> <p>To create a new application protocol for other proto-IDs, protocol information is required as showed in the following example for TCP port 8090.</p> <pre>Protocol ProtoId Priorities ConfigName ===== Ethertype fcoe 5 fcoe_app TCP iSCSI 4 iscsi_app UDP RoCEv2 3 rocev2_app Ethertype 0x8900 1 my_eth_app</pre>
priority	<p>The priority mapped to the application protocol configuration. Valid value:</p> <ul style="list-style-type: none"> ● <i>0-7</i>

Response

Response Body (JSON)	[{ "config_name": "{config_name}", "protocol": "{protocol}", "protoId": "{proto_id}", "priority": "{priority}" },]
----------------------	---

where:

Element	Description
config_name	<p>The name of application protocol configuration. Valid value:</p> <ul style="list-style-type: none"> ● <i>string</i>
protocol	<p>The name of the protocol Valid value:</p> <ul style="list-style-type: none"> ● <i>string</i> (for example, Ethertype, TCP, or UDP)

Element	Description
protoid	The protocol identifier. Valid value: <ul style="list-style-type: none">● <i>hexadecimal</i> for Ethernet type (for example, <i>0x8900</i>)● fcoe, iscsi, roce, or rocev2 for well known protocols● <i>0-65535</i> for TCP or UDP ports
priority	The priority mapped to the application protocol configuration. Valid value: <ul style="list-style-type: none">● <i>0-7</i>

Delete Application Protocol Configuration

This command deletes an application protocol configuration.

Request

Method Type	DELETE
Request URI	/nos/api/cfg/cee/app-proto/{ <i>config_name</i> }
Request Body (JSON)	

where:

Element	Description
<i>config_name</i>	The name of application protocol configuration. Valid value: <ul style="list-style-type: none">● <i>string</i>

Get DCBX Configuration

This command returns the current Data Center Bridging Exchange (DCBX) configuration for a specific switch interface.

Request

Method Type	GET
Request URI	/nos/api/cfg/cee/dcbx/{if_name}
Request Body (JSON)	

Response

Response Body (JSON)	{ "if_name": "{if_name}", "dcbx_state": "{enable disable}", "pfc_advt": "{on off}", "ets_advt": "{on off}", "app_advt": "{on off}" }
----------------------	--

where:

Element	Description
if_name	The name of the switch interface. Valid values: <ul style="list-style-type: none">• <i>Interface name</i> (for example, <i>Ethernet1/12</i>)
dcbx_state	The status of DCBX on the interface. Valid value: <ul style="list-style-type: none">• <i>enable</i>• <i>disable</i>
pfc_advt	The status of PFC local configuration advertisement to the DCBX peer. Valid value: <ul style="list-style-type: none">• <i>on</i>• <i>off</i>

Element	Description
<code>ets advt</code>	The status of ETS local configuration advertisement to the DCBX peer. Valid value: <ul style="list-style-type: none">● <i>on</i>● <i>off</i>
<code>app advt</code>	The status of application protocol local configuration advertisement to the DCBX peer. Valid value: <ul style="list-style-type: none">● <i>on</i>● <i>off</i>

Update DCBX Configuration

This command updates the DCBX configuration for a specific switch interface.

Request

Method Type	PUT
Request URI	/nos/api/cfg/cee/dcbx/{if_name}
Request Body (JSON)	{ "if_name": "{if_name}", "dcbx state": "{enable disable}", "pfc advt": "{on off}", "ets advt": "{on off}", "app advt": "{on off}" }

where:

Element	Description
if_name	The name of the switch interface. Valid values: <ul style="list-style-type: none">• <i>Interface name</i> (for example, <i>Ethernet1/12</i>)
dcbx state	The status of DCBX on the interface. Valid value: <ul style="list-style-type: none">• <i>enable</i>• <i>disable</i> Default value: <i>on</i>
pfc advt	The status of PFC local configuration advertisement to the DCBX peer. Valid value: <ul style="list-style-type: none">• <i>on</i>• <i>off</i> Default value: <i>on</i>

Element	Description
ets_advt	The status of ETS local configuration advertisement to the DCBX peer. Valid value: <ul style="list-style-type: none">● <i>on</i>● <i>off</i> Default value: <i>on</i>
app_advt	The status of application protocol local configuration advertisement to the DCBX peer. Valid value: <ul style="list-style-type: none">● <i>on</i>● <i>off</i> Default value: <i>on</i>

Response

Response Body (JSON)	{ "if_name": "{ <i>if_name</i> }", "dcbx_state": "{enable disable}", "pfc_advt": "{on off}", "ets_advt": "{on off}", "app_advt": "{on off}" }
----------------------	---

where:

Element	Description
if_name	The name of the switch interface. Valid values: <ul style="list-style-type: none">● <i>Interface name</i> (for example, <i>Ethernet1/12</i>)
dcbx_state	The status of DCBX on the interface. Valid value: <ul style="list-style-type: none">● <i>enable</i>● <i>disable</i>
pfc_advt	The status of PFC local configuration advertisement to the DCBX peer. Valid value: <ul style="list-style-type: none">● <i>on</i>● <i>off</i>

Element	Description
<code>ets advt</code>	The status of ETS local configuration advertisement to the DCBX peer. Valid value: <ul style="list-style-type: none">● <i>on</i>● <i>off</i>
<code>app advt</code>	The status of application protocol local configuration advertisement to the DCBX peer. Valid value: <ul style="list-style-type: none">● <i>on</i>● <i>off</i>

Get DCBX Control Interface Information

This command returns DCBX control information for a specific switch interface.

Request

Method Type	GET
Request URI	/nos/api/info/cee/dcbx/ctrl/{if_name}
Request Body (JSON)	

Response

Response Body (JSON)	{ "if_name": "{if_name}", "DCBX Admin-state": "{enable disable}", "DCBX version": "{dcbx_version}" }
----------------------	--

where:

Element	Description
if_name	The name of the switch interface. Valid values: <ul style="list-style-type: none">● <i>Interface name</i> (for example, <i>Ethernet1/12</i>)
DCBX Admin-state	The status of DCBX on the switch interface. Valid value: <ul style="list-style-type: none">● <i>enable</i>● <i>disable</i>
DCBX version	The version of DCBX. Valid value: <ul style="list-style-type: none">● <i>DCBX CEE (v1.01)</i>● <i>DCBX IEEE 802.1Qaz (v2.5)</i>
seq_no	The sequence number, in case of DCBX CEE.
ack_no	The acknowledgement number, in case of DCBX CEE.

Get DCBX Administrative Interface Information

This command returns DCBX administrative information for a specific switch interface.

Request

Method Type	GET
Request URI	/nos/api/info/cee/dcbx/admin/{if_name}
Request Body (JSON)	

Response

Response Body (JSON)	{ "if_name": "{if_name}", "dcbx_state": "{enable disable}", "pfc_admin": { "state": "{on off}", "advt": "{on off}", "willing": "{on off}", "max_cap": "{max_cap}", "syncd": "{on off}", "priority_map": "{priority_map}" }, "ets_admin": { "state": "{on off}", "advt": "{on off}", "willing": "{on off}", "syncd": "{on off}", "tcg": [{ "pgid": 0, "bandwidth": "{bandwidth}", "priority_pgid_mapping": "{priority_map}" }, { "pgid": 1, "bandwidth": "{bandwidth}", "priority_pgid_mapping": "{priority_map}" }, { "pgid": 2, "bandwidth": "{bandwidth}", "priority_pgid_mapping": "{priority_map}" }, { "pgid": 3, "bandwidth": "{bandwidth}", "priority_pgid_mapping": "{priority_map}" }, ...] } }
----------------------	---

Response Body (JSON)	<pre> ... { "pgid": 4, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" }, { "pgid": 5, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" }, { "pgid": 6, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" }, { "pgid": 7, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" }, { "pgid": 15, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" },], "app_admin": { "state":"{on off}", "advt":"{on off}", "willing":"{on off}", }, "app_protocol": [{ "protocol":"{protocol}", "protostr":"{proto_str}", "priority":"{priority}" }] } </pre>
----------------------	--

where:

Element	Description
if_name	The name of the switch interface. Valid value: <ul style="list-style-type: none">● <i>Interface name</i> (for example, <i>Ethernet1/12</i>)
dcbx state	The status of DCBX on the interface. Valid values: <ul style="list-style-type: none">● <i>enable</i>● <i>disable</i>
pfc_admin	The current PFC configuration.

Element	Description
state	The status of PFC on the switch interface. Valid values: <ul style="list-style-type: none">● <i>on</i>● <i>off</i>
advt	The status of PFC local configuration advertisement to the DCBX peer. Valid values: <ul style="list-style-type: none">● <i>on</i>● <i>off</i>
willing	Whether the switch is “willing” to learn PFC configurations from a DCBX peer. Valid values: <ul style="list-style-type: none">● <i>on</i>● <i>off</i>
max_cap	The maximum PFC capability. Valid value: <ul style="list-style-type: none">● <i>integer</i>
syncd	The status of PFC information synchronization. Valid values: <ul style="list-style-type: none">● <i>on</i>● <i>off</i>
priority_map	The PFC priorities enabled on the interface. Valid value: <ul style="list-style-type: none">● <i>0-7</i>
ets_admin	The current ETS configuration.
state	The status of ETS on the switch interface. Valid values: <ul style="list-style-type: none">● <i>on</i>● <i>off</i>
advt	The status of ETS local configuration advertisement to the DCBX peer. Valid values: <ul style="list-style-type: none">● <i>on</i>● <i>off</i>
willing	Whether the switch is “willing” to learn ETS configurations from a DCBX peer. Valid values: <ul style="list-style-type: none">● <i>on</i>● <i>off</i>

Element	Description
syncd	The status of ETS information synchronization. Valid values: <ul style="list-style-type: none">● <i>on</i>● <i>off</i>
pgid	The ID of the ETS priority group. Valid value: <ul style="list-style-type: none">● 0-7, or 15
bandwidth	The bandwidth percentage allocated to the priority group. Valid value: <ul style="list-style-type: none">● 0-100
priority_pgid_mapping	The priorities mapped to the priority group. Valid value: <ul style="list-style-type: none">● 0-7
app_admin	The current application control configuration.
state	The status of application control on the switch interface. Valid values: <ul style="list-style-type: none">● <i>on</i>● <i>off</i>
advt	The status of application control local configuration advertisement to the DCBX peer. Valid values: <ul style="list-style-type: none">● <i>on</i>● <i>off</i>
willing	Whether the switch is “willing” to learn application control configurations from a DCBX peer. Valid values: <ul style="list-style-type: none">● <i>on</i>● <i>off</i>
app_protocol	The list of created application protocols. Valid value: <ul style="list-style-type: none">● <i>string</i>
protocol	The name of the protocol Valid value: <ul style="list-style-type: none">● <i>string</i> (for example, Ethertype, TCP, or UDP)

Element	Description
protostr	The protocol identifier. Valid value: <ul style="list-style-type: none">● <i>string</i> for Ethertype or well known protocols● 0-65535 for TCP or UDP ports
priority	The priority mapped to the application protocol configuration. Valid value: <ul style="list-style-type: none">● 0-7

Get DCBX Operational Interface Information

This command returns DCBX operational information for a specific switch interface.

Request

Method Type	GET
Request URI	/nos/api/info/cee/dcbx/oper/{if_name}
Request Body (JSON)	

Response

Response Body (JSON)	{ "if_name": "{if_name}", "dcbx_state": "{enable disable}", "pfc_admin": { "state": "{on off}", "max_cap": "{max_cap}", "syncd": "{on off}", "priority_map": "{priority_map}" }, "ets_admin": { "state": "{on off}", "tcg": [{ "pgid": 0, "bandwidth": "{bandwidth}", "priority_pgid_mapping": "{priority_map}" }, { "pgid": 1, "bandwidth": "{bandwidth}", "priority_pgid_mapping": "{priority_map}" }, { "pgid": 2, "bandwidth": "{bandwidth}", "priority_pgid_mapping": "{priority_map}" }, { "pgid": 3, "bandwidth": "{bandwidth}", "priority_pgid_mapping": "{priority_map}" }, { "pgid": 4, "bandwidth": "{bandwidth}", "priority_pgid_mapping": "{priority_map}" }, ...] }
----------------------	---

Response Body (JSON)	<pre> ... { "pgid": 5, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" }, { "pgid": 6, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" }, { "pgid": 7, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" }, { "pgid": 15, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" },], }, "app_admin": { "state":"{on off}", }, "app_protocol": [{ "protocol":"{protocol}", "protostr":"{proto_str}", "priority":"{priority}" },] } } </pre>
----------------------	---

where:

Element	Description
<code>if_name</code>	The name of the switch interface. Valid value: <ul style="list-style-type: none">● <i>Interface name</i> (for example, <i>Ethernet1/12</i>)
<code>dcbx state</code>	The status of DCBX on the interface. Valid values: <ul style="list-style-type: none">● <i>enable</i>● <i>disable</i>
<code>pfc_admin</code>	The current PFC configuration.
<code>state</code>	The status of PFC on the switch interface. Valid values: <ul style="list-style-type: none">● <i>on</i>● <i>off</i>

Element	Description
max_cap	The maximum PFC capability. Valid value: <ul style="list-style-type: none">● <i>integer</i>
syncd	The status of PFC information synchronization. Valid values: <ul style="list-style-type: none">● <i>on</i>● <i>off</i>
priority_map	The PFC priorities enabled on the interface. Valid value: <ul style="list-style-type: none">● <i>0-7</i>
ets_admin	The current ETS configuration.
state	The status of ETS on the switch interface. Valid values: <ul style="list-style-type: none">● <i>on</i>● <i>off</i>
pgid	The ID of the ETS priority group. Valid value: <ul style="list-style-type: none">● <i>0-7, or 15</i>
bandwidth	The bandwidth percentage allocated to the priority group. Valid value: <ul style="list-style-type: none">● <i>0-100</i>
priority_pgid_mapping	The priorities mapped to the priority group. Valid value: <ul style="list-style-type: none">● <i>0-7</i>
app_admin	The current application control configuration.
state	The status of application control on the switch interface. Valid values: <ul style="list-style-type: none">● <i>on</i>● <i>off</i>
app_protocol	The list of created application protocols. Valid value: <ul style="list-style-type: none">● <i>string</i>
protocol	The name of the protocol Valid value: <ul style="list-style-type: none">● <i>string</i> (for example, Ethertype, TCP, or UDP)

Element	Description
protostr	The protocol identifier. Valid value: <ul style="list-style-type: none">● <i>string</i> for Ethertype or well known protocols● 0-65535 for TCP or UDP ports
priority	The priority mapped to the application protocol configuration. Valid value: <ul style="list-style-type: none">● 0-7

Get DCBX Remote Interface Information

This command returns DCBX remote information for a specific switch interface.

Request

Method Type	GET
Request URI	/nos/api/info/cee/dcbx/remote/{if_name}
Request Body (JSON)	

Response

Response Body (JSON)	{ "if_name": "{if_name}", "dcbx_state": "{enable disable}", "pfc_admin": { "state": "{on off}", "willing": "{on off}", "max_cap": "{max_cap}", "priority_map": "{priority_map}" }, "ets_admin": { "state": "{on off}", "willing": "{on off}", "tcg": [{ "pgid": 0, "bandwidth": "{bandwidth}", "priority_pgid_mapping": "{priority_map}" }, { "pgid": 1, "bandwidth": "{bandwidth}", "priority_pgid_mapping": "{priority_map}" }, { "pgid": 2, "bandwidth": "{bandwidth}", "priority_pgid_mapping": "{priority_map}" }, { "pgid": 3, "bandwidth": "{bandwidth}", "priority_pgid_mapping": "{priority_map}" }, { "pgid": 4, "bandwidth": "{bandwidth}", "priority_pgid_mapping": "{priority_map}" }, ...] }
----------------------	---

Response Body (JSON)	<pre> ... { "pgid": 5, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" }, { "pgid": 6, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" }, { "pgid": 7, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" }, { "pgid": 15, "bandwidth":"{bandwidth}", "priority_pgid_mapping":"{priority_map}" },], }, "app_admin": { "state":"{on off}", "willing":"{on off}", }, "app_protocol": [{ "protocol":"{protocol}", "protostr":"{proto_id}", "priority":"{priority}" },] } </pre>
----------------------	--

where:

Element	Description
<code>if_name</code>	The name of the switch interface. Valid value: <ul style="list-style-type: none"> ● <i>Interface name</i> (for example, <i>Ethernet1/12</i>)
<code>dcbx_state</code>	The status of DCBX on the interface. Valid values: <ul style="list-style-type: none"> ● <i>enable</i> ● <i>disable</i>
<code>pfc_admin</code>	The current PFC configuration.
<code>state</code>	The status of PFC on the switch interface. Valid values: <ul style="list-style-type: none"> ● <i>on</i> ● <i>off</i>

Element	Description
willing	Whether the switch is “willing” to learn PFC configurations from a DCBX peer. Valid values: <ul style="list-style-type: none">● <i>on</i>● <i>off</i>
max_cap	The maximum PFC capability. Valid value: <ul style="list-style-type: none">● <i>integer</i>
priority_map	The PFC priorities enabled on the interface. Valid value: <ul style="list-style-type: none">● 0-7
ets_admin	The current ETS configuration.
state	The status of ETS on the switch interface. Valid values: <ul style="list-style-type: none">● <i>on</i>● <i>off</i>
willing	Whether the switch is “willing” to learn ETS configurations from a DCBX peer. Valid values: <ul style="list-style-type: none">● <i>on</i>● <i>off</i>
pgid	The ID of the ETS priority group. Valid value: <ul style="list-style-type: none">● 0-7, or 15
bandwidth	The bandwidth percentage allocated to the priority group. Valid value: <ul style="list-style-type: none">● 0-100
priority_pgid_mapping	The priorities mapped to the priority group. Valid value: <ul style="list-style-type: none">● 0-7
app_admin	The current application control configuration.
state	The status of application control on the switch interface. Valid values: <ul style="list-style-type: none">● <i>on</i>● <i>off</i>
willing	Whether the switch is “willing” to learn application control configurations from a DCBX peer. Valid values: <ul style="list-style-type: none">● <i>on</i>● <i>off</i>

Element	Description
<code>app_protocol</code>	The list of created application protocols. Valid value: <ul style="list-style-type: none">● <i>string</i>
<code>protocol</code>	The name of the protocol Valid value: <ul style="list-style-type: none">● <i>string</i> (for example, Ethertype, TCP, or UDP)
<code>protostr</code>	The protocol identifier. Valid value: <ul style="list-style-type: none">● <i>string</i> for Ethertype or well known protocols● 0-65535 for TCP or UDP ports
<code>priority</code>	The priority mapped to the application protocol configuration. Valid value: <ul style="list-style-type: none">● 0-7

DHCP

The following DHCP URIs are available:

- /nos/api/cfg/dhcp GET, PUT
- /nos/api/cfg/dhcp_client/interface GET
- /nos/api/cfg/dhcp_client/interface/<if_name> PUT
- /nos/api/cfg/dhcp_client/interface/class_id/<if_name> DELETE
- /nos/api/cfg/dhcp_relay GET, PUT
- /nos/api/cfg/dhcp_relay/interface GET
- /nos/api/cfg/dhcp_relay/interface/<if_name> GET, PUT
- /nos/api/cfg/dhcp_relay/interface/<if_name>/<relay_address> DELETE
- /nos/api/cfg/dhcpsnp/entry GET, POST
- /nos/api/cfg/dhcpsnp/entry/<mac_vlan_ifname> DELETE
- /nos/api/cfg/dhcpsnp GET, PUT
- /nos/api/cfg/dhcpsnp/vlan GET
- /nos/api/cfg/dhcpsnp/vlan/<vlan_id> PUT, DELETE
- /nos/api/cfg/dhcpsnp/trust GET, PUT
- /nos/api/info/dhcpsnp/cnt GET, DELETE

The following DHCP commands are available:

- [Get the Global DHCP Client Feature Property](#)
- [Update DHCP Client Feature Property](#)
- [Get DHCP Client Properties of All Interfaces](#)
- [Update DHCP Client Interface Properties](#)
- [Delete the Vendor Class Identifier of an Interface](#)
- [Get the Global DHCP Relay Service Property](#)
- [Update the Global DHCP Relay Service Property](#)
- [Get the DHCP Relay Properties of All Interfaces](#)
- [Get DHCP Relay Interface Properties](#)
- [Update DHCP Relay Interface Properties](#)
- [Delete DHCP Relay Interface Properties](#)
- [Get DHCP Snooping Binding Table Entry](#)
- [Create DHCP Snooping Binding Table Entry](#)
- [Delete DHCP Snooping Binding Table Entry](#)
- [Get DHCP Snooping Configuration](#)

- Update DHCP Snooping Configuration
- Get DHCP Snooping VLAN Configuration
- Update DHCP Snooping VLAN Configuration
- Delete DHCP Snooping VLAN Configuration
- Get DHCP Snooping Trusted Ports Configuration
- Update DHCP Snooping Trusted Ports Configuration
- Get DHCP Snooping Statistics
- Clear DHCP Snooping Statistics

Get the Global DHCP Client Feature Property

Get the global DHCP client feature property (whether or not DHCP is globally enabled).

Request

Method Type	GET
Request URI	/nos/api/cfg/dhcp
Request Body (JSON)	

Response

Response Body (JSON)	{ "ena_dhcp_feature": "<ena_dhcp_feature>" }
-------------------------	--

where:

Element	Description
<i>ena_dhcp_feature</i>	Whether the DHCP client feature is enabled globally; one of yes, no. Default value: yes. Note: If disabled globally, DHCP client and DHCP relay is disabled on all interfaces. If enabled globally, the per-interface setting of DHCP client and DHCP relay takes effect.

Update DHCP Client Feature Property

Set the global DHCP client feature property (whether or not DHCP is globally enabled).

Request

Method Type	PUT
Request URI	/nos/api/cfg/dhcp
Request Body (JSON)	{ "ena_dhcp_feature": "<ena_dhcp_feature>" }

where:

Element	Description
<i>ena_dhcp_feature</i>	Enable or disable the DHCP client feature globally; one of yes, no. Default value: yes. Note: If disabled globally, DHCP client and DHCP relay is disabled on all interfaces. If enabled globally, the per-interface setting of DHCP client and DHCP relay takes effect.

Response

Response Body (JSON)	{ "ena_dhcp_feature": "<ena_dhcp_feature>" }
-------------------------	--

where:

Element	Description
<i>ena_dhcp_feature</i>	Whether the DHCP client feature is enabled globally; one of yes, no. Default value: yes. Note: If disabled globally, DHCP client and DHCP relay is disabled on all interfaces. If enabled globally, the per-interface setting of DHCP client and DHCP relay takes effect.

Get DHCP Client Properties of All Interfaces

Get DHCP client properties of all interfaces.

Request

Method Type	GET
Request URI	/nos/api/cfg/dhcp_client/interface/
Request Body (JSON)	

Response

Response Body (JSON)	{ "if_name": "<if_name>", "ena_v4_client": "<ena_v4_client>", "ena_v6_client": "<ena_v6_client>", "req_hostname": "<req_hostname>", "req_ntp_server": "<req_ntp_server>", "req_log_server": "<req_log_server>", "class_id": "<class_id>" }
-------------------------	--

where:

Element	Description
<i>if_name</i>	Interface name. Note: The interface must exist.
<i>ena_v4_client</i>	Whether the DHCPv4 client is enabled on the interface; one of Yes, No. Default values: Yes for the management interface and No for other switch interfaces.
<i>ena_v6_client</i>	Whether the DHCPv6 client is enabled on the interface; one of Yes, No. Default values: Yes for the management interface and No for other switch interfaces.
<i>req_hostname</i>	Whether a request has been issued for the host name option on an interface; one of Yes, No. Default value: No.
<i>req_ntp_server</i>	Whether a request has been issued for the NTP-server option on an interface; one of Yes, No. Default value: No.
<i>req_log_server</i>	Whether a request has been issued for the Log server option on an interface; one of Yes, No. Default value: No.
<i>class_id</i>	The name of Vendor class identifier. Note: The Vendor class identifier name must exist.

Update DHCP Client Interface Properties

Updates DHCP client properties of a specific interface.

Request

Method Type	PUT
Request URI	/nos/api/cfg/dhcp_client/interface/<if_name>
Request Body (JSON)	{ "if_name": "<if_name>", "ena_v4_client": "<ena_v4_client>", "ena_v6_client": "<ena_v6_client>", "req_hostname": "<req_hostname>", "req_ntp_server": "<req_ntp_server>", "req_log_server": "<req_log_server>", "class_id": "<class_id>" }

where:

Element	Description
<i>if_name</i>	Interface name. Note: The interface must exist.
<i>ena_v4_client</i>	Whether the DHCPv4 client is enabled on the interface; one of Yes, No. Default values: Yes for the management interface and No for other switch interfaces.
<i>ena_v6_client</i>	Whether the DHCPv6 client is enabled on the interface; one of Yes, No. Default values: Yes for the management interface and No for other switch interfaces.
<i>req_hostname</i>	Whether a request has been issued for the host name option on an interface; one of Yes, No. Default value: No.
<i>req_ntp_server</i>	Whether a request has been issued for the NTP-server option on an interface; one of Yes, No. Default value: No.
<i>req_log_server</i>	Whether a request has been issued for the Log server option on an interface; one of Yes, No. Default value: No.
<i>class_id</i>	The name of Vendor class identifier. Note: The Vendor class identifier name must exist.

Response

Response Body (JSON)	<pre>{ "if_name": "<if_name>", "ena_v4_client": "<ena_v4_client>", "ena_v6_client": "<ena_v6_client>", "req_hostname": "<req_hostname>", "req_ntp_server": "<req_ntp_server>", "req_log_server": "<req_log_server>", "class_id": "<class_id>" }</pre>
-------------------------	---

where:

Element	Description
<i>if_name</i>	Interface name. Note: The interface must exist.
<i>ena_v4_client</i>	Whether the DHCPv4 client is enabled on the interface; one of Yes, No. Default values: Yes for the management interface and No for other switch interfaces.
<i>ena_v6_client</i>	Whether the DHCPv6 client is enabled on the interface; one of Yes, No. Default values: Yes for the management interface and No for other switch interfaces.
<i>req_hostname</i>	Whether a request has been issued for the host name option on an interface; one of Yes, No. Default value: No.
<i>req_ntp_server</i>	Whether a request has been issued for the NTP-server option on an interface; one of Yes, No. Default value: No.
<i>req_log_server</i>	Whether a request has been issued for the Log server option on an interface; one of Yes, No. Default value: No.
<i>class_id</i>	The name of Vendor class identifier. Note: The Vendor class identifier name must exist.

Delete the Vendor Class Identifier of an Interface

Delete the vendor class identifier of a specific interface.

Request

Method Type	DELETE
Request URI	/nos/api/cfg/dhcp_client/interface/class_id/<if_name>
Request Body (JSON)	

where:

Element	Description
<i>if_name</i>	Interface name. Note: The interface must exist.

Response

Response Body (JSON)	
-------------------------	--

Get the Global DHCP Relay Service Property

Get the global DHCP relay service property (whether the relay service has been enabled globally) class identifier of a specific interfaces.

Request

Method Type	GET
Request URI	/nos/api/cfg/dhcp_relay
Request Body (JSON)	

Response

Response Body (JSON)	{ "ena_v4_relay": "<ena_v4_relay>", "ena_v6_relay": "<ena_v6_relay>" }
-------------------------	---

where:

Element	Description
<i>ena_v4_relay</i>	Whether DHCPv4 relay is enabled on the interface; one of Yes, No. Default value: Yes. Note: If disabled globally, DHCPv4 relay is disabled on all interfaces. If DHCPv4 relay service is enabled globally, the per-interface setting of DHCPv4 relay takes effect.
<i>ena_v6_relay</i>	Whether DHCPv6 relay is enabled on the interface; one of Yes, No. Default value: Yes. Note: If disabled globally, DHCPv6 relay is disabled on all interfaces. If DHCPv6 relay service is enabled globally, the per-interface setting of DHCPv6 relay takes effect.

Update the Global DHCP Relay Service Property

Update the global DHCP relay service property (whether the relay service has been enabled globally) class identifier of a specific interfaces.

Request

Method Type	PUT
Request URI	/nos/api/cfg/dhcp_relay
Request Body (JSON)	

Response

Response Body (JSON)	{ "ena_v4_relay": "<ena_v4_relay>", "ena_v6_relay": "<ena_v6_relay>", }
-------------------------	--

where:

Element	Description
<i>ena_v4_relay</i>	Whether DHCPv4 relay is enabled on the interface; one of Yes, No. Default value: Yes. Note: If disabled globally, DHCPv4 relay is disabled on all interfaces. If DHCPv4 relay service is enabled globally, the per-interface setting of DHCPv4 relay takes effect.
<i>ena_v6_relay</i>	Whether DHCPv6 relay is enabled on the interface; one of Yes, No. Default value: Yes. Note: If disabled globally, DHCPv6 relay is disabled on all interfaces. If DHCPv6 relay service is enabled globally, the per-interface setting of DHCPv6 relay takes effect.

Get the DHCP Relay Properties of All Interfaces

Get the DHCP relay properties for all interfaces.

Request

Method Type	GET
Request URI	/nos/api/cfg/dhcp_relay/interface/
Request Body (JSON)	

Response

Response Body (JSON)	{ "if_name": "<if_name>", "dhcpv4_relay": [{ "v4_relay_addr": "<v4_relay_addr>", }], "dhcpv6_relay": [{ "v6_relay_addr": "<v6_relay_addr>", "v6_relay_out_if": "<v6_relay_out_if>" }] }
-------------------------	--

where:

Element	Description
<i>if_name</i>	Interface name. Note: The interface must exist.
<i>v4_relay_addr</i>	IPv4 address of the relay server; a valid IPv4 address.
<i>v6_relay_addr</i>	IPv6 address of the relay server; a valid IPv6 address.
<i>v6_relay_out_if</i>	Outgoing interface of the relay service. Note: The interface must exist.

Get DHCP Relay Interface Properties

Get the DHCP relay interface properties for a specific interfaces.

Request

Method Type	GET
Request URI	/nos/api/cfg/dhcp_relay/interface/<if_name>
Request Body (JSON)	

where:

Element	Description
<i>if_name</i>	Interface name. Note: The interface must exist.

Response

Response Body (JSON)	[{ "if_name": "<if_name>", "dhcpv4_relay": [{ "v4_relay_addr": "<v4_relay_addr>", }], "dhcpv6_relay": [{ "v6_relay_addr": "<v6_relay_addr>", "v6_relay_out_if": "<v6_relay_out_if>" }] }]
-------------------------	--

where:

Element	Description
<i>if_name</i>	Interface name. Note: The interface must exist.
<i>v4_relay_addr</i>	IPv4 address of the relay server; a valid IPv4 address.
<i>v6_relay_addr</i>	IPv6 address of the relay server; a valid IPv6 address.
<i>v6_relay_out_if</i>	Outgoing interface of the relay service. Note: The interface must exist.

Notes:

- The response body will be empty if no DHCP relay configuration has been made on the specified interface.
- Only the what is configured will be displayed. For example, if no `dhcpv6_relay` is configured, none will be displayed.

Update DHCP Relay Interface Properties

Update the DHCP relay interface properties for a specific interface.

Request

Method Type	PUT
Request URI	/nos/api/cfg/dhcp_relay/interface/<if_name>
Request Body (JSON)	{ "if_name": "<if_name>", "dhcpv4_relay": [{ "v4_relay_addr": "<v4_relay_addr>", }], "dhcpv6_relay": [{ "v6_relay_addr": "<v6_relay_addr>", "v6_relay_out_if": "<v6_relay_out_if>" }] }

where:

Element	Description
<i>if_name</i>	Interface name. Note: The interface must exist.
<i>v4_relay_addr</i>	IPv4 address of the relay server; a valid IPv4 address.
<i>v6_relay_addr</i>	IPv6 address of the relay server; a valid IPv6 address.
<i>v6_relay_out_if</i>	Outgoing interface of the relay service. Note: The interface must exist.

Response

Response Body (JSON)	[{ "if_name": "<f_name>", "dhcpv4_relay": [{ "v4_relay_addr": "<v4_relay_addr>", }], "dhcpv6_relay": [{ "v6_relay_addr": "<v6_relay_addr>", "v6_relay_out_if": "<v6_relay_out_if>" }] }]
----------------------	---

where:

Element	Description
<i>if_name</i>	Interface name. Note: The interface must exist.
<i>v4_relay_addr</i>	IPv4 address of the relay server; a valid IPv4 address.
<i>v6_relay_addr</i>	IPv6 address of the relay server; a valid IPv6 address.
<i>v6_relay_out_if</i>	Outgoing interface of the relay service. Note: The interface must exist.

Delete DHCP Relay Interface Properties

Delete the DHCP relay interface properties for a specific interface.

Request

Method Type	DELETE
Request URI	/nos/api/cfg/dhcp_relay/interface/<if_name>/<relay_address>
Request Body (JSON)	

where:

Element	Description
<i>if_name</i>	Interface name. Note: The interface must exist.
<i>relay_address</i>	IPv4 or IPv6 address of the relay server; a valid IPv4 or IPv6 address. Note: If no relay address is specified, all relay server configuration information for this interface will be removed.

Response

Response Body (JSON)	
-------------------------	--

Get DHCP Snooping Binding Table Entry

This command returns the DHCP Snooping binding table entries.

Request

Method Type	GET
Request URI	/nos/api/cfg/dhcpsnp/entry
Request Body (JSON)	

Response

Response Body (JSON)	[{ "mac": "{mac address}", "ip_addr": "{ip address}", "lease_time": "{lease time in seconds}", "type": "{dynamic/static}", "vlan": "{vlan number}", "if_name": "{if name}" }]
----------------------	--

where:

Element	Description
mac	The MAC address of the binding table entry. Valid value: <ul style="list-style-type: none">● <i>MAC address in format XX:XX:XX:XX:XX:XX</i>
ip_addr	The IP address of the binding table entry. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
lease_time	The lease time, in seconds, for the binding table entry. Valid values: <ul style="list-style-type: none">● <i>1-4294967295</i>
type	The type of the binding table entry. Valid values: <ul style="list-style-type: none">● <i>dynamic</i>● <i>static</i>
vlan	The VLAN of the binding table entry. Valid values: <ul style="list-style-type: none">● <i>1-4093</i>
if_name	The name of the switch interface for the binding table entry. Valid values: <ul style="list-style-type: none">● <i>Interface name (for example, Ethernet1/12)</i>

Create DHCP Snooping Binding Table Entry

This command adds a DHCP Snooping binding table entry.

Request

Method Type	POST
Request URI	/nos/api/cfg/dhcpsnp/entry
Request Body (JSON)	{ "mac": "{mac address}", "ip_addr": "{ip address}", "lease_time": "{lease time in seconds}", "vlan": "{vlan number}", "if_name": "{if_name}" }

where:

Element	Description
mac	The MAC address of the binding table entry. Valid value: <ul style="list-style-type: none">● <i>MAC address in format XX:XX:XX:XX:XX:XX</i>
ip_addr	The IP address of the binding table entry. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
lease_time	The lease time, in seconds, for the binding table entry. Valid values: <ul style="list-style-type: none">● <i>1-4294967295</i>
vlan	The VLAN of the binding table entry. Valid values: <ul style="list-style-type: none">● <i>1-4093</i>
if_name	The name of the switch interface for the binding table entry. Valid values: <ul style="list-style-type: none">● <i>Interface name (for example, Ethernet1/12)</i>

Delete DHCP Snooping Binding Table Entry

This command removes an entry from the DHCP Snooping binding table.

Request

Method Type	DELETE
Request URI	/nos/api/cfg/dhcpsnp/entry/{mac_vlan_ifname}
Request Body (JSON)	

where:

Element	Description
<i>mac_vlan_ifname</i>	The MAC address, VLAN, or interface name to identify the binding table entry. Valid values: <ul style="list-style-type: none">• <i>MAC address in format XX:XX:XX:XX:XX:XX</i>• VLAN number: 1-4093• <i>Interface name (for example, Ethernet1/12)</i>

Get DHCP Snooping Configuration

This command gets the DHCP Snooping configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/dhcpsnp
Request Body (JSON)	

Response

Response Body (JSON)	{ "dhcpsnp_feature": "{enable/disable}", "option_82": "{enable/disable}" }
----------------------	---

where:

Element	Description
dhcpsnp_feature	The global status of the DHCP service on the switch. Valid values: <ul style="list-style-type: none">• <i>enable</i>• <i>disable</i>
option_82	The status of DHCP Option 82. Valid values: <ul style="list-style-type: none">• <i>enable</i>• <i>disable</i>

Update DHCP Snooping Configuration

This command updates the DHCP Snooping configuration.

Request

Method Type	PUT
Request URI	/nos/api/cfg/dhcpsnp
Request Body (JSON)	{ "dhcpsnp_feature": "{enable/disable}", "option_82": "{enable/disable}" }

Response

Response Body (JSON)	
----------------------	--

where:

Element	Description
dhcpsnp_feature	The global status of the DHCP service on the switch. Valid values: <ul style="list-style-type: none">● <i>enable</i>● <i>disable</i>
option_82	The status of DHCP Option 82. Valid values: <ul style="list-style-type: none">● <i>enable</i>● <i>disable</i>

Get DHCP Snooping VLAN Configuration

This command gets the DHCP Snooping VLAN configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/dhcpsnp/vlan
Request Body (JSON)	

Response

Response Body (JSON)	{ "vlan_enabled": "{vlan_id}", }
----------------------	--

where:

Element	Description
vlan_enabled	The VLAN for DHCP Snooping. Valid values: <ul style="list-style-type: none">• 1-4093

Update DHCP Snooping VLAN Configuration

This command updates the DHCP Snooping VLAN configuration.

Request

Method Type	PUT
Request URI	/nos/api/cfg/dhcpsnp/vlan
Request Body (JSON)	{ "vlan_enabled":{vlan_id} }

where:

Element	Description
vlan_enabled	The VLAN on which DHCP Snooping is enabled. Valid values: <ul style="list-style-type: none">● 1-4093

Delete DHCP Snooping VLAN Configuration

This command deletes the DHCP Snooping VLAN configuration.

Request

Method Type	DELETE
Request URI	/nos/api/cfg/dhcpsnp/vlan/{ <i>vlan_id</i> }
Request Body (JSON)	

where:

Element	Description
<i>vlan_id</i>	The VLAN for DHCP Snooping. Valid values: <ul style="list-style-type: none">• 1-4093

Get DHCP Snooping Trusted Ports Configuration

This command gets the DHCP Snooping trusted ports configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/dhcpsnp/trust
Request Body (JSON)	

Response

Response Body (JSON)	[{ "if_name": "{interface name}", "trusted": "{yes/no}" }]
----------------------	---

where:

Element	Description
if_name	The name of the switch interface to be configured as a DHCP Snooping trusted port. Valid values: <ul style="list-style-type: none">● <i>Interface name</i> (for example, <i>Ethernet1/12</i>)
trusted	Whether the specified switch interface is a trusted port. Valid values: <ul style="list-style-type: none">● <i>yes</i>● <i>no</i>

Update DHCP Snooping Trusted Ports Configuration

This command updates the DHCP Snooping trusted ports configuration.

Request

Method Type	PUT
Request URI	/nos/api/cfg/dhcpsnp/trust
Request Body (JSON)	{ "if_name": "{interface name}", "trusted": "{yes/no}" }

where:

Element	Description
if_name	The name of the switch interface to be configured as a DHCP Snooping trusted port. Valid values: <ul style="list-style-type: none">● <i>Interface name</i> (for example, <i>Ethernet1/12</i>)
trusted	Whether the specified switch interface is a trusted port. Valid values: <ul style="list-style-type: none">● <i>yes</i>● <i>no</i>

Get DHCP Snooping Statistics

This command gets DHCP Snooping statistics.

Request

Method Type	GET
Request URI	/nos/api/info/dhcpsnp/cnt
Request Body (JSON)	

Response

Response Body (JSON)	{ "recv_req_pkts": "{Received Request packets}", "recv_rep_pkts": "{Received Reply packets}", "drop_pkts": "{Dropped packets}" }
----------------------	--

where:

Element	Description
recv_req_pkts	The number of received DHCP request packets. Valid values: <ul style="list-style-type: none">● 0-4294967295
recv_rep_pkts	The number of received DHCP reply packets. Valid values: <ul style="list-style-type: none">● 0-4294967295
drop_pkts	The number of dropped DHCP packets. Valid values: <ul style="list-style-type: none">● 0-4294967295

Clear DHCP Snooping Statistics

This command resets DHCP Snooping statistics.

Request

Method Type	DELETE
Request URI	/nos/api/info/dhcpsnp/cnt
Request Body (JSON)	

DNS

The following Domain Name System (DNS) URIs are available:

- /nos/api/info/dns GET
- /nos/api/cfg/dns POST
- /nos/api/cfg/dns/nameserver POST, DELETE
- /nos/api/cfg/dns/defaultdomain POST, DELETE
- /nos/api/cfg/dns/domain POST, DELETE
- /nos/api/cfg/dns/nametoip POST, DELETE

The following DNS commands are available:

- [Get DNS Host Information](#)
- [Configure DNS Client Service](#)
- [Configure DNS Name Server](#)
- [Delete DNS Name Server](#)
- [Configure DNS Default Domain Name](#)
- [Delete DNS Default Domain Name](#)
- [Configure DNS Domain Name](#)
- [Delete DNS Domain Name](#)
- [Configure DNS Hostname to IP Address Mapping](#)
- [Delete DNS Hostname to IP Address Mapping](#)

Get DNS Host Information

This command returns DNS Client information, such as domain-lookup service state, default domain name, and additional domain names.

Request

Method Type	GET
Request URI	/nos/api/info/dns
Request Body (JSON)	

Response

Response Body (JSON)	{ "domain_lookup": "enable/disable", "dynamic_domain": "Dynamic domain/No dynamic domain", "dynamic_nameserver": "Dynamic name server/Static name server", "domain_list": [{"domain_name": "<domain>"}], "nameserver_list": [{"address": "<address>"}], "nametoip_list": [{"name": "<name>", "address": "<address>"}] }
----------------------	--

where:

Element	Description
domain_lookup	The status of the DNS service on the switch. Valid values: <ul style="list-style-type: none">• <i>enabled</i>• <i>disabled</i>
dynamic_domain	Whether the DNS Client domain name is dynamically learnt. Valid values: <ul style="list-style-type: none">• <i>dynamic domain</i>• <i>no dynamic domain</i>
dynamic_nameserver	Whether the DNS Client name server is dynamically learnt. Valid values: <ul style="list-style-type: none">• <i>dynamic name server</i>• <i>static name server</i>
domain_list	(Optional) The DNS Client configured domain name list. Valid value: <ul style="list-style-type: none">• list of domain names

Element	Description
<code>nameserver_list</code>	(Optional) The DNS Client configured name server list. Valid value: <ul style="list-style-type: none">● list of name servers
<code>nametoip_list</code>	(Optional) The DNS Client configured hostname to IP address mapping list. Valid value: <ul style="list-style-type: none">● list of hostname to IP address mappings

Configure DNS Client Service

This command configures the status of the DNS Client service on the switch.

Request

Method Type	POST
Request URI	/nos/api/cfg/dns
Request Body (JSON)	{ "dns_client_status": "enabled/disabled" }

where:

Element	Description
dns_client_status	The status of the DNS Client service. Valid values: <ul style="list-style-type: none">• <i>enabled</i>• <i>disabled</i>

Response

Response Body (JSON)	{ "dns_client_status": "enabled/disabled" }
----------------------	---

Configure DNS Name Server

This command configures a DNS name server.

Request

Method Type	POST
Request URI	/nos/api/cfg/dns/nameserver
Request Body (JSON)	{ "nameserver1": "<server1_address>", "nameserver2": "<server2_address>", "nameserver3": "<server3_address>", "vrf": "<vrf_name>" }

where:

Element	Description
nameserver1	The first name server address. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
nameserver2	The second name server address. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
nameserver3	The third name server address. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
vrf	The VRF instance for the name server. Valid value: <ul style="list-style-type: none">● <i>VRF instance name</i>

Delete DNS Name Server

This command removes a configured DNS name server.

Request

Method Type	DELETE
Request URI	/nos/api/cfg/dns/nameserver/<server_addr>/<vrf>

where:

Element	Description
<i>server_addr</i>	The name server address. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
<i>vrf</i>	The VRF instance for the name server. Valid value: <ul style="list-style-type: none">● <i>VRF instance name</i> Default value: <ul style="list-style-type: none">● <i>default</i>

Configure DNS Default Domain Name

This command configures the default DNS domain name.

Request

Method Type	POST
Request URI	/nos/api/cfg/dns/defaultdomain
Request Body (JSON)	{ "domain_name": "<default_domain_name>", "vrf": "<vrf_name>" }

where:

Element	Description
<i>default_domain_name</i>	The name of the default DNS domain. Valid value: <ul style="list-style-type: none">● <i>string representing the default DNS domain name</i>
<i>vrf_name</i>	The VRF instance for the default DNS domain. Valid value: <ul style="list-style-type: none">● <i>VRF instance name</i> Default value: <ul style="list-style-type: none">● <i>default</i>

Delete DNS Default Domain Name

This command removes the default DNS domain name.

Request

Method Type	DELETE
Request URI	/nos/api/cfg/dns/defaultdomain/<domain_name>/<vrf>

where:

Element	Description
<i>domain_name</i>	The name of the default DNS domain. Valid value: <ul style="list-style-type: none">● <i>string representing the default DNS domain name</i>
<i>vrf</i>	The VRF instance for the default DNS domain. Valid value: <ul style="list-style-type: none">● <i>VRF instance name</i> Default value: <ul style="list-style-type: none">● <i>default</i>

Configure DNS Domain Name

This command configures a DNS domain name.

Request

Method Type	POST
Request URI	/nos/api/cfg/dns/domain
Request Body (JSON)	{ "domain_name": "<domain_name>", "vrf": "<vrf_name>" }

where:

Element	Description
<i>domain_name</i>	The name of the default DNS domain. Valid value: <ul style="list-style-type: none">● <i>string representing the default DNS domain name</i>
<i>vrf</i>	The VRF instance for the default DNS domain. Valid value: <ul style="list-style-type: none">● <i>VRF instance name</i> Default value: <ul style="list-style-type: none">● <i>default</i>

Delete DNS Domain Name

This command removes a configured DNS domain name.

Request

Method Type	POST
Request URI	/nos/api/cfg/dns/domain/<domain_name>/<vrf>

where:

Element	Description
<i>domain_name</i>	The name of the default DNS domain. Valid value: <ul style="list-style-type: none">● <i>string representing the default DNS domain name</i>
<i>vrf</i>	The VRF instance for the default DNS domain. Valid value: <ul style="list-style-type: none">● <i>VRF instance name</i> Default value: <ul style="list-style-type: none">● <i>default</i>

Configure DNS Hostname to IP Address Mapping

This command configures a DNS server hostname to IP address mapping.

Request

Method Type	POST
Request URI	/nos/api/cfg/dns/nametoip
Request Body (JSON)	{ "hostname": "<hostname>", "ip_addr1": "<address1>", "ip_addr2": "<address2>", "vrf": "<vrf_name>" }

where:

Element	Description
<i>hostname</i>	The hostname of the DNS server. Valid value: <ul style="list-style-type: none">● <i>string representing the DNS server hostname</i>
<i>address1</i>	The first IP address of the DNS server. Valid values: <ul style="list-style-type: none">● <i>IP address</i>
<i>address2</i>	The second IP address of the DNS server. Valid values: <ul style="list-style-type: none">● <i>IP address</i>
<i>vrf</i>	The VRF instance for the default DNS domain. Valid value: <ul style="list-style-type: none">● <i>VRF instance name</i> Default value: <ul style="list-style-type: none">● <i>default</i>

Delete DNS Hostname to IP Address Mapping

This command removes a configured DNS server hostname to IP address mapping.

Request

Method Type	
Request URI	/nos/api/cfg/dns/nametoip/<hostname>/<addr>/<vrf>

where:

Element	Description
<i>hostname</i>	The hostname of the DNS server. Valid value: <ul style="list-style-type: none">● <i>string representing the DNS server hostname</i>
<i>addr</i>	The IP address of the DNS server. Valid values: <ul style="list-style-type: none">● <i>IP address</i>
<i>vrf</i>	The VRF instance for the default DNS domain. Valid value: <ul style="list-style-type: none">● <i>VRF instance name</i> Default value: <ul style="list-style-type: none">● <i>default</i>

ECMP

The following Equal Cost Multiple Paths (ECMP) URIs are available:

- /nos/api/cfg/ip/ecmp/weight GET, PUT
 - /nos/api/info/ip/ecmp/weight/ipv4/<ipv4_address> GET
 - /nos/api/info/ip/ecmp/weight/ipv6/<ipv6_address> GET
 - /nos/api/info/ip/ecmp/weight/interface/<interface_name> GET
 - /nos/api/cfg/ip/ecmp/weight/ipv4 POST
 - /nos/api/cfg/ip/ecmp/weight/ipv6 POST
 - /nos/api/cfg/ip/ecmp/weight/interface POST

The following ECMP commands are available:

- Get Weighted ECMP Status
 - Update Weighted ECMP Status
 - Get IPv4 Next-hop ECMP Weight
 - Configure IPv4 Next-hop ECMP Weight
 - Get IPv6 Next-hop ECMP Weight
 - Configure IPv6 Next-hop ECMP Weight
 - Get Interface ECMP Weight
 - Configure Interface ECMP Weight

Get Weighted ECMP Status

This command returns the status of weighted ECMP on the switch.

Request

Method Type	GET
Request URI	/nos/api/cfg/ip/ecmp/weight
Request Body (JSON)	

Response

Response Body (JSON)	{ "weighted_ecmp_state": "{Enable Disable}" }
----------------------	---

where:

Element	Description
weighted_ecmp_state	The status of weighted ECMP. Valid values: <ul style="list-style-type: none">• <i>enable</i>• <i>disable</i>

Update Weighted ECMP Status

This command updates the status of weighted ECMP on the switch.

Request

Method Type	PUT
Request URI	/nos/api/cfg/ip/ecmp/weight
Request Body (JSON)	{ "weighted_ecmp_state": "{enable disable}" }

where:

Element	Description
weighted_ecmp_state	The status of weighted ECMP. Valid values: <ul style="list-style-type: none">• <i>enable</i>• <i>disable</i>

Response

Response Body (JSON)	{ "weighted_ecmp_state": "{enable disable}" }
----------------------	---

where:

Element	Description
weighted_ecmp_state	The status of weighted ECMP. Valid values: <ul style="list-style-type: none">• <i>enable</i>• <i>disable</i>

Get IPv4 Next-hop ECMP Weight

This command returns the ECMP weight of a specified IPv4 next-hop.

Request

Method Type	GET
Request URI	nos/api/info/ip/ecmp/weight/ipv4/<ipv4_address>
Request Body (JSON)	

Response

Response Body (JSON)	{ "ipv4_nexthop_address": "{IPv4 address}", "ipv4_nexthop_weight": {weight} }
----------------------	--

where:

Element	Description
ipv4_nexthop_address	The IPv4 address of the next-hop. Valid value: <ul style="list-style-type: none">• <i>IPv4 address</i>
ipv4_nexthop_weight	The ECMP weight of the specified next-hop. Valid value: <ul style="list-style-type: none">• 1-4

Configure IPv4 Next-hop ECMP Weight

This command configures the ECMP weight of a specific IPv4 next-hop.

Request

Method Type	POST
Request URI	/nos/api/cfg/ip/ecmp/weight/ipv4
Request Body (JSON)	{ "ipv4_nexthop_address": "{IPv4 address}", "ipv4_nexthop_weight": {weight} }

where:

Element	Description
ipv4_nexthop_address	The IPv4 address of the next-hop. Valid value: <ul style="list-style-type: none">● <i>IPv4 address</i>
ipv4_nexthop_weight	The ECMP weight of the specified next-hop. Valid value: <ul style="list-style-type: none">● <i>1-4</i>

Response

Response Body (JSON)	{ "ipv4_nexthop_address": "{IPv4 address}", "ipv4_nexthop_weight": {weight} }
----------------------	--

where:

Element	Description
ipv4_nexthop_address	The IPv4 address of the next-hop. Valid value: <ul style="list-style-type: none">● <i>IPv4 address</i>
ipv4_nexthop_weight	The ECMP weight of the specified next-hop. Valid value: <ul style="list-style-type: none">● <i>1-4</i>

Get IPv6 Next-hop ECMP Weight

This command returns the ECMP weight of a specified IPv6 next-hop.

Request

Method Type	GET
Request URI	/nos/api/info/ip/ecmp/weight/ipv6/<ipv6_address>
Request Body (JSON)	

Response

Response Body (JSON)	{ "ipv6_nexthop_address": "{IPv6 address}", "ipv6_nexthop_weight": {weight} }
----------------------	--

where:

Element	Description
ipv6_nexthop_address	The IPv6 address of the next-hop. Valid value: <ul style="list-style-type: none">• <i>IPv6 address</i>
ipv6_nexthop_weight	The ECMP weight of the specified next-hop. Valid value: <ul style="list-style-type: none">• <i>1-4</i>

Configure IPv6 Next-hop ECMP Weight

This command configures the ECMP weight of a specific IPv6 next-hop.

Request

Method Type	POST
Request URI	/nos/api/cfg/ip/ecmp/weight/ipv6
Request Body (JSON)	{ "ipv6_nexthop_address": "{IPv6 address}", "ipv6_nexthop_weight": {weight} }

where:

Element	Description
ipv6_nexthop_address	The IPv6 address of the next-hop. Valid value: <ul style="list-style-type: none">● <i>IPv6 address</i>
ipv6_nexthop_weight	The ECMP weight of the specified next-hop. Valid value: <ul style="list-style-type: none">● <i>1-4</i>

Response

Response Body (JSON)	{ "ipv6_nexthop_address": "{IPv6 address}", "ipv6_nexthop_weight": {weight} }
----------------------	--

where:

Element	Description
ipv6_nexthop_address	The IPv6 address of the next-hop. Valid value: <ul style="list-style-type: none">● <i>IPv6 address</i>
ipv6_nexthop_weight	The ECMP weight of the specified next-hop. Valid value: <ul style="list-style-type: none">● <i>1-4</i>

Get Interface ECMP Weight

This command returns the ECMP weight of a specific switch interface.

Request

Method Type	GET
Request URI	/nos/api/info/ip/ecmp/weight/interface/<interface name>
Request Body (JSON)	

Response

Response Body (JSON)	{ "interface_name": "{interface name}", "interface_weight": {weight} }
----------------------	---

where:

Element	Description
interface_name	The name of the switch interface. Valid value: <ul style="list-style-type: none">• <i>interface name</i>
interface_weight	The ECMP weight of the specified switch interface. Valid value: <ul style="list-style-type: none">• 1-4

Configure Interface ECMP Weight

This command configures the ECMP weight of a specific switch interface.

Request

Method Type	POST
Request URI	/nos/api/cfg/ip/ecmp/weight/interface
Request Body (JSON)	{ "interface_name": "{interface name}", "interface_weight": {weight} }

where:

Element	Description
interface_name	The name of the switch interface. Valid value: <ul style="list-style-type: none">● <i>interface name</i>
interface_weight	The ECMP weight of the specified switch interface. Valid value: <ul style="list-style-type: none">● 1-4

Response

Response Body (JSON)	{ "interface_name": "{interface name}", "interface_weight": {weight} }
----------------------	---

where:

Element	Description
interface_name	The name of the switch interface. Valid value: <ul style="list-style-type: none">● <i>interface name</i>
interface_weight	The ECMP weight of the specified switch interface. Valid value: <ul style="list-style-type: none">● 1-4

FDB

The following Forwarding Database (FDB) URIs are available:

- /nos/api/info/fdb/list POST
- /nos/api/info/fdb/count POST
- /nos/api/info/fdb/global GET
- /nos/api/info/fdb/interface/{*if_name*} GET
- /nos/api/cfg/fdb GET, POST, PUT
- /nos/api/cfg/fdb/global GET, PUT
- /nos/api/cfg/fdb/interface/{*if_name*} GET, PUT

The following FDB commands are available:

- [Get List of MAC Addresses](#)
- [Get Number of MAC Addresses](#)
- [Get Global FDB Runtime Settings](#)
- [Get Global FDB Configured Settings](#)
- [Update Global FDB Settings](#)
- [Get MAC Address Learning Interface Runtime Setting](#)
- [Get MAC Address Learning Interface Configured Setting](#)
- [Update Interface MAC Address Learning Setting](#)
- [Get Static MAC Addresses](#)
- [Create Static MAC Address](#)
- [Delete MAC Address or Interface for Multicast MAC Address](#)

Get List of MAC Addresses

This command returns all MAC addresses that match the search criteria.

Request

Method Type	POST
Request URI	/nos/api/info/fdb/list
Request Body (JSON)	<pre>{ "fdb_type": "{static multicast dynamic}", "mac_address": "{mac_address}", "interfaces": ["{if_name}"], "vlan_id": "{vlan_id}" }</pre>

where:

Element	Description
<code>fdb_type</code>	The type of MAC address to filter on. Valid value: <ul style="list-style-type: none">● <i>static</i>● <i>dynamic</i>● <i>multicast</i>
<code>mac_address</code>	The MAC address matching the criteria. Valid value: <ul style="list-style-type: none">● <i>MAC address</i>
<code>interfaces</code>	The name of the switch interface to filter on. Valid value: <ul style="list-style-type: none">● <i>interface name</i> (for example, <i>Ethernet1/12</i>)
<code>vlan_id</code>	The VLAN number to filter on. Valid value: <ul style="list-style-type: none">● <i>1-4094</i>

Response

Response Body (JSON)	{ "address_table": [{ "vlan_id": "{vlan_id}", "mac_address": "{mac_address}", "is_static": "{true false}", "if_name": "{if_name}" }] }
----------------------	--

where:

Element	Description
address_table	The MAC table entries.
vlan_id	The VLAN number for the MAC table entry. Valid value: <ul style="list-style-type: none">● 1-4094
mac_address	The MAC address matching the search criteria. Valid value: <ul style="list-style-type: none">● <i>MAC address</i>
is_static	Whether the MAC address is statically configured. Valid value: <ul style="list-style-type: none">● <i>true</i>● <i>false</i>
if_name	The name of the switch interface to filter on. Valid value: <ul style="list-style-type: none">● <i>interface name</i> (for example, <i>Ethernet1/12</i>)

Get Number of MAC Addresses

This command returns the total number of MAC addresses matching the search criteria.

Request

Method Type	POST
Request URI	/nos/api/info/fdb/count
Request Body (JSON)	{ "fdb_type": "{static multicast dynamic}", "mac_address": "{mac_address}", "interfaces": ["{if_name}"], "vlan_id": "{vlan_id}" }

where:

Element	Description
fdb_type	The type of MAC address to filter on. Valid value: <ul style="list-style-type: none">● static● dynamic● multicast
mac_address	The MAC address matching the criteria. Valid value: <ul style="list-style-type: none">● <i>MAC address</i>
interfaces	The name of the switch interface to filter on. Valid value: <ul style="list-style-type: none">● <i>interface name</i> (for example, <i>Ethernet1/12</i>)
vlan_id	The VLAN number to filter on. Valid value: <ul style="list-style-type: none">● 1-4094

Response

Response Body (JSON)	{ "dynamic_add_cnt":"{dynamic_add_cnt}", "static_add_cnt":"{static_add_cnt}", "multicast_add_cnt":"{multicast_add_cnt}", "total_in_use_cnt":"{total_in_use_cnt}" }
----------------------	---

where:

Element	Description
dynamic_add_cnt	The number of dynamically learnt MAC addresses. Valid value: <ul style="list-style-type: none">● <i>integer</i>
static_add_cnt	The number of statically configured MAC addresses. Valid value: <ul style="list-style-type: none">● <i>integer</i>
multicast_add_cnt	The number of multicast MAC addresses. Valid value: <ul style="list-style-type: none">● <i>integer</i>
total_in_use_cnt	The total number of MAC addresses. Valid value: <ul style="list-style-type: none">● <i>integer</i>

Get Global FDB Runtime Settings

This command returns the global FDB runtime settings.

Request

Method Type	GET
Request URI	/nos/api/info/fdb/global
Request Body (JSON)	

Response

Response Body (JSON)	{ "global_learning_status":"{enabled disabled}", "aging_time":"{aging_time}" }
----------------------	---

where:

Element	Description
global_learning_status	The status of global MAC address learning. Valid values: <ul style="list-style-type: none">• <i>enabled</i>• <i>disabled</i>
aging_time	The MAC address aging time, in seconds. Valid value: <ul style="list-style-type: none">• <i>0-1000000</i>

Get Global FDB Configured Settings

This command returns the global FDB configured settings.

Request

Method Type	GET
Request URI	/nos/api/cfg/fdb/global
Request Body (JSON)	

Response

Response Body (JSON)	{ "global_learning_status":"{enabled disabled}", "aging_time":"{aging_time}" }
----------------------	---

where:

Element	Description
global_learning_status	The status of global MAC address learning. Valid values: <ul style="list-style-type: none">● <i>enabled</i>● <i>disabled</i>
aging_time	The MAC address aging time, in seconds. Valid value: <ul style="list-style-type: none">● <i>0-1000000</i>

Update Global FDB Settings

This command updates the global FDB settings.

Request

Method Type	PUT
Request URI	/nos/api/cfg/fdb/global
Request Body (JSON)	{ "global_learning_status":"{enabled disabled}", "aging_time":"{aging_time}" }

where:

Element	Description
global_learning_status	The status of global MAC address learning. Valid values: <ul style="list-style-type: none">• <i>enabled</i>• <i>disabled</i>
aging_time	The MAC address aging time, in seconds. Valid value: <ul style="list-style-type: none">• 0-1000000

Response

Response Body (JSON)	{ "global_learning_status":"{enabled disabled}", "aging_time":"{aging_time}" }
----------------------	---

where:

Element	Description
global_learning_status	The status of global MAC address learning. Valid values: <ul style="list-style-type: none">• <i>enabled</i>• <i>disabled</i>
aging_time	The MAC address aging time, in seconds. Valid value: <ul style="list-style-type: none">• 0-1000000 Note: Setting this variable to 0 disables MAC address aging.

Get MAC Address Learning Interface Runtime Setting

This command returns the runtime setting of MAC learning for a specific switch interface.

Request

Method Type	GET
Request URI	/nos/api/info/fdb/interface/{if_name}
Request Body (JSON)	

where:

Element	Description
if_name	The name of the switch interface. Valid value: <ul style="list-style-type: none">• <i>interface name</i> (for example, <i>Ethernet1/12</i>)

Response

Response Body (JSON)	{ "learning_status": "{enabled disabled}" }
----------------------	---

where:

Element	Description
learning_status	The status of MAC address learning for the specified interface. Valid values: <ul style="list-style-type: none">• <i>enabled</i>• <i>disabled</i>

Get MAC Address Learning Interface Configured Setting

This command returns the configured setting of MAC learning for a specific switch interface.

Request

Method Type	GET
Request URI	/nos/api/cfg/fdb/interface/{if_name}
Request Body (JSON)	

where:

Element	Description
if_name	The name of the switch interface. Valid value: <ul style="list-style-type: none">• <i>interface name</i> (for example, <i>Ethernet1/12</i>)

Response

Response Body (JSON)	{ "learning_status": "{enabled disabled}" }
----------------------	---

where:

Element	Description
learning_status	The status of MAC address learning for the specified interface. Valid values: <ul style="list-style-type: none">• <i>enabled</i>• <i>disabled</i>

Update Interface MAC Address Learning Setting

This command returns the status of MAC learning for a specific switch interface.

Request

Method Type	PUT
Request URI	/nos/api/cfg/fdb/interface/{if_name}
Request Body (JSON)	{ "learning_status": "{enabled disabled}" }

where:

Element	Description
<i>if_name</i>	The name of the switch interface. Valid value: <ul style="list-style-type: none">● <i>interface name</i> (for example, <i>Ethernet1/12</i>)
<i>learning_status</i>	The status of MAC address learning for the specified interface. Valid values: <ul style="list-style-type: none">● <i>enabled</i>● <i>disabled</i>

Response

Response Body (JSON)	{ "learning_status": "{enabled disabled}" }
----------------------	---

where:

Element	Description
<i>learning_status</i>	The status of MAC address learning for the specified interface. Valid values: <ul style="list-style-type: none">● <i>enabled</i>● <i>disabled</i>

Get Static MAC Addresses

This command returns all statically configured MAC addresses.

Request

Method Type	GET
Request URI	/nos/api/cfg/fdb
Request Body (JSON)	

Response

Response Body (JSON)	{ "address_table": [{ "vlan_id": "{vlan_id}", "mac_address": "{mac_address}", "is_static": "{true false}", "if_name": "{if_name}" }] }
----------------------	--

where:

Element	Description
address_table	The MAC table entries.
vlan_id	The VLAN number for the MAC table entry. Valid value: <ul style="list-style-type: none">● 1-4094
mac_address	The MAC address. Valid value: <ul style="list-style-type: none">● <i>MAC address</i>
is_static	Whether the MAC address is statically configured. Valid value: <ul style="list-style-type: none">● <i>true</i>● <i>false</i>
if_name	The name of the switch interface. Valid value: <ul style="list-style-type: none">● <i>interface name</i> (for example, <i>Ethernet1/12</i>)

Create Static MAC Address

This command adds a new statically configured MAC address.

Request

Method Type	POST
Request URI	/nos/api/cfg/fdb
Request Body (JSON)	{ "mac_address": "{mac_address}", "vlan_id": "{vlan_id}", "interfaces": ["{if_name}"] }

where:

Element	Description
mac_address	The MAC address. Valid value: <ul style="list-style-type: none">● <i>MAC address</i>
vlan_id	The VLAN number. Valid value: <ul style="list-style-type: none">● <i>1-4094</i>
interfaces	The name of the switch interface. Valid value: <ul style="list-style-type: none">● <i>interface name</i> (for example, <i>Ethernet1/12</i>)

Response

Response Body (JSON)	{ "mac_address": "{mac_address}", "vlan_id": "{vlan_id}", "is_static": "{true false}", "if_name": "{if_name}" }
----------------------	--

where:

Element	Description
mac_address	The MAC address. Valid value: <ul style="list-style-type: none">● <i>MAC address</i>
vlan_id	The VLAN number. Valid value: <ul style="list-style-type: none">● <i>1-4094</i>

Element	Description
<code>is_static</code>	Whether the MAC address is statically configured. Valid value: <ul style="list-style-type: none">● <i>true</i>● <i>false</i>
<code>if_name</code>	The name of the switch interface. Valid value: <ul style="list-style-type: none">● <i>interface name</i> (for example, <i>Ethernet1/12</i>)

Delete MAC Address or Interface for Multicast MAC Address

This command removes a MAC address matching the search criteria, or removes a switch interface from a multicast MAC address.

Request

Method Type	PUT
Request URI	/nos/api/cfg/fdb
Request Body (JSON)	{ "fdb_type": "{static dynamic}", "mac_address": "{mac_address}", "interfaces": ["{if_name}"], "vlan_id": "{vlan_id}" }

where:

Element	Description
fdb_type	The type of MAC address to delete. Valid value: <ul style="list-style-type: none">● static● dynamic
mac_address	The MAC address matching the criteria. Valid value: <ul style="list-style-type: none">● <i>MAC address</i>
interfaces	The name of the switch interface to filter on. Valid value: <ul style="list-style-type: none">● <i>interface name</i> (for example, <i>Ethernet1/12</i>)
vlan_id	The VLAN number to filter on. Valid value: <ul style="list-style-type: none">● 1-4094

IGMP

The following Internet Group Management Protocol (IGMP) URIs are available:

- /nos/api/cfg/mc_vlan/groups?vid="*<vid>*"&if_name="*<if_name>*" GET
- /nos/api/cfg/mc_vlan/mrouter?vid="*<vid>*"&if_name="*<if_name>*" GET
- /nos/api/cfg/mc_vlan/mrouter/*<vlan_id>* PUT
- /nos/api/cfg/mc_vlan/querier/*<vlan_id>* GET, PUT
- /nos/api/cfg/igmp/snoop GET, PUT
- /nos/api/cfg/mc_vlan GET
- /nos/api/cfg/mc_vlan/*<vlan_id>* GET, PUT

The following IGMP commands are available:

- [Get IGMP Groups](#)
- [Get IGMP Mrouter](#)
- [Update IGMP Mrouter Interface for a VLAN](#)
- [Get IGMP Querier](#)
- [Update IGMP Querier on a VLAN](#)
- [Get IGMP Snooping System Properties](#)
- [Update IGMP Snooping System Properties](#)
- [Get IGMP Snooping Properties of All VLANs](#)
- [Get IGMP Snooping VLAN Properties](#)
- [Update IGMP Snooping VLAN Properties](#)

Get IGMP Groups

Get all Internet Group Management Protocol (IGMP) snooping groups' membership information for a specific VLAN or interface/port aggregation.

Notes:

If the specified *vid* is **None**, this request gets a list of IGMP snooping groups' membership information for all VLAN.

If the specified *if_name* is **None**, this request gets a list of IGMP snooping groups' membership information for all interface/port aggregations.

A value must be provided for either vid or if_name in the request.

Request

Method Type	GET
Request URI	/nos/api/cfg/mc_vlan/groups?vid=<vid>&if_name=<if_name>
Request Body (JSON)	

where:

Element	Description
<i>vid</i>	VLAN number; an integer from 1-3999.
<i>if_name</i>	Ethernet interface name or port aggregation name.

Response

Response Body (JSON)	<pre>[{ "vid": "<vid>", "if_name": "<if_name>", "group_address": "<group_address>", "source_ip": { "include_list" : [{ "source_address" : "<source ip address>", "uptime" : "<uptime>", "expires" : "<expires>", "fwd" : "<fwd>", "flags" : "<flags>" }], "exclude_list" : [{ "source_address" : "<source ip address>", "uptime" : "<uptime>", "expires" : "<expires>", "fwd" : "<fwd>", "flags" : "<flags>" }] }, "flags" : "<flags>", "expires": "<expires>", "version": "<version>", "filter_mode": "<filter_mode>", }]</pre>
-------------------------	--

where:

Element	Description
<i>vid</i>	VLAN number; an integer from 1-3999.
<i>if_name</i>	Ethernet interface name or port aggregation name.
<i>group_address</i>	The IGMP group IPv4 address.
<i>source_ip</i>	Dictionary of included and excluded source IP details.
<i>include_list</i>	List of included source IP details.
<i>exclude_list</i>	List of excluded source IP details.
<i>source_address</i>	Included or excluded source IPv4 address.
<i>uptime</i>	Time since switch is running in HH:MM:SS format.
<i>expires</i>	Source expiry time interval in HH:MM:SS format.
<i>fwd</i>	Whether to forward traffic for this source IP; one of yes, no.

Element	Description
<i>flags</i>	Source IP flag; one of: <ul style="list-style-type: none"> ● D – Dynamic ● S – Static ● L – Local and Static Note: This flag is included in <code>include_list</code> and <code>exclude_list</code> .
<i>flags</i>	Group flags; one of <code>Dynamic</code> , <code>Static</code> IGMP group.
<i>expires</i>	Group expiry time interval HH:MM:SS format.
<i>version</i>	IGMP version number.
<i>filter_mode</i>	IGMP Router-Filter-Mode State; one of <code>include</code> , <code>exclude</code> .

Get IGMP Mrouter

Get Internet Group Management Protocol (IGMP) Multicast Router (mrouter) entries for a specific VLAN or interface/port-aggregation.

Request

Method Type	GET
Request URI	/nos/api/cfg/mc_vlan/mrouter?vid=<vlan_id>&if_name=<if_name>
Request Body (JSON)	

where:

Element	Description
<i>vlan_id</i>	VLAN number; an integer from 1-3999.
<i>if_name</i>	Ethernet interface name or port aggregation name.

Response

Response Body (JSON)	[{ "vid": "<vid>", "if_name": "<if_name>", "mrouting_address": "<mrouting_address>", "mrouting_type": "<mrouting_type>", "expires": "<expires>" }]
-------------------------	--

where:

Element	Description
<i>vid</i>	VLAN number; an integer from 1-3999.
<i>if_name</i>	Ethernet interface name or port aggregation name.
<i>mrouting_address</i>	The IGMP multicast router IPv4 address.
<i>mrouting_type</i>	Specifies how this entry was learned; one of dynamic, PIM hello, static.
<i>expires</i>	Expiry time interval HH:MM:SS format.

Update IGMP Mrouter Interface for a VLAN

Add a Layer 2 interface as a static multicast router port.

Request

Method Type	PUT
Request URI	/nos/api/cfg/mc_vlan/mrouter/<vid>
Request Body (JSON)	{ "if_name": "<if_name>", }

where:

Element	Description
<i>vid</i>	VLAN number; an integer from 1-3999.
<i>if_name</i>	Ethernet interface name or port aggregation name.

Response

Response Body (JSON)	{ "if_name": "<if_name>", }
-------------------------	-----------------------------------

where:

Element	Description
<i>if_name</i>	Ethernet interface name or port aggregation name.

Get IGMP Querier

Get IGMP querier information for a VLAN or for all VLANs.

Request

Method Type	GET
Request URI	/nos/api/cfg/mc_vlan/querier/<vlan_id>"
Request Body (JSON)	

where:

Element	Description
<i>vlan_id</i>	VLAN number; an integer from 1-3999.

Response

Response Body (JSON)	[{ "vid": "<vid>", "address": "<address>", "state": "<state>", "version": "<version>", "expires": "<expires>", }]
-------------------------	---

where:

Element	Description
<i>vid</i>	VLAN number; an integer from 1-3999.
<i>address</i>	Querier IPv4 address.
<i>state</i>	Elected querier state; one of Querier , Non-querier .
<i>version</i>	Snooping querier version.
<i>expires</i>	Expiry time interval HH:MM:SS format.

Update IGMP Querier on a VLAN

Enables or disables the Internet Group Management Protocol (IGMP) snooping querier on the specified VLAN.

Note: To set the querier address for a VLAN, the VLAN need not be present. After the VLAN is created, the running configuration will show the querier address update.

Request

Method Type	PUT
Request URI	/nos/api/cfg/mc_vlan/querier/<vid>
Request Body (JSON)	{ "address": "<address>", }

where:

Element	Description
<i>address</i>	The querier IPv4 address.

Response

Response Body (JSON)	[{ "vid": "<vid>", "address": "<address>", "state": "<state>", "version": "<version>", "expires": "<expires>", }]
-------------------------	---

where:

Element	Description
<i>vid</i>	VLAN number; an integer from 1-3999.
<i>address</i>	Querier IPv4 address.
<i>state</i>	Elected querier state; one of Querier , Non-querier .
<i>version</i>	Snooping querier version.
<i>expires</i>	Expiry time interval HH:MM:SS format.

Get IGMP Snooping System Properties

Get global IGMP Snooping properties of the system.

Request

Method Type	GET
Request URI	/nos/api/cfg/igmp/snoop
Request Body (JSON)	

Response

Response Body (JSON)	{ "ena_igmp_snoop": "<ena_igmp_snoop>" }
-------------------------	--

where:

Element	Description
<i>ena_igmp_snoop</i>	Enables IGMP snooping globally on all VLANs; one of yes (default), no. If disabled globally, IGMP snooping is disabled on all VLANs, regardless of the per-VLAN setting of IGMP snooping. If IGMP snooping is enabled globally, the per-VLAN setting of IGMP snooping takes effect.

Update IGMP Snooping System Properties

Update the global IGMP Snooping properties of the system.

Request

Method Type	PUT
Request URI	/nos/api/cfg/igmp/snoop
Request Body (JSON)	{ "ena_igmp_snoop": "<ena_igmp_snoop>" }

where:

Element	Description
<i>ena_igmp_snoop</i>	Enables IGMP snooping globally on all VLANs; one of yes (default), no. If disabled globally, IGMP snooping is disabled on all VLANs, regardless of the per-VLAN setting of IGMP snooping. If IGMP snooping is enabled globally, the per-VLAN setting of IGMP snooping takes effect.

Response

Response Body (JSON)	{ "ena_igmp_snoop": "<ena_igmp_snoop>" }
-------------------------	--

Get IGMP Snooping Properties of All VLANs

Get the IGMP snooping properties of all VLANs.

Request

Method Type	GET
Request URI	/nos/api/cfg/mc_vlan
Request Body (JSON)	

Response

Response Body (JSON)	[{ "vlan_id": "<vlan_id>", "ena_igmp_snoop": "<ena_igmp_snoop>" }]
-------------------------	---

where:

Element	Description
<i>vlan_id</i>	VLAN number.
<i>ena_igmp_snoop</i>	Enables IGMP snooping on a VLAN; one of yes (default), no.

Get IGMP Snooping VLAN Properties

Get the IGMP snooping properties of one VLAN.

Request

Method Type	GET
Request URI	/nos/api/cfg/mc_vlan/<vlan_id>
Request Body (JSON)	

Response

Response Body (JSON)	[{ "vlan_id": "<vlan_id>", "ena_igmp_snoop": "<ena_igmp_snoop>" }]
-------------------------	---

where:

Element	Description
<i>vlan_id</i>	VLAN number.
<i>ena_igmp_snoop</i>	Enables IGMP snooping on a VLAN; one of yes (default), no.

Update IGMP Snooping VLAN Properties

Update the IGMP snooping properties of the specified VLAN.

Request

Method Type	PUT
Request URI	/nos/api/cfg/mc_vlan/<vlan_id>
Request Body (JSON)	{ "vlan_id": "<vlan_id>", "ena_igmp_snoop": "<ena_igmp_snoop>", "fast_leave": "<fast_leave>", "query_interval": "<query_interval>", "version": "<version>", }

where:

Element	Description
<i>vlan_id</i>	VLAN number. Note: The VLAN must exist.
<i>ena_igmp_snoop</i>	(Optional) Whether to enable IGMP snooping on a VLAN; one of yes, no. Default value: yes.
<i>fast_leave</i>	One of yes, no. Default value: no.
<i>query_interval</i>	(Optional) IGMP query interval, in seconds; an integer from 1-18000. Default value: 125.
<i>version</i>	(Optional) IGMP Snooping version number; one of 2, 3. Default value: 3.

Response

Response Body (JSON)	{ "vlan_id": "<vlan_id>", "ena_igmp_snoop": "<ena_igmp_snoop>", "fast_leave": "<fast_leave>", "query_interval": "<query_interval>", "version": "<version>", }
-------------------------	---

where:

Element	Description
<i>vlan_id</i>	VLAN number. Note: The VLAN must exist.
<i>ena_igmp_snoop</i>	(Optional) Whether to enable IGMP snooping on a VLAN; one of yes, no. Default value: yes.

Element	Description
<i>fast_leave</i>	One of yes, no. Default value: no.
<i>query_interval</i>	(Optional) IGMP query interval, in seconds; an integer from 1-18000. Default value: 125.
<i>version</i>	(Optional) IGMP Snooping version number; one of 2, 3. Default value: 3.

Interface

The following interface URIs are available:

- /nos/api/cfg/interface GET
- /nos/api/cfg/interface/<*if_name*> GET, PUT
- /nos/api/cfg/interface/transceiver GET
- /nos/api/cfg/interface/transceiver/<*if_name*> GET

The following interface commands are available:

- [Get All Interfaces](#)
- [Get Interface](#)
- [Update Interface](#)
- [Get Transceiver Information for All Interfaces](#)
- [Get Transceiver Information for One Interfaces](#)

Get All Interfaces

Get properties of all interfaces.

Request

Method Type	Get
Request URI	/nos/api/cfg/interface
Request Body (JSON)	

Response

Response Body (JSON)	[{ "duplex": "full", "if_name": "Ethernet1/1", "mtu": 1500, "admin_state": "down", "mac_addr": "a897.dc1b.8602", "ifindex": 410001, "oper_state": "down", "speed": "40000" }]
-------------------------	--

where:

Element	Description
<i>if_name</i>	The interface name; a string. Note: The interface must exist.
<i>duplex</i>	The communication method of the interface; one of auto , full , half .
<i>speed</i>	The communication speed of the interface; one of the following: <ul style="list-style-type: none">● auto (auto negotiate)● 10 (10Mb/s)● 100 (100Mb/s)● 1000 (1Gb/s)● 10000 (10Gb/s)● 40000 (40Gb/s).
<i>mtu</i>	The maximum transmission unit, in bytes; a positive integer from 64-9216.
<i>mac_addr</i>	The MAC address (in xxxx.xxxx.xxxx format).

Element	Description
<i>admin_state</i>	The admin status; one of up, down.
<i>oper_state</i>	The operation state; one of up, down.

Get Interface

Get properties of one interface.

Request

Method Type	GET
Request URI	/nos/api/cfg/interface/<if_name>
Request Body (JSON)	

where:

Element	Description
<i>if_name</i>	The interface name; a string. Note: The interface must exist.

Response

Response Body (JSON)	{ "duplex": "full", "if_name": "Ethernet1/1", "mtu": 1500, "admin_state": "down", "mac_addr": "a897.dc1b.8602", "ifindex": 410001, "oper_state": "down", "speed": "40000" }
-------------------------	--

where:

Element	Description
<i>if_name</i>	The interface name; a string. Note: The interface must exist.
<i>duplex</i>	The communication method of the interface; one of auto , full , half .
<i>speed</i>	The communication speed of the interface; one of the following: <ul style="list-style-type: none">● auto (auto negotiate)● 10 (10Mb/s)● 100 (100Mb/s)● 1000 (1Gb/s)● 10000 (10Gb/s)● 40000 (40Gb/s).

Element	Description
<i>mtu</i>	The maximum transmission unit, in bytes; a positive integer from 64-9216.
<i>mac_addr</i>	The MAC address (in xxxx.xxxx.xxxx format).
<i>admin_state</i>	The admin status; one of up, down.
<i>oper_state</i>	The operation state; one of up, down.

Update Interface

Update properties of one interface.

Request

Method Type	PUT
Request URI	/nos/api/cfg/interface/<if_name>
Request Body (JSON)	{ "if_name": "<if_name>", "mtu": "<mtu>", "admin_state": "<admin_state>" }

where

Element	Description
<i>if_name</i>	The interface name (String). Note: The interface must exist.
<i>mtu</i>	The maximum transmission unit, in bytes; a positive integer from 64-9216. Default value: 1500.
<i>admin_state</i>	The admin status; up (default), down.

Note: If an element is not specified in a PUT request, no update for that element will be performed.

Response

Response Body (JSON)	{ "duplex": "full", "if_name": "Ethernet1/1", "mtu": 1500, "admin_state": "down", "mac_addr": "a897.dc1b.8602", "ifindex": 410001, "oper_state": "down", "speed": "40000" }
-------------------------	--

where:

Element	Description
<i>if_name</i>	The interface name; a string. Note: The interface must exist.
<i>duplex</i>	The communication method of the interface; one of auto , full , half .

Element	Description
<i>speed</i>	The communication speed of the interface; one of the following: <ul style="list-style-type: none">● auto (auto negotiate)● 10 (10Mb/s)● 100 (100Mb/s)● 1000 (1Gb/s)● 10000 (10Gb/s)● 40000 (40Gb/s).
<i>if_name</i>	The interface name; a string. Note: The interface must exist.
<i>duplex</i>	The communication method of the interface; one of auto , full , half .
<i>speed</i>	The communication speed of the interface; one of the following: <ul style="list-style-type: none">● auto (auto negotiate)● 10 (10Mb/s)● 100 (100Mb/s)● 1000 (1Gb/s)● 10000 (10Gb/s)● 40000 (40Gb/s).

Example

Method Type	PUT
Request URI	/nos/api/cfg/interface/Ethernet1%2F5
Request Body (JSON)	{ "if_name": "Ethernet1/5", "duplex": "duplex-full", "speed": "auto", "mtu": 9216, "mac_addr": "0001.0200.0005", "admin_state": "up" }

Get Transceiver Information for All Interfaces

Get transceiver information for all interfaces.

Request

Method Type	GET
Request URI	/nos/api/cfg/interface/transceiver
Request Body (JSON)	

Response

Response Body (JSON)	[{ "status": "Disabled", "part number": "00D5803-N13692A ", "vendor": "IBM-Amphenol ", "temperature": " 0.0C", "volts": "0.00V", "rev": "N/A", "if_name": "Ethernet1/1", "installed": "Present", "serial number": "YK10FY382776 ", "link": "Down", "approval": "Approved", "type": "40Gb Passive DAC 3m" },]
-------------------------	---

where:

Element	Description
<i>if_name</i>	The IP interface name; a string. Note: The interface must exist.
<i>installed</i>	Whether the transceiver is present; one of <code>present</code> , not <code>not present</code> .
<i>status</i>	Interface status; one of <code>enabled</code> , <code>disabled</code> .
<i>type</i>	Type of transceiver; a string.
<i>vendor</i>	Vendor of transceiver; a string.
<i>part_number</i>	Part number of transceiver; a string.
<i>revision</i>	Revision of transceiver; a string or N/A.
<i>serial number</i>	Serial number of transceiver; a string.
<i>volts</i>	Volts of transceiver; a string or N/A.

Element	Description
<i>temperature</i>	Temperature of transceiver; a string or N/A.
<i>approved</i>	Approval status of the transceiver; one of approved, accepted, unapproved, Unsuport, Restrict, No Device.

Get Transceiver Information for One Interfaces

Get the transceiver information for a specified interface.

Request

Method Type	GET
Request URI	/nos/api/cfg/interface/transceiver/<if_name>
Request Body (JSON)	

where:

Element	Description
<i>if_name</i>	The IP interface name; a string. Note: The interface must exist.

Response

Response Body (JSON)	[{ "status": "Disabled", "part number": "00D5803-N13692A ", "vendor": "IBM-Amphenol ", "temperature": " 0.0C", "volts": "0.00V", "rev": "N/A", "if_name": "Ethernet1/1", "installed": "Present", "serial number": "YK10FY382776 ", "link": "Down", "approval": "Approved", "type": "40Gb Passive DAC 3m" }]
-------------------------	--

where:

Element	Description
<i>if_name</i>	The IP interface name; a string. Note: The interface must exist.
<i>installed</i>	Whether the transceiver is present; one of present , not present .
<i>status</i>	Interface status; one of enabled , disabled .
<i>type</i>	Type of transceiver; a string.
<i>vendor</i>	Vendor of transceiver; a string.

Element	Description
<i>part_number</i>	Part number of transceiver; a string.
<i>revision</i>	Revision of transceiver; a string or N/A.
<i>serial number</i>	Serial number of transceiver; a string.
<i>volts</i>	Volts of transceiver; a string or N/A.
<i>temperature</i>	Temperature of transceiver; a string or N/A.
<i>approved</i>	Approval status of the transceiver; one of approved, accepted, unapproved, Unsuport, Restrict, No Device.

IP Interface

The following IP interface URIs are available:

- /nos/api/cfg/ip_interface GET
- /nos/api/cfg/ip_interface/<if_name> GET, PUT

The following IP interface commands are available:

- [Get IP Properties of All Interfaces](#)
- [Get IP Interface Properties](#)
- [Update IP Interface Properties](#)

Get IP Properties of All Interfaces

Get IP properties of all interfaces.

Request

Method Type	GET
Request URI	/nos/api/cfg/ip_interface
Request Body (JSON)	

Response

Response Body (JSON)	[{ "if_name": "<if_name>", "bridge_port": "<bridge_port>", "mtu": "<mtu>", "ip_addr": "<ip_addr>", "ip_prefix_len": "<ip_prefix_len>", "vrf_name": "<vrf_name>", "admin_state": "<admin_state>" }]
-------------------------	--

where:

Element	Description
<i>if_name</i>	IP interface name (String). Note: The interface must exist.
<i>bridge_port</i>	Whether or not the port is a bridge port; one of yes (default), no.
<i>mtu</i>	The maximum transmission unit, in bytes; an integer from 64-9216. Default value: 1500.
<i>ip_addr</i>	IP address for the interface.
<i>ip_prefix_len</i>	IP address mask; a positive integer from 1-32.
<i>vrf_name</i>	The name of the VRF to which the interface belongs. Note: The named VRF must exist.
<i>admin_state</i>	The admin status; one of up, down.

Get IP Interface Properties

Get IP properties of one interface.

Request

Method Type	GET
Request URI	/nos/api/cfg/ip_interface/<ip_if_name>
Request Body (JSON)	

Response

Response Body (JSON)	{ "if_name": "<if_name>", "bridge_port": "<bridge_port>", "mtu": "<mtu>", "ip_addr": "<ip_addr>", "ip_prefix_len": "<ip_prefix_len>", "vrf_name": "<vrf_name>", "admin_state": "<admin_state>" }
-------------------------	--

where:

Element	Description
<i>if_name</i>	IP interface name (String). Note: The interface must exist.
<i>bridge_port</i>	Whether or not the port is a bridge port; one of yes (default), no.
<i>mtu</i>	The maximum transmission unit, in bytes; an integer from 64-9216. Default value: 1500.
<i>ip_addr</i>	IP address for the interface.
<i>ip_prefix_len</i>	IP address mask; a positive integer from 1-32.
<i>vrf_name</i>	The name of the VRF to which the interface belongs. Note: The named VRF must exist.
<i>admin_state</i>	The admin status; one of up, down.

Update IP Interface Properties

Update the IP properties of one interface.

Note: If an element is not specified in a PUT request, no update for that element will be performed.

Request

Method Type	PUT
Request URI	/nos/api/cfg/ip_interface/<ip_if_name>
Request Body (JSON)	{ "if_name": "<if_name>", "bridge_port": "<bridge_port>", "mtu": "<mtu>", "ip_addr": "<ip_addr>", "ip_prefix_len": "<ip_prefix_len>", "vrf_name": "<vrf_name>", "admin_state": "<admin_state>" }

where:

Element	Description
<i>if_name</i>	IP interface name (String). Note: The interface must exist.
<i>bridge_port</i>	Whether or not the port is a bridge port; one of yes (default), no.
<i>mtu</i>	The maximum transmission unit, in bytes; an integer from 64-9216. Default value: 1500.
<i>ip_addr</i>	IP address for the interface.
<i>ip_prefix_len</i>	IP address mask; a positive integer from 1-32.
<i>vrf_name</i>	The name of the VRF to which the interface belongs. Note: The named VRF must exist.
<i>admin_state</i>	The admin status; one of up, down.

Response

Response Body (JSON)	{ "if_name": "<if_name>", "bridge_port": "<bridge_port>", "mtu": "<mtu>", "ip_addr": "<ip_addr>", "ip_prefix_len": "<ip_prefix_len>", "vrf_name": "<vrf_name>", "admin_state": "<admin_state>" }
-------------------------	--

LACP

The following LACP URIs are available:

- /nos/api/cfg/lacp GET, PUT

The following LACP commands are available:

- Get LACP System Properties
 - Update LACP System Properties

Get LACP System Properties

Get the LACP properties of the system.

Request

Method Type	GET
Request URI	/nos/api/cfg/lacp
Request Body (JSON)	

Response

Response Body (JSON)	{ "sys_prio": "<sys_prio>", "max_bundle": "<max_bundle>", "interfaces": [{ "if_name": "<if_name>", "lag_mode": "<lag_mode>", "lacp_prio": "<lacp_prio>", "lacp_timeout": "<lacp_timeout>" }] }
-------------------------	---

where:

Element	Description
<i>sys_prio</i>	LACP system priority; a positive integer from 1-65535. Default value: 32768.
<i>max_bundle</i>	The supported maximum number of links per LAG.; a positive integer.
<i>if_name</i>	Ethernet interface name (String). Note: The interface must exist.
<i>lag_mode</i>	LAG mode; one of <code>lacp_active</code> , <code>lacp_passive</code> , <code>no_lacp</code>
<i>lacp_prio</i>	LACP priority for the physical port a positive integer from 1-65535. Default value: 32768.
<i>lacp_timeout</i>	LACP timeout for the physical port; one of <code>short</code> , <code>long</code> (default).

Update LACP System Properties

Update the LACP properties of the system.

Request

Method Type	PUT
Request URI	/nos/api/cfg/lacp
Request Body (JSON)	{ "sys_prio": "<sys_prio>", }

where:

Element	Description
<i>sys_prio</i>	LACP system priority; a positive integer from 1-65535. Default value: 32768.

Response

Response Body (JSON)	{ "sys_prio": "<sys_prio>", }
-------------------------	-------------------------------------

where:

Element	Description
<i>sys_prio</i>	LACP system priority; a positive integer from 1-65535. Default value: 32768.

LAG

The following LAG-related URIs are available:

- | | |
|-----------------------------|-------------------|
| ● /nos/api/cfg/lag | GET, POST, DELETE |
| ● /nos/api/cfg/lag/<lag_id> | GET, PUT, DELETE |

The following LAG commands are available:

- [Get All LAGs](#)
- [Create LAG](#)
- [Get LAG Properties](#)
- [Update LAG](#)
- [Delete LAG](#)

Get All LAGs

Get properties of all LAGs.

Request

Method Type	GET
Request URI	/nos/api/cfg/lag
Request Body (JSON)	

Response

Response Body (JSON)	[{ "lag_name": "<lag_name>", "lag_id": "<lag_id>", "interfaces": [{ "if_name": "<if_name>", "lag_mode": "<lag_mode>", "lacp_prio": "<lacp_prio>", "lacp_timeout": "<lacp_timeout>" }], "suspend_individual": "<status>", "min_links": "<min_links>" }]
-------------------------	---

where:

Element	Description
<i>lag_name</i>	The name of the LAG; a string.
<i>lag_id</i>	LAG identifier; an integer from 1-65535
<i>interfaces</i>	Physical interface members of the LAG; an integer from 1-32.
<i>if_name</i>	Ethernet interface name. Note: The interface must exist.
<i>lag_mode</i>	LAG mode; one of <code>lacp_active</code> , <code>lacp_passive</code> , <code>no_lacp</code> .
<i>lacp_prio</i>	LACP priority for the physical port; an integer from 1-65535. Default value: 32768.
<i>lacp_timeout</i>	LACP timeout for the physical port; one of <code>short</code> , <code>long</code> . Default value: <code>long</code> .

Element	Description
<i>suspend_individual</i>	<p>If the LAG does not get the LACP BPUD from peer ports the port aggregation, the result is one of the following:</p> <ul style="list-style-type: none"> ● suspended: LACP on the ports is suspended rather than put into individual state ● individual: LAG on the ports is put into individual state <p>Default value: individual</p>
<i>min_links</i>	<p>LACP minimum links number; an integer from 1-32.</p> <p>Default value: 1</p>

Create LAG

Creates a LAG.

Request

Method Type	POST
Request URI	/nos/api/cfg/lag
Request Body (JSON)	<pre>{ "lag_id": "<lag_id>", "interfaces": [{ "if_name": "<if_name>", "lag_mode": "<lag_mode>", "lacp_prio": "<lacp_prio>", "lacp_timeout": "<lacp_timeout>" }] }</pre>

where:

Element	Description
<i>lag_id</i>	LAG identifier; a positive integer from 1-65535.
<i>interfaces</i>	Physical interface members of the LAG. Up to 32 interfaces can be added.
<i>if_name</i>	Ethernet interface name (String). Note: The interface must exist.
<i>lag_mode</i>	LAG mode; one of <code>lacp_active</code> , <code>lacp_passive</code> , <code>no_lacp</code> .
<i>lacp_prio</i>	(Optional) LACP priority for the physical port; a positive integer from 1-65535. Default value: 32768.
<i>lacp_timeout</i>	(Optional) LACP timeout for the physical port; one of <code>short</code> , <code>long</code> . Default value: <code>long</code> .

Response

Response Body (JSON)	{ "lag_id": "<lag_id>", "lag_name": "<lag_name>", "interfaces": [{ "if_name": "<if_name>", "lag_mode": "<lag_mode>", "lacp_prio": "<lacp_prio>", "lacp_timeout": "<lacp_timeout>" }] }
----------------------	---

where:

Element	Description
<i>lag_name</i>	LAG name.
<i>lag_id</i>	LAG identifier; a positive integer from 1-65535.
<i>interfaces</i>	Physical interface members of the LAG. Up to 32 interfaces can be added.
<i>if_name</i>	Ethernet interface name (String). Note: The interface must exist.
<i>lag_mode</i>	LAG mode; one of <code>lacp_active</code> , <code>lacp_passive</code> , <code>no_lacp</code> .
<i>lacp_prio</i>	LACP priority for the physical port; a positive integer from 1-65535. Default value: 32768.
<i>lacp_timeout</i>	LACP timeout for the physical port; one of <code>short</code> , <code>long</code> . Default value: <code>long</code> .

Get LAG Properties

Get properties of the specified LAG.

Request

Method Type	GET
Request URI	/nos/api/cfg/lag/<lag_id>
Request Body (JSON)	

where:

Element	Description
<i>lag_id</i>	LAG identifier; an integer from 1-65535.

Response

Response Body (JSON)	[{ "lag_name": "<lag_name>", "lag_id": "<lag_id>", "interfaces": [{ "if_name": "<if_name>", "lag_mode": "<lag_mode>", "lacp_prio": "<lacp_prio>", "lacp_timeout": "<lacp_timeout>" }], "suspend_individual": "<status>", "min_links": "<min_links>" }]
-------------------------	---

where:

Element	Description
<i>lag_name</i>	The name of the LAG; a string.
<i>lag_id</i>	LAG identifier; an integer from 1-65535
<i>interfaces</i>	Physical interface members of the LAG; an integer from 1-32.
<i>if_name</i>	Ethernet interface name. Note: The interface must exist.
<i>lag_mode</i>	LAG mode; one of lacp_active, lacp_passive, no_lacp.
<i>lacp_prio</i>	LACP priority for the physical port; an integer from 1-65535. Default value: 32768.

Element	Description
<i>lacp_timeout</i>	LACP timeout for the physical port; one of short , long . Default value: long .
<i>suspend_individual</i>	If the LAG does not get the LACP BPUD from peer ports the port aggregation, the result is one of the following: <ul style="list-style-type: none"> ● suspended: LACP on the ports is suspended rather than put into individual state ● individual: LAG on the ports is put into individual state Default value: individual
<i>min_links</i>	LACP minimum links number; an integer from 1-32. Default value: 1.

Update LAG

Note: If an element is not specified in a PUT request, no update for that element will be performed.

Request

Method Type	PUT
Request URI	/nos/api/cfg/lag/<lag_id>
Request Body (JSON)	[{ "lag_id": "<lag_id>", "interfaces": [{ "if_name": "<if_name>", "lag_mode": "<lag_mode>", "lacp_prio": "<lacp_prio>", "lacp_timeout": "<lacp_timeout>" }], "suspend_individual": "<status>", "min_links": "<min_links>", }]

where:

Element	Description
<i>lag_id</i>	LAG identifier; an integer from 1-65535
<i>interfaces</i>	(Optional) Physical interface members of the LAG; an integer from 1-32.
<i>if_name</i>	Ethernet interface name. Note: The interface must exist.
<i>lag_mode</i>	LAG mode; one of <code>lacp_active</code> , <code>lacp_passive</code> , <code>no_lacp</code> .
<i>lacp_prio</i>	(Optional) LACP priority for the physical port; an integer from 1-65535. Default value: 32768.
<i>lacp_timeout</i>	(Optional) LACP timeout for the physical port; one of <code>short</code> , <code>long</code> . Default value: <code>long</code> .
<i>suspend_individual</i>	If the LAG does not get the LACP BPUD from peer ports the port aggregation, the result is one of the following: <ul style="list-style-type: none">• <code>suspended</code>: LACP on the ports is suspended rather than put into individual state• <code>individual</code>: LAG on the ports is put into individual state Default value: <code>individual</code>
<i>min_links</i>	LACP minimum links number; an integer from 1-32. Default value: 1.

Response

Response Body (JSON)	<pre>[{ "lag_id": "<lag_id>", "lag_name": "<lag_name>", "interfaces": [{ "if_name": "<if_name>", "lag_mode": "<lag_mode>", "lacp_prio": "<lACP_prio>", "lacp_timeout": "<lACP_timeout>" }], "suspend_individual": "<status>", "min_links": "<min_links>", }]</pre>
----------------------	--

where:

Element	Description
<i>lag_id</i>	LAG identifier; an integer from 1-65535
<i>lag_name</i>	The name of the LAG; a string.
<i>interfaces</i>	Physical interface members of the LAG; an integer from 1-32.
<i>if_name</i>	Ethernet interface name. Note: The interface must exist.
<i>lag_mode</i>	LAG mode; one of <code>lacp_active</code> , <code>lacp_passive</code> , <code>no_lacp</code> .
<i>lacp_prio</i>	LACP priority for the physical port; an integer from 1-65535. Default value: 32768.
<i>lacp_timeout</i>	LACP timeout for the physical port; one of <code>short</code> , <code>long</code> . Default value: <code>long</code> .
<i>suspend_individual</i>	If the LAG does not get the LACP BPUD from peer ports the port aggregation, the result is one of the following: <ul style="list-style-type: none"> ● <code>suspended</code>: LACP on the ports is suspended rather than put into individual state ● <code>individual</code>: LAG on the ports is put into individual state Default value: <code>individual</code>
<i>min_links</i>	LACP minimum links number; an integer from 1-32. Default value: 1.

Get LAG Load Balance Settings

Get the load balance properties for port aggregations.

Request

Method Type	GET
Request URI	/nos/api/cfg/lag/load_balance
Request Body (JSON)	

Response

Response Body (JSON)	{ "destination-ip" : "<destination-ip>" "destination-mac" : "<destination-mac>" "destination-port" : "<destination-port>" "source-dest-ip" : "<source-dest-ip>" "source-dest-mac" : "<source-dest-mac>" "source-dest-port" : "<source-dest-port>" "source-interface" : "<source-interface>" "source-ip" : "<source-ip>" "source-mac" : "<source-mac>" "source-port" : "<source-port>" }
-------------------------	--

where:

Element	Description
<i>destination-ip</i>	Load distribution on the destination IP address.
<i>destination-mac</i>	Load distribution on the destination MAC address.
<i>destination-port</i>	Load distribution on the destination TCP/UDP port.
<i>source-dest-ip</i>	Load distribution on the source and destination IP address.
<i>source-dest-mac</i>	Load distribution on the source and destination MAC address.
<i>source-dest-port</i>	Load distribution on the source and destination TCP/UDP port.
<i>source-interface</i>	Load distribution on the source ethernet interface.
<i>source-ip</i>	Load distribution on the source IP address.
<i>source-mac</i>	Load distribution on the source MAC address.
<i>source-port</i>	Load distribution on the source TCP/UDP port.

Update LAG Load Balance Settings

Update the load balance properties for port aggregations.

Request

Method Type	PUT
Request URI	/nos/api/cfg/lag/load_balance
Request Body (JSON)	{ "destination-ip" : "<destination-ip>" "destination-mac" : "<destination-mac>" "destination-port" : "<destination-port>" "source-dest-ip" : "<source-dest-ip>" "source-dest-mac" : "<source-dest-mac>" "source-dest-port" : "<source-dest-port>" "source-interface" : "<source-interface>" "source-ip" : "<source-ip>" "source-mac" : "<source-mac>" "source-port" : "<source-port>" }

where:

Element	Description
<i>destination-ip</i>	Load distribution on the destination IP address.
<i>destination-mac</i>	Load distribution on the destination MAC address.
<i>destination-port</i>	Load distribution on the destination TCP/UDP port.
<i>source-dest-ip</i>	Load distribution on the source and destination IP address.
<i>source-dest-mac</i>	Load distribution on the source and destination MAC address.
<i>source-dest-port</i>	Load distribution on the source and destination TCP/UDP port.
<i>source-interface</i>	Load distribution on the source ethernet interface.
<i>source-ip</i>	Load distribution on the source IP address.
<i>source-mac</i>	Load distribution on the source MAC address.
<i>source-port</i>	Load distribution on the source TCP/UDP port.

Response

Response Body (JSON)	{ "destination-port": "no", "source-dest-port": "yes", "source-ip": "no", "source-dest-ip": "no", "destination-mac": "no", "source-mac": "no", "destination-ip": "no", "source-interface": "no", "source-port": "no", "source-dest-mac": "no" }
----------------------	--

where:

Element	Description
<i>destination-ip</i>	Load distribution on the destination IP address.
<i>destination-mac</i>	Load distribution on the destination MAC address.
<i>destination-port</i>	Load distribution on the destination TCP/UDP port.
<i>source-dest-ip</i>	Load distribution on the source and destination IP address.
<i>source-dest-mac</i>	Load distribution on the source and destination MAC address.
<i>source-dest-port</i>	Load distribution on the source and destination TCP/UDP port.
<i>source-interface</i>	Load distribution on the source ethernet interface.
<i>source-ip</i>	Load distribution on the source IP address.
<i>source-mac</i>	Load distribution on the source MAC address.
<i>source-port</i>	Load distribution on the source TCP/UDP port.

Delete LAG

Delete a LAG.

Request

Method Type	DELETE
Request URI	/nos/api/cfg/lag/<lag_id>
Request Body (JSON)	

where:

Element	Description
<i>lag_id</i>	LAG identifier; a positive integer from 1-65535.

Note: If there is no *lag_id* (*lag_id=None* or specified *lag_id>All*), all user-created LAGs will be deleted.

LDAP

The following Lightweight Directory Access Protocol (LDAP) URIs are available:

- /nos/api/cfg/ldap GET, PUT
- /nos/api/cfg/ldap/profiles GET, POST, DELETE
- /nos/api/cfg/ldap/groups GET, POST, DELETE

The following LDAP commands are available:

- [Get LDAP Configuration](#)
- [Update LDAP Configuration](#)
- [Get LDAP Profile Configuration](#)
- [Add LDAP Profile](#)
- [Delete LDAP Profile](#)
- [Get LDAP Server Group Information](#)
- [Add LDAP Server Group](#)
- [Delete LDAP Server Group](#)

Get LDAP Configuration

This command returns the current LDAP configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/ldap
Request Body (JSON)	

Response

Response Body (JSON)	{ "status":{enable disable}, "global_pki":{pki_name}, "global_authorization":{bitmap rbac}, "global_retransmit":{retransmit}, "global_timeout":{timeout} }
----------------------	--

where:

Element	Description
status	The global status of the LDAP service on the switch. Valid value: <ul style="list-style-type: none">● <i>enable</i>● <i>disable</i>
global_pki	The name of the PKI profile used by LDAP. Valid value: <ul style="list-style-type: none">● <i>string</i>
global_authorization	The global LDAP authentication method. Valid value: <ul style="list-style-type: none">● <i>bitmap</i> for 8-byte permission bitmaps● <i>rbac</i> for Role-Based Access Control (RBAC)
global_retransmit	The global LDAP server retransmit count. Valid value: <ul style="list-style-type: none">● <i>1-5</i>
global_timeout	The global LDAP server timeout, in seconds. Valid value: <ul style="list-style-type: none">● <i>1-60</i>

Update LDAP Configuration

This command updates the LDAP configuration.

Request

Method Type	PUT
Request URI	/nos/api/cfg/ldap
Request Body (JSON)	{ "status":{enable disable}, "global_pki":{pki_name}, "global_authorization":{bitmap rbac}, "global_retransmit":{retransmit}, "global_timeout":{timeout} }

where:

Element	Description
status	The global status of the LDAP service on the switch. Valid value: <ul style="list-style-type: none">● <i>enable</i>● <i>disable</i>
global_pki	The name of the PKI profile used by LDAP. Valid value: <ul style="list-style-type: none">● <i>string</i>
global_authorization	The global LDAP authentication method. Valid value: <ul style="list-style-type: none">● <i>bitmap</i> for 8-byte permission bitmaps● <i>rbac</i> for Role-Based Access Control (RBAC)
global_retransmit	The global LDAP server retransmit count. Valid value: <ul style="list-style-type: none">● <i>1-5</i>
global_timeout	The global LDAP server timeout, in seconds. Valid value: <ul style="list-style-type: none">● <i>1-60</i>

Response

Response Body (JSON)	{ "status":{enable disable}, "global_pkı":{pkı_name}, "global_authorization":{bitmap rbac}, "global_retransmit":{retransmit}, "global_timeout":{timeout} }
----------------------	--

where:

Element	Description
status	The global status of the LDAP service on the switch. Valid value: <ul style="list-style-type: none">● <i>enable</i>● <i>disable</i>
global_pkı	The name of the PKI profile used by LDAP. Valid value: <ul style="list-style-type: none">● <i>string</i>
global_authorization	The global LDAP authentication method. Valid value: <ul style="list-style-type: none">● <i>bitmap</i> for 8-byte permission bitmaps● <i>rbac</i> for Role-Based Access Control (RBAC)
global_retransmit	The global LDAP server retransmit count. Valid value: <ul style="list-style-type: none">● 1-5
global_timeout	The global LDAP server timeout, in seconds. Valid value: <ul style="list-style-type: none">● 1-60

Get LDAP Profile Configuration

This command returns the configuration of a specific LDAP profile.

Request

Method Type	GET
Request URI	/nos/api/cfg/ldap/profiles/{profile_name}
Request Body (JSON)	

where:

Element	Description
<i>profile_name</i>	The name of the LDAP profile. Valid value: <ul style="list-style-type: none">● <i>string</i>

Response

Response Body (JSON)	<pre>[{ "profile_name": {profile_name}, "host": {ip_address}, "port": {port}, "base_dn": {base_dn}, "bind_mode": {prompted predefined}, "security": {ldaps (ignore) startTLS (ignore) clear}, "retransmit": {retransmit}, "timeout": {timeout}, "authorization": {bitmap rbac}, "attribute_group": {attribute_group}, "attribute_permission_name": {attribute_permission_name}, "attribute_permission_admin_bitmap": {attribute_permission_admin_bitmap}, "attribute_permission_oper_bitmap": {attribute_permission_oper_bitmap}, "attribute_permission_deny_bitmap": {attribute_permission_deny_bitmap}, "attribute_permission_admin_role": {attribute_permission_admin_role}, "attribute_permission_oper_role": {attribute_permission_oper_role}, "attribute_permission_deny_role": {attribute_permission_deny_role}, "attribute_username": {attribute_username}, "predefined_credential_dn": {predefined_credential_dn}, "predefined_credential_key": {predefined_credential_key}, "credential_key_form": {0 7}, "group_filter": {group_filter}, "pki_name": {pki_name} }]</pre>
----------------------	---

where:

Element	Description
<code>profile_name</code>	The name of the LDAP profile. Valid value: <ul style="list-style-type: none">● <i>string</i>
<code>host</code>	The IP address of the LDAP server. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
<code>port</code>	The TCP port for sending messages to the LDAP server. Valid value: <ul style="list-style-type: none">● 1-65535
<code>base_dn</code>	The LDAP based Domain Name (DN). Valid value: <ul style="list-style-type: none">● <i>string</i>

Element	Description
bind_mode	The LDAP binding method. Valid value: <ul style="list-style-type: none">● <i>prompted</i>● <i>predefined</i>
security	The LDAP transmit mode and security option. Valid value: <ul style="list-style-type: none">● <i>LDAPS (ignore)</i>● <i>startTLS (ignore)</i>● <i>clear</i>
retransmit	The LDAP retransmit count. Valid value: <ul style="list-style-type: none">● <i>1-5</i>
timeout	The LDAP server connection timeout period, in seconds. Valid value: <ul style="list-style-type: none">● <i>1-60</i>
authorization	The LDAP authorization method. Valid value: <ul style="list-style-type: none">● <i>bitmap</i> for 8-byte permission bitmaps● <i>rbac</i> for Role-Based Access Control (RBAC)
attribute_group	The name of the custom LDAP attribute group. Valid value: <ul style="list-style-type: none">● <i>string</i>
attribute_permission_name	The custom LDAP attribute permission name. Valid value: <ul style="list-style-type: none">● <i>string</i>
attribute_permission_admin_bitmap	The custom LDAP attribute permission administrative bitmap. Valid value: <ul style="list-style-type: none">● <i>string</i>
predefined_credential_dn	The Domain Name for binding with the LDAP server. Valid value: <ul style="list-style-type: none">● <i>string</i>
attribute_permission_admin_role	The custom LDAP attribute permission administrator role. Valid value: <ul style="list-style-type: none">● <i>string</i>
attribute_permission_oper_bitmap	The custom LDAP attribute permission operative bitmap. Valid value: <ul style="list-style-type: none">● <i>string</i>

Element	Description
<code>attribute_permission_deny_bitmap</code>	The custom LDAP attribute permission denial bitmap. Valid value: <ul style="list-style-type: none">● <i>string</i>
<code>credential_key_form</code>	The LDAP authentication key encryption method. Valid value: <ul style="list-style-type: none">● 0 - clear text● 7 - encrypted
<code>predefined_credential_key</code>	The password for the Domain Name. Valid value: <ul style="list-style-type: none">● <i>string</i>
<code>attribute_username</code>	The custom LDAP attribute username. Valid value: <ul style="list-style-type: none">● <i>string</i>
<code>attribute_permission_oper_role</code>	The custom LDAP attribute permission operator role. Valid value: <ul style="list-style-type: none">● <i>string</i>
<code>attribute_permission_deny_role</code>	The custom LDAP attribute deny operator role. Valid value: <ul style="list-style-type: none">●
<code>group_filter</code>	The filter when performing group searches. Valid value: <ul style="list-style-type: none">● <i>string</i>
<code>pki_name</code>	The name of the PKI profile used by LDAP. Valid value: <ul style="list-style-type: none">● <i>string</i>

Add LDAP Profile

This command configures a new LDAP profile.

Request

Method Type	POST
Request URI	/nos/api/cfg/ldap/profiles
Request Body (JSON)	<pre>{ "profile_name": {profile_name}, "host": {ip_address}, "port": {port}, "base_dn": {base_dn}, "bind_mode": {prompted predefined}, "security": {ldaps (ignore) startTLS (ignore) clear}, "retransmit": {retransmit}, "timeout": {timeout}, "authorization": {bitmap rbac}, "attribute_group": {attribute_group}, "attribute_permission_name": {attribute_permission_name}, "attribute_permission_admin_bitmap": {attribute_permission_admin_bitmap}, "attribute_permission_oper_bitmap": {attribute_permission_oper_bitmap}, "attribute_permission_deny_bitmap": {attribute_permission_deny_bitmap}, "attribute_permission_admin_role": {attribute_permission_admin_role}, "attribute_permission_oper_role": {attribute_permission_oper_role}, "attribute_permission_deny_role": {attribute_permission_deny_role}, "attribute_username": {attribute_username}, "predefined_credential_dn": {predefined_credential_dn}, "predefined_credential_key": {predefined_credential_key}, "credential_key_form": {0 7}, "group_filter": {group_filter}, "pki_name": {pki_name} }</pre>

where:

Element	Description
profile_name	The name of the LDAP profile. Valid value: <ul style="list-style-type: none">● <i>string</i>
host	The IP address of the LDAP server. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
port	The TCP port for sending messages to the LDAP server. Valid value: <ul style="list-style-type: none">● <i>1-65535</i>

Element	Description
<code>base_dn</code>	The LDAP based Domain Name (DN). Valid value: <ul style="list-style-type: none">● <i>string</i>
<code>bind_mode</code>	The LDAP binding method. Valid value: <ul style="list-style-type: none">● <i>prompted</i>● <i>predefined</i>
<code>security</code>	The LDAP transmit mode and security option. Valid value: <ul style="list-style-type: none">● <i>LDAPS (ignore)</i>● <i>startTLS (ignore)</i>● <i>clear</i>
<code>retransmit</code>	The LDAP retransmit count. Valid value: <ul style="list-style-type: none">● <i>1-5</i>
<code>timeout</code>	The LDAP server connection timeout period, in seconds. Valid value: <ul style="list-style-type: none">● <i>1-60</i>
<code>authorization</code>	The LDAP authorization method. Valid value: <ul style="list-style-type: none">● <i>bitmap</i> for 8-byte permission bitmaps● <i>rbac</i> for Role-Based Access Control (RBAC)
<code>attribute_group</code>	The name of the custom LDAP attribute group. Valid value: <ul style="list-style-type: none">● <i>string</i>
<code>attribute_permission_name</code>	The custom LDAP attribute permission name. Valid value: <ul style="list-style-type: none">● <i>string</i>
<code>attribute_permission_admin_bitmap</code>	The custom LDAP attribute permission administrative bitmap. Valid value: <ul style="list-style-type: none">● <i>string</i>
<code>predefined_credential_dn</code>	The Domain Name for binding with the LDAP server. Valid value: <ul style="list-style-type: none">● <i>string</i>
<code>attribute_permission_admin_role</code>	The custom LDAP attribute permission administrator role. Valid value: <ul style="list-style-type: none">● <i>string</i>

Element	Description
attribute_permission_oper_bitmap	The custom LDAP attribute permission operative bitmap. Valid value: <ul style="list-style-type: none">● <i>string</i>
attribute_permission_deny_bitmap	The custom LDAP attribute permission denial bitmap. Valid value: <ul style="list-style-type: none">● <i>string</i>
credential_key_form	The LDAP authentication key encryption method. Valid value: <ul style="list-style-type: none">● 0 - clear text● 7 - encrypted
predefined_credential_key	The password for the Domain Name. Valid value: <ul style="list-style-type: none">● <i>string</i>
attribute_username	The custom LDAP attribute username. Valid value: <ul style="list-style-type: none">● <i>string</i>
attribute_permission_oper_role	The custom LDAP attribute permission operator role. Valid value: <ul style="list-style-type: none">● <i>string</i>
attribute_permission_deny_role	The custom LDAP attribute deny operator role. Valid value: <ul style="list-style-type: none">●
group_filter	The filter when performing group searches. Valid value: <ul style="list-style-type: none">● <i>string</i>
pki_name	The name of the PKI profile used by LDAP. Valid value: <ul style="list-style-type: none">● <i>string</i>

Response

Response Body (JSON)	<pre>{ "profile_name": {profile_name}, "host": {ip_address}, "port": {port}, "base_dn": {base_dn}, "bind_mode": {prompted predefined}, "security": {ldaps (ignore) startTLS (ignore) clear}, "retransmit": {retransmit}, "timeout": {timeout}, "authorization": {bitmap rbac}, "attribute_group": {attribute_group}, "attribute_permission_name": {attribute_permission_name}, "attribute_permission_admin_bitmap": {attribute_permission_admin_bitmap}, "attribute_permission_oper_bitmap": {attribute_permission_oper_bitmap}, "attribute_permission_deny_bitmap": {attribute_permission_deny_bitmap}, "attribute_permission_admin_role": {attribute_permission_admin_role}, "attribute_permission_oper_role": {attribute_permission_oper_role}, "attribute_permission_deny_role": {attribute_permission_deny_role}, "attribute_username": {attribute_username}, "predefined_credential_dn": {predefined_credential_dn}, "predefined_credential_key": {predefined_credential_key}, "credential_key_form": {0 7}, "group_filter": {group_filter}, "pki_name": {pki_name} }</pre>
----------------------	---

where:

Element	Description
profile_name	The name of the LDAP profile. Valid value: <ul style="list-style-type: none">● <i>string</i>
host	The IP address of the LDAP server. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
port	The TCP port for sending messages to the LDAP server. Valid value: <ul style="list-style-type: none">● <i>1-65535</i>
base_dn	The LDAP based Domain Name (DN). Valid value: <ul style="list-style-type: none">● <i>string</i>

Element	Description
bind_mode	The LDAP binding method. Valid value: <ul style="list-style-type: none">● <i>prompted</i>● <i>predefined</i>
security	The LDAP transmit mode and security option. Valid value: <ul style="list-style-type: none">● <i>LDAPS (ignore)</i>● <i>startTLS (ignore)</i>● <i>clear</i>
retransmit	The LDAP retransmit count. Valid value: <ul style="list-style-type: none">● <i>1-5</i>
timeout	The LDAP server connection timeout period, in seconds. Valid value: <ul style="list-style-type: none">● <i>1-60</i>
authorization	The LDAP authorization method. Valid value: <ul style="list-style-type: none">● <i>bitmap</i> for 8-byte permission bitmaps● <i>rbac</i> for Role-Based Access Control (RBAC)
attribute_group	The name of the custom LDAP attribute group. Valid value: <ul style="list-style-type: none">● <i>string</i>
attribute_permission_name	The custom LDAP attribute permission name. Valid value: <ul style="list-style-type: none">● <i>string</i>
attribute_permission_admin_bitmap	The custom LDAP attribute permission administrative bitmap. Valid value: <ul style="list-style-type: none">● <i>string</i>
predefined_credential_dn	The Domain Name for binding with the LDAP server. Valid value: <ul style="list-style-type: none">● <i>string</i>
attribute_permission_admin_role	The custom LDAP attribute permission administrator role. Valid value: <ul style="list-style-type: none">● <i>string</i>
attribute_permission_oper_bitmap	The custom LDAP attribute permission operative bitmap. Valid value: <ul style="list-style-type: none">● <i>string</i>

Element	Description
<code>attribute_permission_deny_bitmap</code>	The custom LDAP attribute permission denial bitmap. Valid value: <ul style="list-style-type: none">● <i>string</i>
<code>credential_key_form</code>	The LDAP authentication key encryption method. Valid value: <ul style="list-style-type: none">● 0 - clear text● 7 - encrypted
<code>predefined_credential_key</code>	The password for the Domain Name. Valid value: <ul style="list-style-type: none">● <i>string</i>
<code>attribute_username</code>	The custom LDAP attribute username. Valid value: <ul style="list-style-type: none">● <i>string</i>
<code>attribute_permission_oper_role</code>	The custom LDAP attribute permission operator role. Valid value: <ul style="list-style-type: none">● <i>string</i>
<code>attribute_permission_deny_role</code>	The custom LDAP attribute deny operator role. Valid value: <ul style="list-style-type: none">●
<code>group_filter</code>	The filter when performing group searches. Valid value: <ul style="list-style-type: none">● <i>string</i>
<code>pki_name</code>	The name of the PKI profile used by LDAP. Valid value: <ul style="list-style-type: none">● <i>string</i>

Delete LDAP Profile

This command deletes a configured LDAP profile.

Request

Method Type	DELETE
Request URI	/nos/api/cfg/ldap/profiles/{profile_name}
Request Body (JSON)	

where:

Element	Description
<i>profile_name</i>	The name of the LDAP profile. Valid value: <ul style="list-style-type: none">● <i>string</i>

Get LDAP Server Group Information

This command returns LDAP group information.

Request

Method Type	GET
Request URI	/nos/api/cfg/ldap/groups/{group_name}
Request Body (JSON)	

where:

Element	Description
<i>group_name</i>	The name of the LDAP server group. Valid value: <ul style="list-style-type: none">● <i>string</i> Note: If this variable is not provided, then the command returns information about all configured LDAP server groups.

Response

Response Body (JSON)	<pre>[{ "group_name": "{group_name}", "vrf_name": "{vrf_name}", "profiles": [[{ "profile_name": {profile_name}, "host": {ip_address}, "port": {port}, "base_dn": {base_dn}, "bind_mode": {prompted predefined}, "security": {ldaps (ignore) startTLS (ignore) clear}, "retransmit": {retransmit}, "timeout": {timeout}, "authorization": {bitmap rbac}, "attribute_group": {attribute_group}, "attribute_permission_name": {attribute_permission_name}, "attribute_permission_admin_bitmap": {attribute_permission_admin_bitmap}, "attribute_permission_oper_bitmap": {attribute_permission_oper_bitmap}, "attribute_permission_deny_bitmap": {attribute_permission_deny_bitmap}, "attribute_permission_admin_role": {attribute_permission_admin_role}, "attribute_permission_oper_role": {attribute_permission_oper_role}, "attribute_permission_deny_role": {attribute_permission_deny_role}, "attribute_username": {attribute_username}, "predefined_credential_dn": {predefined_credential_dn}, "predefined_credential_key": {predefined_credential_key}, "credential_key_form": {0 7}, "group_filter": {group_filter}, "pki_name": {pki_name} }]] }]</pre>
----------------------	---

where:

Element	Description
group_name	The name of the LDAP server group. Valid value: <ul style="list-style-type: none">● string
vrf_name	The VRF instance for the LDAP server group. Valid value: <ul style="list-style-type: none">● VRF instance name
profiles	The list of LDAP profiles.

Element	Description
profile_name	The name of the LDAP profile. Valid value: <ul style="list-style-type: none">● <i>string</i>
host	The IP address of the LDAP server. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
port	The TCP port for sending messages to the LDAP server. Valid value: <ul style="list-style-type: none">● 1-65535
base_dn	The LDAP based Domain Name (DN). Valid value: <ul style="list-style-type: none">● <i>string</i>
bind_mode	The LDAP binding method. Valid value: <ul style="list-style-type: none">● <i>prompted</i>● <i>predefined</i>
security	The LDAP transmit mode and security option. Valid value: <ul style="list-style-type: none">● <i>LDAPS (ignore)</i>● <i>startTLS (ignore)</i>● <i>clear</i>
retransmit	The LDAP retransmit count. Valid value: <ul style="list-style-type: none">● 1-5
timeout	The LDAP server connection timeout period, in seconds. Valid value: <ul style="list-style-type: none">● 1-60
authorization	The LDAP authorization method. Valid value: <ul style="list-style-type: none">● <i>bitmap</i> for 8-byte permission bitmaps● <i>rbac</i> for Role-Based Access Control (RBAC)
attribute_group	The name of the custom LDAP attribute group. Valid value: <ul style="list-style-type: none">● <i>string</i>
attribute_permission_name	The custom LDAP attribute permission name. Valid value: <ul style="list-style-type: none">● <i>string</i>

Element	Description
attribute_permission_admin_bitmap	The custom LDAP attribute permission administrative bitmap. Valid value: <ul style="list-style-type: none">● <i>string</i>
predefined_credential_dn	The Domain Name for binding with the LDAP server. Valid value: <ul style="list-style-type: none">● <i>string</i>
attribute_permission_admin_role	The custom LDAP attribute permission administrator role. Valid value: <ul style="list-style-type: none">● <i>string</i>
attribute_permission_oper_bitmap	The custom LDAP attribute permission operative bitmap. Valid value: <ul style="list-style-type: none">● <i>string</i>
attribute_permission_deny_bitmap	The custom LDAP attribute permission denial bitmap. Valid value: <ul style="list-style-type: none">● <i>string</i>
credential_key_form	The LDAP authentication key encryption method. Valid value: <ul style="list-style-type: none">● 0 - clear text● 7 - encrypted
predefined_credential_key	The password for the Domain Name. Valid value: <ul style="list-style-type: none">● <i>string</i>
attribute_username	The custom LDAP attribute username. Valid value: <ul style="list-style-type: none">● <i>string</i>
attribute_permission_oper_role	The custom LDAP attribute permission operator role. Valid value: <ul style="list-style-type: none">● <i>string</i>
attribute_permission_deny_role	The custom LDAP attribute deny operator role. Valid value: <ul style="list-style-type: none">●
group_filter	The filter when performing group searches. Valid value: <ul style="list-style-type: none">● <i>string</i>
pki_name	The name of the PKI profile used by LDAP. Valid value: <ul style="list-style-type: none">● <i>string</i>

Add LDAP Server Group

This command configures a new LDAP server group.

Request

Method Type	POST
Request URI	/nos/api/cfg/ldap/groups
Request Body (JSON)	<pre>{ "group_name": "{group_name}", "vrf_name": "{vrf_name}", "profiles": ["profile_name": "{profile_name}"] }</pre>

where:

Element	Description
group_name	The name of the LDAP server group. Valid value: <ul style="list-style-type: none">● <i>string</i>
vrf_name	The VRF instance for the LDAP server group. Valid value: <ul style="list-style-type: none">● <i>VRF instance name</i>
profiles	The list of LDAP profiles.
profile_name	The name of the LDAP profile. Valid value: <ul style="list-style-type: none">● <i>string</i>

Response

Response Body (JSON)	<pre>[{ "group_name": "{group_name}", "vrf_name": "{vrf_name}", "profiles": [[{ "profile_name": {profile_name}, "host": {ip_address}, "port": {port}, "base_dn": {base_dn}, "bind_mode": {prompted predefined}, "security": {ldaps (ignore) startTLS (ignore) clear}, "retransmit": {retransmit}, "timeout": {timeout}, "authorization": {bitmap rbac}, "attribute_group": {attribute_group}, "attribute_permission_name": {attribute_permission_name}, "attribute_permission_admin_bitmap": {attribute_permission_admin_bitmap}, "attribute_permission_oper_bitmap": {attribute_permission_oper_bitmap}, "attribute_permission_deny_bitmap": {attribute_permission_deny_bitmap}, "attribute_permission_admin_role": {attribute_permission_admin_role}, "attribute_permission_oper_role": {attribute_permission_oper_role}, "attribute_permission_deny_role": {attribute_permission_deny_role}, "attribute_username": {attribute_username}, "predefined_credential_dn": {predefined_credential_dn}, "predefined_credential_key": {predefined_credential_key}, "credential_key_form": {0 7}, "group_filter": {group_filter}, "pki_name": {pki_name} }]] }]</pre>
----------------------	---

where:

Element	Description
group_name	The name of the LDAP server group. Valid value: <ul style="list-style-type: none">● string
vrf_name	The VRF instance for the LDAP server group. Valid value: <ul style="list-style-type: none">● VRF instance name
profiles	The list of LDAP profiles.

Element	Description
<code>profile_name</code>	The name of the LDAP profile. Valid value: <ul style="list-style-type: none">● <i>string</i>
<code>host</code>	The IP address of the LDAP server. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
<code>port</code>	The TCP port for sending messages to the LDAP server. Valid value: <ul style="list-style-type: none">● 1-65535
<code>base_dn</code>	The LDAP based Domain Name (DN). Valid value: <ul style="list-style-type: none">● <i>string</i>
<code>bind_mode</code>	The LDAP binding method. Valid value: <ul style="list-style-type: none">● <i>prompted</i>● <i>predefined</i>
<code>security</code>	The LDAP transmit mode and security option. Valid value: <ul style="list-style-type: none">● <i>LDAPS (ignore)</i>● <i>startTLS (ignore)</i>● <i>clear</i>
<code>retransmit</code>	The LDAP retransmit count. Valid value: <ul style="list-style-type: none">● 1-5
<code>timeout</code>	The LDAP server connection timeout period, in seconds. Valid value: <ul style="list-style-type: none">● 1-60
<code>authorization</code>	The LDAP authorization method. Valid value: <ul style="list-style-type: none">● <i>bitmap</i> for 8-byte permission bitmaps● <i>rbac</i> for Role-Based Access Control (RBAC)
<code>attribute_group</code>	The name of the custom LDAP attribute group. Valid value: <ul style="list-style-type: none">● <i>string</i>
<code>attribute_permission_name</code>	The custom LDAP attribute permission name. Valid value: <ul style="list-style-type: none">● <i>string</i>

Element	Description
attribute_permission_admin_bitmap	The custom LDAP attribute permission administrative bitmap. Valid value: <ul style="list-style-type: none">● <i>string</i>
predefined_credential_dn	The Domain Name for binding with the LDAP server. Valid value: <ul style="list-style-type: none">● <i>string</i>
attribute_permission_admin_role	The custom LDAP attribute permission administrator role. Valid value: <ul style="list-style-type: none">● <i>string</i>
attribute_permission_oper_bitmap	The custom LDAP attribute permission operative bitmap. Valid value: <ul style="list-style-type: none">● <i>string</i>
attribute_permission_deny_bitmap	The custom LDAP attribute permission denial bitmap. Valid value: <ul style="list-style-type: none">● <i>string</i>
credential_key_form	The LDAP authentication key encryption method. Valid value: <ul style="list-style-type: none">● 0 - clear text● 7 - encrypted
predefined_credential_key	The password for the Domain Name. Valid value: <ul style="list-style-type: none">● <i>string</i>
attribute_username	The custom LDAP attribute username. Valid value: <ul style="list-style-type: none">● <i>string</i>
attribute_permission_oper_role	The custom LDAP attribute permission operator role. Valid value: <ul style="list-style-type: none">● <i>string</i>
attribute_permission_deny_role	The custom LDAP attribute deny operator role. Valid value: <ul style="list-style-type: none">●
group_filter	The filter when performing group searches. Valid value: <ul style="list-style-type: none">● <i>string</i>
pki_name	The name of the PKI profile used by LDAP. Valid value: <ul style="list-style-type: none">● <i>string</i>

Delete LDAP Server Group

This command deletes a configured LDAP server group.

Request

Method Type	DELETE
Request URI	/nos/api/cfg/ldap/groups/{group_name}
Request Body (JSON)	

where:

Element	Description
<i>group_name</i>	The name of the LDAP server group. Valid value: <ul style="list-style-type: none">● <i>string</i>

LLDP

The following LLDP URIs are available:

- /nos/api/cfg/lldp GET, PUT
- /nos/api/cfg/lldp/lldp_interface GET
- /nos/api/cfg/lldp/lldp_interface/<eth_if_name> GET, PUT
- /nos/api/cfg/lldp/lldp_interface/statistics/<eth_if_name> GET
- /nos/api/cfg/lldp/lldp_interface/neighbor/<eth_if_name> GET
- /nos/api/cfg/lldp/lldp_interface/neighbor GET

The following LLDP commands are available:

- [Get LLDP System Properties](#)
- [Update LLDP System Properties](#)
- [Get LLDP Properties for All Interfaces](#)
- [Get LLDP Interface Properties](#)
- [Update LLDP Interface Properties](#)
- [Get LLDP Interface Statistics](#)
- [Get LLDP Interface Neighbor information](#)
- [Get LLDP Neighbor Information for All Interfaces](#)

Get LLDP System Properties

Get global LLDP properties of the system.

Request

Method Type	GET
Request URI	/nos/api/cfg/lldp
Request Body (JSON)	

Response

Response Body (JSON)	{ "reinit delay": "<reinit delay>", "transit interval": "<transit interval>", "transmit delay": "<transmit delay>" }
-------------------------	--

where:

Element	Description
<i>reinit delay</i>	The number of seconds until LLDP re-initialization is attempted on an interface; an integer from 1-10. Default value: 2 seconds.
<i>transit interval</i>	The time interval, in seconds, between transmissions of LLDP messages; an integer from 5-32768. Default value: 30 seconds.
<i>transmit delay</i>	The number of seconds for transmission delay; an integer from 1-8192. Default value: 2 seconds.

Update LLDP System Properties

Update the global LLDP properties of the system.

Request

Method Type	PUT
Request URI	/nos/api/cfg/lldp
Request Body (JSON)	{ "reinit delay": "<reinit delay>", "transit interval": "<transit interval>", "transmit delay": "<transmit delay>" }

where:

Element	Description
<i>reinit delay</i>	The number of seconds until LLDP re-initialization is attempted on an interface; an integer from 1-10. Default value: 2 seconds.
<i>transit interval</i>	The time interval, in seconds, between transmissions of LLDP messages; an integer from 5-32768.. Default value: 30 seconds.
<i>transmit delay</i>	The number of seconds for transmission delay; an integer from 1-8192. Default value: 2 seconds.

Response

Response Body (JSON)	{ "reinit delay": "<reinit delay>", "transit interval": "<transit interval>", "transmit delay": "<transmit delay>" }
-------------------------	--

Get LLDP Properties for All Interfaces

Get LLDP properties of all interfaces.

Request

Method Type	GET
Request URI	/nos/api/cfg/lldp/lldp_interface
Request Body (JSON)	

Response

Response Body (JSON)	[{ "if_name": "<if_name>", "ena_lldp_rx": "<ena_lldp_rx>", "ena_lldp_tx": "<ena_lldp_tx>" }]
-------------------------	--

where:

Element	Description
<i>if_name</i>	Ethernet interface name (String). Note: The Ethernet interface must exist.
<i>ena_lldp_rx</i>	Enables or disables LLDP frame reception on a physical interface; one of yes (default), no.
<i>ena_lldp_tx</i>	Enables or disable sLLDP frame transmission on a physical interface; one of yes (default), no.

Get LLDP Interface Properties

Get LLDP properties of one interface.

Request

Method Type	GET
Request URI	/nos/api/cfg/lldp/lldp_interface/{eth_if_name}
Request Body (JSON)	

Response

Response Body (JSON)	{ "if_name": "<if_name>", "ena_lldp_rx": "<ena_lldp_rx>", "ena_lldp_tx": "<ena_lldp_tx>" }
-------------------------	--

where:

Element	Description
<i>if_name</i>	Ethernet interface name (String). Note: The Ethernet interface must exist.
<i>ena_lldp_rx</i>	Enables or disables LLDP frame reception on a physical interface; one of yes (default), no.
<i>ena_lldp_tx</i>	Enables or disable sLLDP frame transmission on a physical interface; one of yes (default), no.

Update LLDP Interface Properties

Update the LLDP properties of one interface.

Request

Method Type	PUT
Request URI	/nos/api/cfg/lldp/lldp_interface/<eth_if_name>
Request Body (JSON)	{ "if_name": "<if_name>", "ena_lldp_rx": "<ena_lldp_rx>", "ena_lldp_tx": "<ena_lldp_tx>" }

where:

Element	Description
<i>if_name</i>	Ethernet interface name (String). Note: The Ethernet interface must exist.
<i>ena_lldp_rx</i>	Enables or disables LLDP frame reception on a physical interface; one of yes (default), no.
<i>ena_lldp_tx</i>	Enables or disable sLLDP frame transmission on a physical interface; one of yes (default), no.

Response

Response Body (JSON)	{ "if_name": "<if_name>", "ena_lldp_rx": "<ena_lldp_rx>", "ena_lldp_tx": "<ena_lldp_tx>" }
-------------------------	--

Get LLDP Interface Statistics

Get LLDP interface statistics per interface.

Request

Method Type	GET
Request URI	/nos/api/cfg/lldp/lldp_interface/statistics/<eth_if_name>
Request Body (JSON)	

Response

Response Body (JSON)	{ "total frames": "<total_frames>", "total tlvs discarded": "<total_tlbs_discarded>", "total frames transmitted": "<total_frames_transmitted>", "total errored frames": "<total_errored_frames>", "total frames discarded": "<total_frames_discarded>", "total entries aged": "<total_entries_aged>", "total tlvs unrecognized": "<total_tlbs_unrecognized>" }
-------------------------	--

where:

Element	Description
total frames	The total number of LLDP frames received.
total tlvs discarded	The total number of LLDP TLVs discarded.
total frames transmitted	The total number of LLDP frames transmitted.
total errored frames	The total number of frames received with errors.
total frames discarded	The total number of discarded frames.
total entries aged	The total number of entries aged out.
total tlvs unrecognized	The total number of unrecognized LLDP TLVs.

Get LLDP Interface Neighbor information

Get LLDP interface neighbor information

Request

Method Type	GET
Request URI	/nos/api/cfg/lldp/lldp_interface/neighbor/<eth_if_name>
Request Body (JSON)	

Response

Response Body (JSON)	{ "if_name": "<if_name>", "capability": "<capability>", "rx ttl": "<rx ttl>", "system name": "<system name>", "system description": "<system description>" "system_mac": "<system mac>" }
-------------------------	--

where:

Element	Description
<i>if_name</i>	Ethernet interface name (String). Note: The Ethernet interface must exist.
<i>capability</i>	Remote switch capability; one of (B) – Bridge, (R) – Router.
<i>rx ttl</i>	The TTL.
<i>system name</i>	Remote system name.
<i>system description</i>	Remote system description.
<i>system_mac</i>	Unique system MAC.

Get LLDP Neighbor Information for All Interfaces

Get LLDP neighbor information for all interfaces

Request

Method Type	GET
Request URI	/nos/api/cfg/lldp/lldp_interface/neighbor
Request Body (JSON)	

Response

Response Body (JSON)	[{ "if_name": "<if_name>", "capability": "<capability>", "rx ttl": "<rx ttl>", "system name": "<system name>", "system description": "<system description>" }]
-------------------------	--

where:

Element	Description
<i>if_name</i>	Ethernet interface name (String). Note: The Ethernet interface must exist.
<i>capability</i>	Remote switch capability; one of (B) – Bridge, (R) – Router.
<i>rx ttl</i>	The TTL.
<i>system name</i>	Remote system name.
<i>system description</i>	Remote system description.

MSTP

The following MSTP URIs are available:

- /nos/api/cfg/mstp GET, PUT
- /nos/api/cfg/mstp_instance GET, POST
- /nos/api/cfg/mstp_instance/<instance_number> GET, PUT, DELETE
- /nos/api/cfg/mstp_interface/<instance_number>/<if_name> GET, PUT

The following MSTP commands are available:

- [Get MSTP System Properties](#)
- [Update MSTP System Properties](#)
- [Get Properties of All MSTP Instances](#)
- [Create MSTP Instance](#)
- [Get MSTP Instance](#)
- [Update MSTP Instance](#)
- [Delete MSTP Instance](#)
- [Get Interface Properties of an MSTP Instance](#)
- [Update Interface Properties of an MSTP Instance](#)

Get MSTP System Properties

Update global MSTP properties of the system.

Request

Method Type	GET
Request URI	/nos/api/cfg/mstp
Request Body (JSON)	

Response

Response Body (JSON)	{ "region_name": "<region_name>" "revision": "<revision>" }
-------------------------	--

where:

Element	Description
<i>region_name</i>	Region name; a string up to 32 characters long.
<i>revision</i>	Revision number; an integer from 0-65535.

Update MSTP System Properties

Update global MSTP properties of the system.

Note: If an element is not specified in a PUT request, no update for that element will be performed.

Request

Method Type	PUT
Request URI	/nos/api/cfg/mstp
Request Body (JSON)	{ "region_name": "<region_name>" "revision": "<revision>" }

where:

Element	Description
<i>region_name</i>	Region name; a string up to 32 characters long.
<i>revision</i>	Revision number; an integer from 0-65535.

Response

Response Body (JSON)	{ "region_name": "<region_name>" "revision": "<revision>" }
-------------------------	--

Get Properties of All MSTP Instances

Get properties of all MSTP instances.

Request

Method Type	GET
Request URI	/nos/api/cfg/mstp_instance
Request Body (JSON)	

Response

Response Body (JSON)	[{ "instance_id": "<instance_id>", "instance_prio": "<instance_prio>", "vlans": [{ "vlan_id": "<vlan_id>" }]]]
-------------------------	---

where:

Element	Description
<i>instance_id</i>	MST instance ID; an integer from 0-64. Instance 0 refers to the CIST.
<i>instance_prio</i>	Sets the instance bridge priority; an integer from 0-61440. Default value: 32768.
<i>vlans</i>	Maps a range of VLANs to a multiple spanning tree instance (MSTI); an integer from 1-4094.

Create MSTP Instance

Create an MSTP instance.

Request

Method Type	POST
Request URI	/nos/api/cfg/mstp_instance
Request Body (JSON)	{ "instance_id": "<instance_id>", "instance_prio": "<instance_prio>", "vlans": [{ "vlan_id": "<vlan_id>" }] }

where:

Element	Description
<i>instance_id</i>	MST instance ID; an integer from 0-64. Instance 0 refers to the CIST.
<i>instance_prio</i>	Sets the instance bridge priority; an integer from 0-61440. Default value: 32768.
<i>vlans</i>	Maps a range of VLANs to a multiple spanning tree instance (MSTI); an integer from 1-4094.

Response

Response Body (JSON)	{ "instance_id": "<instance_id>", "instance_prio": "<instance_prio>", "vlans": [{ "vlan_id": "<vlan_id>" }] }
-------------------------	---

Get MSTP Instance

Get properties of an MSTP instance.

Request

Method Type	GET
Request URI	/nos/api/cfg/mstp_instance/<instance_id>
Request Body (JSON)	

Response

Response Body (JSON)	{ "instance_id": "<instance_id>", "instance_prio": "<instance_prio>", "vlans": [{ "vlan_id": "<vlan_id>" }] }
-------------------------	---

Update MSTP Instance

Update the properties of an MSTP instance.

Note: If an element is not specified in a PUT request, no update for that element will be performed.

Request

Method Type	PUT
Request URI	/nos/api/cfg/mstp_instance/<instance_id>
Request Body (JSON)	{ "instance_id": "<instance_id>", "instance_prio": "<instance_prio>", "vlans": [{ "vlan_id": "<vlan_id>" }] }

where:

Element	Description
<i>instance_id</i>	MST instance ID; an integer from 0-64. Instance 0 refers to the CIST.
<i>instance_prio</i>	Sets the instance bridge priority; an integer from 0-61440. Default value: 32768.
<i>vlans</i>	Maps a range of VLANs to a multiple spanning tree instance (MSTI); an integer from 1-4094.

Response

Response Body (JSON)	{ "instance_id": "<instance_id>", "instance_prio": "<instance_prio>", "vlans": [{ "vlan_id": "<vlan_id>" }] }
-------------------------	---

Delete MSTP Instance

Delete an MSTP instance.

Request

Method Type	DELETE
Request URI	/nos/api/cfg/mstp_instance/<instance_id>
Request Body (JSON)	

where:

Element	Description
<i>instance_id</i>	MST instance ID; an integer from 0-64. Instance 0 refers to the CIST.

Get Interface Properties of an MSTP Instance

Get properties of one interface in an MSTP instance.

Request

Method Type	GET
Request URI	/nos/api/cfg/mstp_interface/<instance_id>/<if_name>
Request Body (JSON)	

Response

Response Body (JSON)	{ "if_name": "<if_name>", "path_cost": "<path_cost>", "port_prio": "<port_prio>" }
-------------------------	--

where:

Element	Description
<i>if_name</i>	Interface name. Note: The interface must exist.
<i>path_cost</i>	The port path-cost value on the specified MST instance; either an integer from 1-200000000 or auto (default) to base the path-cost on port speed.
<i>port_prio</i>	The port priority, in increments of 32, on the specified MST instance; a multiple of 32 from 0-224. Default value: 128.

Update Interface Properties of an MSTP Instance

Update the properties of one interface in an MSTP instance.

Request

Method Type	PUT
Request URI	/nos/api/cfg/mstp_interface/{instance_id}/<if_name>
Request Body (JSON)	{ "if_name": "<if_name>", "path_cost": "<path_cost>", "port_prio": "<port_prio>" }

where:

Element	Description
<i>if_name</i>	Interface name. Note: The interface must exist.
<i>path_cost</i>	The port path-cost value on the specified MST instance; either an integer from 1-200000000 or auto (default) to base the path-cost on port speed.
<i>port_prio</i>	The port priority, in increments of 32, on the specified MST instance; a multiple of 32 from 0-224. Default value: 128.

Response

Response Body (JSON)	{ "if_name": "<if_name>", "path_cost": "<path_cost>", "port_prio": "<port_prio>" }
-------------------------	--

NOS Copy

The following NOS copy URIs are available:

- /nos/api/saveneeded GET
- /nos/api/save/config GET
- /nos/api/reset GET
- /nos/api/download/image POST
- /nos/api/download/config POST
- /nos/api/upload/config POST
- /nos/api/upload/tech_support POST
- /nos/api/download/status/<content> GET
- /nos/api/upload/status/<content> GET

The following NOS Copy commands are available:

- [Determine Whether the Running Configuration Needs to be Saved](#)
- [Reset Switch](#)
- [Save Configuration](#)
- [Download Image to Switch](#)
- [Download Configuration to Switch](#)
- [Upload Configuration to Server](#)
- [Upload Tech Support to Server](#)
- [Get Download Transfer Status](#)
- [Get Upload Transfer Status](#)

Note: The requests in this section are required for XClarity support.

Determine Whether the Running Configuration Needs to be Saved

Get whether the running configuration needs to be saved by checking if there is a difference between the configuration that is running versus what is in flash.

Request

Method Type	GET
Request URI	/nos/api/saveneeded
Request Body (JSON)	

Response

Response Body (JSON)	{ "saveneeded" : "<flag>" }
-------------------------	-----------------------------------

where:

Element	Description
<i>flag</i>	Whether the running configuration matches what is in flash memory; one of "yes", "no".

Reset Switch

Resets the switch.

Request

Method Type	GET
Request URI	/nos/api/reset
Request Body (JSON)	

Response

True if the operation succeeded; otherwise False.

Save Configuration

Saves the running configuration to flash memory.

Request

Method Type	GET
Request URI	/nos/api/save/config
Request Body (JSON)	

Response

True if the operation succeeded; otherwise False.

Download Image to Switch

Downloads a boot image to the switch.

Request

Method Type	POST
Request URI	/nos/api/download/image
Request Body (JSON)	{ "protocol": "<protocol>", "serverip": "<serverip>", "srcfile": "<srcfile>", "imgtype": "<imgtype>", "username": "<username>", "passwd": "<passwd>", "vrf_name": "<vrf_name>" }

where:

Element	Description
<i>protocol</i>	Protocol name; one of "tftp", "sftp".
<i>serverip</i>	Server IP address.
<i>srcfile</i>	Source file; up to 256 characters long.
<i>imgtype</i>	System image type; one of "all", "boot", "onie", "os".
<i>username</i>	Username for the server. Not required for TFTP.
<i>passwd</i>	Password for the server username. Not required for TFTP.
<i>vrf_name</i>	(Optional) VRF name; an alphabetic string up to 64 characters long.

Response

Response Body (JSON)	{ "status": "<status>", }
-------------------------	---------------------------------

where:

Element	Description
<i>status</i>	Transfer status; one of "transferring", "installing", "successful", "failed".

Download Configuration to Switch

Downloads a configuration to the switch.

Request

Method Type	POST
Request URI	/nos/api/download/config
Request Body (JSON)	{ "protocol": "<protocol>", "serverip": "<serverip>", "srcfile": "<srcfile>", "dstfile": "<dstfile>", "username": "<username>", "passwd": "<passwd>", "vrf_name": "<vrf_name>" }

where:

Element	Description
<i>protocol</i>	Protocol name; one of "tftp", "sftp".
<i>serverip</i>	Server IP address.
<i>srcfile</i>	Source file; up to 256 characters long.
<i>dstfile</i>	Destination file; one of "running_config", "startup_config".
<i>username</i>	(Optional) Username for the server.
<i>passwd</i>	(Optional) Password for the server username.
<i>vrf_name</i>	(Optional) VRF name; an alphabetic string up to 64 characters long.

Response

Response Body (JSON)	{ "status": "<status>", "details": "<details>", "filename": "<filename>" }
----------------------	--

where:

Element	Description
<i>status</i>	Transfer status; one of “transferring”, “installing”, “successful”, “failed”.
<i>details</i>	Detailed description of the status; one of: <ul style="list-style-type: none">● Transferring running-config● Transferring startup-config● Installing image● <i>image</i> installation succeeded● Copy success● VRF <i>vrf_name</i> doesn't exist● Another image installation is in progress● Host <i>serverip</i> is unreachable● ONIE feature is not enabled on this switch● File not found● SFTP authentication failure● <i>image</i> installation failed● Copy failed
<i>filename</i>	Configuration filename.

Upload Configuration to Server

Uploads a configuration from the switch to a server.

Request

Method Type	POST
Request URI	/nos/api/upload/config
Request Body (JSON)	{ "protocol": "<protocol>", "serverip": "<serverip>", "srcfile": "<srcfile>", "dstfile": "<dstfile>", "username": "<username>", "passwd": "<passwd>", "vrf_name": "<vrf_name>" }

where:

Element	Description
<i>protocol</i>	Protocol name; one of "tftp", "sftp".
<i>serverip</i>	Server IP address.
<i>srcfile</i>	Source file; up to 256 characters long.
<i>dstfile</i>	Destination file; one of "running_config", "startup_config".
<i>username</i>	(Optional) Username for the server.
<i>passwd</i>	(Optional) Password for the server username.
<i>vrf_name</i>	(Optional) VRF name; an alphabetic string up to 64 characters long.

Response

Response Body (JSON)	{ "status": "<status>", "details": "<details>", "filename": "<filename>" }
----------------------	--

where:

Element	Description
<i>status</i>	Transfer status; one of “transferring”, “installing”, “successful”, “failed”.
<i>details</i>	Detailed description of the status; one of: <ul style="list-style-type: none">● Transferring running-config● Transferring startup-config● Installing image● <i>image</i> installation succeeded● Copy success● VRF <i>vrf_name</i> doesn't exist● Another image installation is in progress● Host <i>serverip</i> is unreachable● ONIE feature is not enabled on this switch● File not found● SFTP authentication failure● <i>image</i> installation failed● Copy failed
<i>filename</i>	Configuration filename.

Upload Tech Support to Server

Uploads technical support information from the switch to the server.

Request

Method Type	POST
Request URI	/nos/api/upload/tech_support
Request Body (JSON)	{ "protocol": "<protocol>", "serverip": "<serverip>", "dstfile": "<dstfile>", "username": "<username>", "passwd": "<passwd>", "vrf_name": "<vrf_name>" }

where:

Element	Description
<i>protocol</i>	Protocol name; one of "tftp", "sftp".
<i>serverip</i>	Server IP address.
<i>dstfile</i>	Destination file; one of "running_config", "startup_config".
<i>username</i>	(Optional) Username for the server.
<i>passwd</i>	(Optional) Password for the server username.
<i>vrf_name</i>	(Optional) VRF name; an alphabetic string up to 64 characters long.

Response

Response Body (JSON)	{ "status": "<status>", }
-------------------------	---------------------------------

where:

Element	Description
<i>status</i>	Transfer status; one of "transferring", "installing", "successful", "failed".

Get Download Transfer Status

Get the status of a downloading transfer.

Request

Method Type	GET
Request URI	/nos/api/download/status/<content>
Request Body (JSON)	

where:

Element	Description
<i>content</i>	One of "image", "running_config", "startup_config".

Response

Response Body (JSON)	{ "status": "<status>", "details": "<details>", "filename": "<filename>" }
-------------------------	--

where:

Element	Description
<i>status</i>	Transfer status; one of "transferring", "installing", "successful", "failed".
<i>details</i>	Detailed description of the status; one of: <ul style="list-style-type: none">● Transferring running-config● Transferring startup-config● Installing image● <i>image</i> installation succeeded● Copy success● VRF <i>vrf_name</i> doesn't exist● Another <i>image</i> installation is in progress● Host <i>serverip</i> is unreachable● ONIE feature is not enabled on this switch● File not found● SFTP authentication failure● <i>image</i> installation failed● Copy failed
<i>filename</i>	Name of file being downloaded; up to 256 characters long.

Get Upload Transfer Status

Get the status of an uploading transfer.

Request

Method Type	GET
Request URI	/nos/api/upload/status/<content>
Request Body (JSON)	

where:

Element	Description
<i>content</i>	One of "image", "running_config", "startup_config".

Response

Response Body (JSON)	{ "status": "<status>", "details": "<details>", "filename": "<filename>" }
----------------------	--

where:

Element	Description
status	Transfer status; one of “transferring”, “installing”, “successful”, “failed”.
details	Detailed description of the status; one of: <ul style="list-style-type: none">● Transferring running-config● Transferring startup-config● Transferring tech-support● Copy success● VRF <i>vrf_name</i> doesn't exist● Another image installation is in progress● Host <i>serverip</i> is unreachable● ONIE feature is not enabled on this switch● File not found● SFTP authentication failure● Copy failed
filename	Name of file being saved on the server; up to 256 characters long.

NPA

- The following Network Policy Agent (NPA) URIs are available:
 - /nos/api/info/npa/vm/nutanix GET
 - /nos/api/info/npa/vm/nutanix?uuid="*<uuid>*" GET
 - /nos/api/info/npa/vm/nutanix?name="*<name>*" GET
 - /nos/api/info/npa/vm/nutanix?if_name="*<if_name>*" GET
 - /nos/api/info/npa/vnetwork/nutanix GET
 - /nos/api/info/npa/vnetwork/nutanix?uuid="*<uuid>*" GET
 - /nos/api/info/npa/stats/vnic/nutanix GET
 - /nos/api/info/npa/stats/vnic/nutanix?uuid="*<vm_uuid>*" GET
 - /nos/api/info/npa/stats/vnic/nutanix?name="*<vm_name>*" GET
 - /nos/api/info/npa/stats/vnic/nutanix?if_name="*<if_name>*" GET

The following NPA commands are available:

- [Get VM Information](#)
- [Get VM Information by VM UUID](#)
- [Get VM Information by VM Name](#)
- [Get VM Interface Information](#)
- [Get VM Information for Specific Interface](#)
- [Get Virtual Network Information](#)
- [Get Virtual Network Information by UUID](#)
- [Get VNIC Statistics](#)
- [Get VNIC Statistics for Specific VM by VM UUID](#)
- [Get VNIC Statistics for Specific VM by VM Name](#)
- [Get VNIC Interface Statistics](#)
- [Get VNIC Statistics for Specific Interface](#)

Get VM Information

This command returns information about configured virtual machines (VMs).

Request

Method Type	GET
Request URI	/nos/api/info/npa/vm/nutanix
Request Body (JSON)	

Response

Response Body (JSON)	[{ nic_list: [{ mac: <value>, uuid: <value> }] uuid: <value>, num_cores_per_vcpu: <value>, hypervisor_type: <value>, memory_size_mib: <value>, num_vcups: <value>, power_state: {on off}, host_uuid: <value>, name: <value> }]
----------------------	--

where:

Element	Description
nic_list	List of dictionary containing VNIC information.
mac	The MAC address of the VM. Valid value: <ul style="list-style-type: none">• <i>MAC address</i> (format XX:XX:XX:XX:XX:XX)
uuid	The Universal Unique Identifier (UUID) of the VM. Valid value: <ul style="list-style-type: none">• <i>UUID</i> (string up to 36 characters)
num_cores_per_vcpu	The number of cores for each virtual CPU. Valid value: <ul style="list-style-type: none">• <i>integer</i>
hypervisor_type	The type of hypervisor. Valid value: <ul style="list-style-type: none">• <i>string</i>

Element	Description
memory_size_mib	The size of the allocated memory in MiBs. Valid value: <ul style="list-style-type: none">● <i>integer</i>
num_vcpus	The number of virtual CPUs. Valid value: <ul style="list-style-type: none">● <i>integer</i>
power_state	The power state of the VM. Valid value: <ul style="list-style-type: none">● <i>on</i>● <i>off</i>
host_uuid	The Universal Unique Identifier (UUID) of the host. Valid value: <ul style="list-style-type: none">● <i>UUID</i> (string up to 36 characters)
name	The name of the VM. Valid value: <ul style="list-style-type: none">● <i>string</i>

Get VM Information by VM UUID

This command returns information about a specific virtual machine (VM) by its Universal Unique Identifier (UUID).

Request

Method Type	GET
Request URI	/nos/api/info/npa/vm/nutanix?uuid=" <i><uuid></i> "
Request Body (JSON)	

where:

Element	Description
<i>uuid</i>	The Universal Unique Identifier (UUID) of the VM. Valid value: <ul style="list-style-type: none">• <i>network UUID</i> (string up to 36 characters)

Response

Response Body (JSON)	[{ nic_list: [{ mac: <value>, uuid: <value> }] uuid: <value>, num_cores_per_vcpu: <value>, hypervisor_type: <value>, memory_size_mib: <value>, num_vcpus: <value>, power_state: {on off}, host_uuid: <value>, name: <value> }]
----------------------	--

where:

Element	Description
<i>nic_list</i>	List of dictionary containing VNIC information.
<i>mac</i>	The MAC address of the VM. Valid value: <ul style="list-style-type: none">• <i>MAC address</i> (format XX:XX:XX:XX:XX:XX)

Element	Description
uuid	The Universal Unique Identifier (UUID) of the VM. Valid value: <ul style="list-style-type: none">● <i>UUID</i> (string up to 36 characters)
num_cores_per_vcpu	The number of cores for each virtual CPU. Valid value: <ul style="list-style-type: none">● <i>integer</i>
hypervisor_type	The type of hypervisor. Valid value: <ul style="list-style-type: none">● <i>string</i>
memory_size_mib	The size of the allocated memory in MiBs. Valid value: <ul style="list-style-type: none">● <i>integer</i>
num_vcpus	The number of virtual CPUs. Valid value: <ul style="list-style-type: none">● <i>integer</i>
power_state	The power state of the VM. Valid value: <ul style="list-style-type: none">● <i>on</i>● <i>off</i>
host_uuid	The Universal Unique Identifier (UUID) of the host. Valid value: <ul style="list-style-type: none">● <i>UUID</i> (string up to 36 characters)
name	The name of the VM. Valid value: <ul style="list-style-type: none">● <i>string</i>

Get VM Information by VM Name

This command returns information about a specific virtual machine (VM) by its name.

Request

Method Type	GET
Request URI	/nos/api/info/npa/vm/nutanix?name=" <i><name></i> "
Request Body (JSON)	

where:

Element	Description
name	The name of the VM. Valid value: <ul style="list-style-type: none">• <i>string</i>

Response

Response Body (JSON)	[{ nic_list: [{ mac: <value>, uuid: <value> }] uuid: <value>, num_cores_per_vcpu: <value>, hypervisor_type: <value>, memory_size_mib: <value>, num_vcpus: <value>, power_state: {on off}, host_uuid: <value>, name: <value> }]
----------------------	--

where:

Element	Description
nic_list	List of dictionary containing VNIC information.
mac	The MAC address of the VM. Valid value: <ul style="list-style-type: none">• <i>MAC address</i> (format XX:XX:XX:XX:XX:XX)

Element	Description
uuid	The Universal Unique Identifier (UUID) of the VM. Valid value: <ul style="list-style-type: none">● <i>UUID</i> (string up to 36 characters)
num_cores_per_vcpu	The number of cores for each virtual CPU. Valid value: <ul style="list-style-type: none">● <i>integer</i>
hypervisor_type	The type of hypervisor. Valid value: <ul style="list-style-type: none">● <i>string</i>
memory_size_mib	The size of the allocated memory in MiBs. Valid value: <ul style="list-style-type: none">● <i>integer</i>
num_vcpus	The number of virtual CPUs. Valid value: <ul style="list-style-type: none">● <i>integer</i>
power_state	The power state of the VM. Valid value: <ul style="list-style-type: none">● <i>on</i>● <i>off</i>
host_uuid	The Universal Unique Identifier (UUID) of the host. Valid value: <ul style="list-style-type: none">● <i>UUID</i> (string up to 36 characters)
name	The name of the VM. Valid value: <ul style="list-style-type: none">● <i>string</i>

Get VM Interface Information

This command returns information about virtual machines (VMs) for all switch interfaces.

Request

Method Type	GET
Request URI	/nos/api/info/npa/vm/nutanix?if_name= or /nos/api/info/npa/vm/nutanix?if_name=all
Request Body (JSON)	

Response

Response Body (JSON)	{ if_name: <value> [{ nic_list: [{ mac: <value>, uuid: <value> }] uuid: <value>, num_cores_per_vcpu: <value>, hypervisor_type: <value>, memory_size_mib: <value>, num_vcups: <value>, power_state: {on off}, host_uuid: <value>, name: <value> }] }
----------------------	--

where:

Element	Description
if_name	The name of the switch interface. Valid value: <ul style="list-style-type: none">• <i>interface name</i> (for example, <i>Ethernet1/12</i>)
nic_list	List of dictionary containing VNIC information.
mac	The MAC address of the VM. Valid value: <ul style="list-style-type: none">• <i>MAC address</i> (format XX:XX:XX:XX:XX:XX)

Element	Description
uuid	The Universal Unique Identifier (UUID) of the VM. Valid value: <ul style="list-style-type: none">● <i>UUID</i> (string up to 36 characters)
num_cores_per_vcpu	The number of cores for each virtual CPU. Valid value: <ul style="list-style-type: none">● <i>integer</i>
hypervisor_type	The type of hypervisor. Valid value: <ul style="list-style-type: none">● <i>string</i>
memory_size_mib	The size of the allocated memory in MiBs. Valid value: <ul style="list-style-type: none">● <i>integer</i>
num_vcpus	The number of virtual CPUs. Valid value: <ul style="list-style-type: none">● <i>integer</i>
power_state	The power state of the VM. Valid value: <ul style="list-style-type: none">● <i>on</i>● <i>off</i>
host_uuid	The Universal Unique Identifier (UUID) of the host. Valid value: <ul style="list-style-type: none">● <i>UUID</i> (string up to 36 characters)
name	The name of the VM. Valid value: <ul style="list-style-type: none">● <i>string</i>

Get VM Information for Specific Interface

This command returns information about virtual machines (VMs) for a specific switch interface.

Request

Method Type	GET
Request URI	/nos/api/info/npa/vm/nutanix?if_name=<if_name>
Request Body (JSON)	

where:

Element	Description
if_name	The name of the switch interface. Valid value: <ul style="list-style-type: none">• <i>interface name</i> (for example, <i>Ethernet1/12</i>)

Response

Response Body (JSON)	{ if_name: <value> [{ nic_list: [{ mac: <value>, uuid: <value> }] uuid: <value>, num_cores_per_vcpu: <value>, hypervisor_type: <value>, memory_size_mib: <value>, num_vcpus: <value>, power_state: {on off}, host_uuid: <value>, name: <value> }] } }
----------------------	---

where:

Element	Description
if_name	The name of the switch interface. Valid value: <ul style="list-style-type: none">• <i>interface name</i> (for example, <i>Ethernet1/12</i>)
nic_list	List of dictionary containing VNIC information.

Element	Description
<code>mac</code>	The MAC address of the VM. Valid value: <ul style="list-style-type: none">● <i>MAC address</i> (format XX:XX:XX:XX:XX:XX)
<code>uuid</code>	The Universal Unique Identifier (UUID) of the VM. Valid value: <ul style="list-style-type: none">● <i>UUID</i> (string up to 36 characters)
<code>num_cores_per_vcpu</code>	The number of cores for each virtual CPU. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>hypervisor_type</code>	The type of hypervisor. Valid value: <ul style="list-style-type: none">● <i>string</i>
<code>memory_size_mib</code>	The size of the allocated memory in MiBs. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>num_vcpus</code>	The number of virtual CPUs. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>power_state</code>	The power state of the VM. Valid value: <ul style="list-style-type: none">● <i>on</i>● <i>off</i>
<code>host_uuid</code>	The Universal Unique Identifier (UUID) of the host. Valid value: <ul style="list-style-type: none">● <i>UUID</i> (string up to 36 characters)
<code>name</code>	The name of the VM. Valid value: <ul style="list-style-type: none">● <i>string</i>

Get Virtual Network Information

This command returns information about all virtual networks.

Request

Method Type	GET
Request URI	/nos/api/info/npa/vnetwork/nutanix
Request Body (JSON)	

Response

Response Body (JSON)	[{ uuid: <value>, default_gateway: <value>, network_address: <value>, prefix_length: <value>, vlan_id: <value> }]
----------------------	---

where:

Element	Description
uuid	The Universal Unique Identifier (UUID) of the virtual network. Valid value: <ul style="list-style-type: none">● <i>network UUID</i> (string up to 36 characters)
default_gateway	The virtual network default gateway. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
network_address	The virtual network IP address. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
prefix_length	The virtual network prefix length Valid value: <ul style="list-style-type: none">● 0-32
vlan_id	The VLAN ID for the virtual network. Valid value: <ul style="list-style-type: none">● 0-3999
name	The name of the virtual network. Valid value: <ul style="list-style-type: none">● <i>string</i>

Get Virtual Network Information by UUID

This command returns information about a specific virtual networks by its network Universal Unique Identifier (UUID).

Request

Method Type	GET
Request URI	/nos/api/info/npa/vnetwork/nutanix?uuid=<uuid>
Request Body (JSON)	

where:

Element	Description
uuid	The Universal Unique Identifier (UUID) of the virtual network. Valid value: <ul style="list-style-type: none">● <i>network UUID</i> (string up to 36 characters)

Response

Response Body (JSON)	[{ uuid: <value>, default_gateway: <value>, network_address: <value>, prefix_length: <value>, vlan_id: <value>, name: <value> }]
----------------------	---

where:

Element	Description
uuid	The Universal Unique Identifier (UUID) of the virtual network. Valid value: <ul style="list-style-type: none">● <i>network UUID</i> (string up to 36 characters)
default_gateway	The virtual network default gateway. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
network_address	The virtual network IP address. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
prefix_length	The virtual network prefix length Valid value: <ul style="list-style-type: none">● 0-32

Element	Description
vlan_id	The VLAN ID for the virtual network. Valid value: <ul style="list-style-type: none">• 0-3999
name	The name of the virtual network. Valid value: <ul style="list-style-type: none">• <i>string</i>

Get vNIC Statistics

This command returns all virtualized Network Interface Card (vNIC) statistics.

Request

Method Type	GET
Request URI	/nos/api/info/npa/stats/vnic/nutanix
Request Body (JSON)	

Response

Response Body (JSON)	[{ vm_uuid: <value>, vnic_uuid: <value>, time_stamp: <value>, bytes_rx: <value>, bytes_tx: <value>, pkts_rx: <value>, pkts_tx: <value>, mcast_pkts_rx: <value>, mcast_pkts_tx: <value>, bcast_pkts_rx: <value>, bcast_pkts_tx: <value>, dropped_pkts_rx: <value>, dropped_pkts_tx: <value>, error_pkts_rx: <value>, error_pkts_tx: <value>, rate_kbps_rx: <value>, rate_kbps_tx: <value>, unsupported_prot_pkts_rx: <value>, rate_usage_kbps: <value> }]
----------------------	--

where:

Element	Description
vm_uuid	The Universal Unique Identifier (UUID) of the virtual machine (VM). Valid value: <ul style="list-style-type: none">● <i>UUID</i> (string up to 36 characters)
vnic_uuid	The UUID of the vNIC. Valid value: <ul style="list-style-type: none">● <i>vNIC UUID</i> (string up to 36 characters)
time_stamp	The time when the vNIC statistics were collected. Valid value: <ul style="list-style-type: none">● <i>timestamp</i> (format YYYY/MM/DD HH:MM:SS)

Element	Description
bytes_rx	The number of received bytes. Valid value: <ul style="list-style-type: none">● <i>integer</i>
bytes_tx	The number of transmitted bytes. Valid value: <ul style="list-style-type: none">● <i>integer</i>
pkts_rx	The number of received packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
pkts_tx	The number of transmitted packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
mcast_pkts_rx	The number of received multicast packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
mcast_pkts_tx	The number of transmitted multicast packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
bcast_pkts_rx	The number of received broadcast packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
bcast_pkts_tx	The number of transmitted broadcast packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
dropped_pkts_rx	The number of received dropped packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
dropped_pkts_tx	The number of transmitted dropped packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
error_pkts_rx	The number of received error packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
error_pkts_tx	The number of transmitted error packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
rate_kbps_rx	The rate of received data, in kbps. Valid value: <ul style="list-style-type: none">● <i>integer</i>

Element	Description
rate_kbps_rx	The rate of transmitted data, in kbps. Valid value: <ul style="list-style-type: none">• <i>integer</i>
unsupported_prot_pkts_rx	The number of received unsupported protocol packets. Valid value: <ul style="list-style-type: none">• <i>integer</i>
rate_usage_kbps	The usage rate, in kbps. Valid value: <ul style="list-style-type: none">• <i>integer</i>

Get VNIC Statistics for Specific VM by VM UUID

This command returns virtualized Network Interface Card (vNIC) statistics for a specific virtual machine (VM) by its Universal Unique Identifier (UUID).

Request

Method Type	GET
Request URI	/nos/api/info/npa/stats/vnic/nutanix?uuid=<vm_uuid>
Request Body (JSON)	

where:

Element	Description
vm_uuid	The Universal Unique Identifier (UUID) of the virtual machine (VM). Valid value: <ul style="list-style-type: none">• <i>UUID</i> (string up to 36 characters)

Response

Response Body (JSON)	[{ vm_uuid: <value>, vnic_uuid: <value>, time_stamp: <value>, bytes_rx: <value>, bytes_tx: <value>, pkts_rx: <value>, pkts_tx: <value>, mcast_pkts_rx: <value>, mcast_pkts_tx: <value>, bcast_pkts_rx: <value>, bcast_pkts_tx: <value>, dropped_pkts_rx: <value>, dropped_pkts_tx: <value>, error_pkts_rx: <value>, error_pkts_tx: <value>, rate_kbps_rx: <value>, rate_kbps_tx: <value>, unsupported_prot_pkts_rx: <value>, rate_usage_kbps: <value> }]
----------------------	--

where:

Element	Description
<code>vm_uuid</code>	The Universal Unique Identifier (UUID) of the virtual machine (VM). Valid value: <ul style="list-style-type: none">● <i>UUID</i> (string up to 36 characters)
<code>vnic_uuid</code>	The UUID of the vNIC. Valid value: <ul style="list-style-type: none">● <i>vNIC UUID</i> (string up to 36 characters)
<code>time_stamp</code>	The time when the vNIC statistics were collected. Valid value: <ul style="list-style-type: none">● <i>timestamp</i> (format YYYY/MM/DD HH:MM:SS)
<code>bytes_rx</code>	The number of received bytes. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>bytes_tx</code>	The number of transmitted bytes. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>pkts_rx</code>	The number of received packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>pkts_tx</code>	The number of transmitted packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>mcast_pkts_rx</code>	The number of received multicast packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>mcast_pkts_tx</code>	The number of transmitted multicast packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>bcast_pkts_rx</code>	The number of received broadcast packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>bcast_pkts_tx</code>	The number of transmitted broadcast packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>dropped_pkts_rx</code>	The number of received dropped packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>

Element	Description
<code>dropped_pkts_tx</code>	The number of transmitted dropped packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>error_pkts_rx</code>	The number of received error packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>error_pkts_tx</code>	The number of transmitted error packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>rate_kbps_rx</code>	The rate of received data, in kbps. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>rate_kbps_tx</code>	The rate of transmitted data, in kbps. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>unsupported_prot_pkts_rx</code>	The number of received unsupported protocol packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>rate_usage_kbps</code>	The usage rate, in kbps. Valid value: <ul style="list-style-type: none">● <i>integer</i>

Get VNIC Statistics for Specific VM by VM Name

This command returns virtualized Network Interface Card (vNIC) statistics for a specific virtual machine (VM) by its name.

Request

Method Type	GET
Request URI	/nos/api/info/npa/stats/vnic/nutanix?name=" <i><vm_name></i> "
Request Body (JSON)	

where:

Element	Description
name	The name of the VM. Valid value: <ul style="list-style-type: none">● <i>string</i>

Response

Response Body (JSON)	<pre>[{ vm_uuid: <value>, vnic_uuid: <value>, time_stamp: <value>, bytes_rx: <value>, bytes_tx: <value>, pkts_rx: <value>, pkts_tx: <value>, mcast_pkts_rx: <value>, mcast_pkts_tx: <value>, bcast_pkts_rx: <value>, bcast_pkts_tx: <value>, dropped_pkts_rx: <value>, dropped_pkts_tx: <value>, error_pkts_rx: <value>, error_pkts_tx: <value>, rate_kbps_rx: <value>, rate_kbps_tx: <value>, unsupported_prot_pkts_rx: <value>, rate_usage_kbps: <value> }]]</pre>
----------------------	--

where:

Element	Description
vm_uuid	The Universal Unique Identifier (UUID) of the virtual machine (VM). Valid value: <ul style="list-style-type: none">● <i>UUID</i> (string up to 36 characters)
vnic_uuid	The UUID of the vNIC. Valid value: <ul style="list-style-type: none">● <i>vNIC UUID</i> (string up to 36 characters)
time_stamp	The time when the vNIC statistics were collected. Valid value: <ul style="list-style-type: none">● <i>timestamp</i> (format YYYY/MM/DD HH:MM:SS)
bytes_rx	The number of received bytes. Valid value: <ul style="list-style-type: none">● <i>integer</i>
bytes_tx	The number of transmitted bytes. Valid value: <ul style="list-style-type: none">● <i>integer</i>
pkts_rx	The number of received packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
pkts_tx	The number of transmitted packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
mcast_pkts_rx	The number of received multicast packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
mcast_pkts_tx	The number of transmitted multicast packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
bcast_pkts_rx	The number of received broadcast packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
bcast_pkts_tx	The number of transmitted broadcast packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
dropped_pkts_rx	The number of received dropped packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>

Element	Description
<code>dropped_pkts_tx</code>	The number of transmitted dropped packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>error_pkts_rx</code>	The number of received error packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>error_pkts_tx</code>	The number of transmitted error packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>rate_kbps_rx</code>	The rate of received data, in kbps. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>rate_kbps_tx</code>	The rate of transmitted data, in kbps. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>unsupported_prot_pkts_rx</code>	The number of received unsupported protocol packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>rate_usage_kbps</code>	The usage rate, in kbps. Valid value: <ul style="list-style-type: none">● <i>integer</i>

Get vNIC Interface Statistics

This command returns virtualized Network Interface Card (vNIC) statistics for all switch interfaces.

Request

Method Type	GET
Request URI	/nos/api/info/npa/stats/vnic/nutanix?if_name= or /nos/api/info/npa/stats/vnic/nutanix?if_name=all
Request Body (JSON)	

Response

Response Body (JSON)	{ if_name: <value>, [{ vm_uuid: <value>, vnic_uuid: <value>, time_stamp: <value>, bytes_rx: <value>, bytes_tx: <value>, pkts_rx: <value>, pkts_tx: <value>, mcast_pkts_rx: <value>, mcast_pkts_tx: <value>, bcast_pkts_rx: <value>, bcast_pkts_tx: <value>, dropped_pkts_rx: <value>, dropped_pkts_tx: <value>, error_pkts_rx: <value>, error_pkts_tx: <value>, rate_kbps_rx: <value>, rate_kbps_tx: <value>, unsupported_prot_pkts_rx: <value>, rate_usage_kbps: <value> }] }
----------------------	---

where:

Element	Description
if_name	The name of the switch interface. Valid value: <ul style="list-style-type: none">● <i>interface name</i> (for example, <i>Ethernet1/12</i>)
vm_uuid	The Universal Unique Identifier (UUID) of the virtual machine (VM). Valid value: <ul style="list-style-type: none">● <i>UUID</i> (string up to 36 characters)
vnic_uuid	The UUID of the vNIC. Valid value: <ul style="list-style-type: none">● <i>vNIC UUID</i> (string up to 36 characters)
time_stamp	The time when the vNIC statistics were collected. Valid value: <ul style="list-style-type: none">● <i>timestamp</i> (format YYYY/MM/DD HH:MM:SS)
bytes_rx	The number of received bytes. Valid value: <ul style="list-style-type: none">● <i>integer</i>
bytes_tx	The number of transmitted bytes. Valid value: <ul style="list-style-type: none">● <i>integer</i>
pkts_rx	The number of received packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
pkts_tx	The number of transmitted packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
mcast_pkts_rx	The number of received multicast packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
mcast_pkts_tx	The number of transmitted multicast packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
bcast_pkts_rx	The number of received broadcast packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
bcast_pkts_tx	The number of transmitted broadcast packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>

Element	Description
<code>dropped_pkts_rx</code>	The number of received dropped packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>dropped_pkts_tx</code>	The number of transmitted dropped packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>error_pkts_rx</code>	The number of received error packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>error_pkts_tx</code>	The number of transmitted error packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>rate_kbps_rx</code>	The rate of received data, in kbps. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>rate_kbps_tx</code>	The rate of transmitted data, in kbps. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>unsupported_prot_pkts_rx</code>	The number of received unsupported protocol packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>rate_usage_kbps</code>	The usage rate, in kbps. Valid value: <ul style="list-style-type: none">● <i>integer</i>

Get VNIC Statistics for Specific Interface

This command returns virtualized Network Interface Card (vNIC) statistics for a specific switch interfaces.

Request

Method Type	GET
Request URI	/nos/api/info/npa/stats/vnic/nutanix?if_name=<if_name>"
Request Body (JSON)	

where:

Element	Description
if_name	The name of the switch interface. Valid value: <ul style="list-style-type: none">• <i>interface name</i> (for example, <i>Ethernet1/12</i>)

Response

Response Body (JSON)	{ if_name: <value>, [{ vm_uuid: <value>, vnic_uuid: <value>, time_stamp: <value>, bytes_rx: <value>, bytes_tx: <value>, pkts_rx: <value>, pkts_tx: <value>, mcast_pkts_rx: <value>, mcast_pkts_tx: <value>, bcast_pkts_rx: <value>, bcast_pkts_tx: <value>, dropped_pkts_rx: <value>, dropped_pkts_tx: <value>, error_pkts_rx: <value>, error_pkts_tx: <value>, rate_kbps_rx: <value>, rate_kbps_tx: <value>, unsupported_prot_pkts_rx: <value>, rate_usage_kbps: <value> <br }<br] }</br }<br]
----------------------	---

where:

Element	Description
<code>if_name</code>	The name of the switch interface. Valid value: <ul style="list-style-type: none">● <i>interface name</i> (for example, <i>Ethernet1/12</i>)
<code>vm_uuid</code>	The Universal Unique Identifier (UUID) of the virtual machine (VM). Valid value: <ul style="list-style-type: none">● <i>UUID</i> (string up to 36 characters)
<code>vnic_uuid</code>	The UUID of the vNIC. Valid value: <ul style="list-style-type: none">● <i>vNIC UUID</i> (string up to 36 characters)
<code>time_stamp</code>	The time when the vNIC statistics were collected. Valid value: <ul style="list-style-type: none">● <i>timestamp</i> (format YYYY/MM/DD HH:MM:SS)
<code>bytes_rx</code>	The number of received bytes. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>bytes_tx</code>	The number of transmitted bytes. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>pkts_rx</code>	The number of received packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>pkts_tx</code>	The number of transmitted packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>mcast_pkts_rx</code>	The number of received multicast packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>mcast_pkts_tx</code>	The number of transmitted multicast packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>bcast_pkts_rx</code>	The number of received broadcast packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>bcast_pkts_tx</code>	The number of transmitted broadcast packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>

Element	Description
<code>dropped_pkts_rx</code>	The number of received dropped packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>dropped_pkts_tx</code>	The number of transmitted dropped packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>error_pkts_rx</code>	The number of received error packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>error_pkts_tx</code>	The number of transmitted error packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>rate_kbps_rx</code>	The rate of received data, in kbps. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>rate_kbps_tx</code>	The rate of transmitted data, in kbps. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>unsupported_prot_pkts_rx</code>	The number of received unsupported protocol packets. Valid value: <ul style="list-style-type: none">● <i>integer</i>
<code>rate_usage_kbps</code>	The usage rate, in kbps. Valid value: <ul style="list-style-type: none">● <i>integer</i>

NTP

The following NTP URIs are available:

- /nos/api/cfg/ntp/peers GET, POST, DELETE

The following NTP commands are available:

- Get NTP Properties
 - Update NTP Servers and Peers
 - Delete NTP Servers and Peers

Get NTP Properties

Get the configured NTP servers and peers.

Note: This is required for XClarity support.

Request

Method Type	GET
Request URI	/nos/api/cfg/ntp/peers
Request Body (JSON)	

Response

Response Body (JSON)	[{ "type" : "<server/peer>", "name": "<ip_address>", "server_type": "<static/dynamic>", }]
-------------------------	--

where:

Element	Description
<i>type</i>	Configured server or peer.
<i>name</i>	IP address of peer/server.
<i>server_type</i>	Static or dynamic (server or peer).

Update NTP Servers and Peers

Update the configured NTP servers and peers.

Note: This is required for XClarity support.

Request

Method Type	POST
Request URI	/nos/api/cfg/ntp/peers
Request Body (JSON)	{"type" : "<server peer>", "name" : "<ip>", ["prefer" : "<yes/no>","minpoll" : "<value>", "maxpoll" : "<value>"] }

where:

Element	Description
<i>type</i>	Configured server or peer.
<i>name</i>	IP address of peer/server.
<i>prefer</i>	(Optional) One of: Yes, No.
<i>minpoll</i>	(Optional) Minimum poll value.
<i>maxpoll</i>	(Optional) Maximum poll value.

Response

Response Body (JSON)	[{ "type" : "<server/peer>", "name": "<ip_address>", "prefer" : "<yes/no>," "minpoll" : "<value>," "maxpoll" : "<value>"] }]
-------------------------	---

where:

Element	Description
<i>type</i>	Configured server or peer.
<i>name</i>	IP address of peer/server.
<i>prefer</i>	(Optional) One of: Yes, No.
<i>minpoll</i>	(Optional) Minimum poll value.
<i>maxpoll</i>	(Optional) Maximum poll value.

Delete NTP Servers and Peers

Delete the configured NTP servers and peers.

Note: This is required for XClarity support.

Request

Method Type	DELETE
Request URI	/nos/api/cfg/ntp/peers/<ip>/<server or peer>
Request Body (JSON)	

where:

Element	Description
<ip>/<server or peer>	IP address of peer/server.

Response

Response Body (JSON)	
-------------------------	--

OSPF

The following OSPF URIs are available:

- /nos/api/info/ospf/stats GET
- /nos/api/info/ospf/traffic-stats GET
- /nos/api/info/ospf/neighbor GET
- /nos/api/info/ospf/route GET
- /nos/api/info/ospf/database GET

The following OSPF interface property commands are available:

- [Get OSPF Global Statistics](#)
- [Get OSPF Traffic Statistics](#)
- [Get OSPF Neighbors](#)
- [Get OSPF Routes](#)
- [Get OSPF Database](#)

Get OSPF Global Statistics

Get the global OSPF statistics.

Request

Method Type	GET
Request URI	/nos/api/info/ospf/stats/< <i>vrf_name</i> >
Request Body (JSON)	

where:

Element	Description
<i>vrf_name</i>	(Optional) Default VRF name. Default value: default.

Response

Response Body (JSON)	[{ "stats": { "ospf_id": "<ospf_id>" "clr_timer_str": "{ <clr_timer_str> }" "router_id_changes": "<router_id_changes>" "dr_election_counter": "<dr_election_counter>" "older_lsas_counter": "<older_lsas_counter>" "nbr_state_change_counter": "<nbr_state_change_counter>" "nbr_bad_lsreqs_counter": "<nbr_bad_lsreqs_counter>" "nbr_interval_expired_counter": "<nbr_interval_expired_counter>" "nbr_seq_number_mismatch": "<nbr_seq_number_mismatch>" "spf_full": "<spf_full>" "spf_summary": "<spf_summary>" "spf_external": "<spf_external>" "recv_buf": "<recv_buf>" "send_buf": "<send_buf>" "lsa_buf": "<lsa_buf>" "packet_unuse": "<packet_unuse>" "packet_max": "<packet_max>" "lsa_unuse": "<lsa_unuse>" "lsa_max": "<lsa_max>" "routerLsa_generated": "<routerLsa_generated>" "routerLsa_refreshed": "<routerLsa_refreshed>" "routerLsa_flushed": "<routerLsa_flushed>" "routerLsa_agedOut": "<routerLsa_agedOut>" "networkLsa_generated": "<networkLsa_generated>" "networkLsa_refreshed": "<networkLsa_refreshed>" "networkLsa_flushed": "<networkLsa_flushed>" "networkLsa_agedOut": "<networkLsa_agedOut>" "summaryLsa_generated": "<summaryLsa_generated>" "summaryLsa_refreshed": "<summaryLsa_refreshed>" "summaryLsa_flushed": "<summaryLsa_flushed>" "summaryLsa_agedOut": "<summaryLsa_agedOut>" "asbrSummaryLsa_generated": "<asbrSummaryLsa_generated>" "asbrSummaryLsa_refreshed": "<asbrSummaryLsa_refreshed>" "asbrSummaryLsa_flushed": "<asbrSummaryLsa_flushed>" "asbrSummaryLsa_agedOut": "<asbrSummaryLsa_agedOut>" "asExternalLsa_generated": "<asExternalLsa_generated>" } }]
----------------------	---

Response Body (JSON)	<pre> "asExternalLsa_refreshed": "<asExternalLsa_refreshed>", "asExternalLsa_flushed": "<asExternalLsa_flushed>", "asExternalLsa_agedOut": "<asExternalLsa_agedOut>", "asNssaLsa_generated": "<asNssaLsa_generated>", "asNssaLsa_refreshed": "<asNssaLsa_refreshed>", "asNssaLsa_flushed": "<asNssaLsa_flushed>", "asNssaLsa_agedOut": "<asNssaLsa_agedOut>", "type8Lsa_generated": "<type8Lsa_generated>", "type8Lsa_refreshed": "<type8Lsa_refreshed>", "type8Lsa_flushed": "<type8Lsa_flushed>", "type8Lsa_agedOut": "<type8Lsa_agedOut>", "linkOpaqueLsa_generated": "<linkOpaqueLsa_generated>", "linkOpaqueLsa_refreshed": "<linkOpaqueLsa_refreshed>", "linkOpaqueLsa_flushed": "<linkOpaqueLsa_flushed>", "linkOpaqueLsa_agedOut": "<linkOpaqueLsa_agedOut>", "areaOpaqueLsa_generated": "<areaOpaqueLsa_generated>", "areaOpaqueLsa_refreshed": "<areaOpaqueLsa_refreshed>", "areaOpaqueLsa_flushed": "<areaOpaqueLsa_flushed>", "areaOpaqueLsa_agedOut": "<areaOpaqueLsa_agedOut>", "asOpaqueLsa_generated": "<asOpaqueLsa_generated>", "asOpaqueLsa_refreshed": "<asOpaqueLsa_refreshed>", "asOpaqueLsa_flushed": "<asOpaqueLsa_flushed>", "asOpaqueLsa_agedOut": "<asOpaqueLsa_agedOut>" }, "vrf_name": "<vrf_name>" }] </pre>
-----------------------------	---

where:

Element	Description
<i>ospf_id</i>	OSPF identifier. Default value: 0.
<i>clr_timer_str</i>	Time since last OSPF process clear in HH:MM:SS format.
<i>router_id_changes</i>	Router-id changes counter; a positive integer.
<i>dr_election_counter</i>	DR elections counter; a positive integer.
<i>older_lsas_counter</i>	Older received LSAs counter; a positive integer.
<i>nbr_state_change_counter</i>	Neighbor state changes counter; a positive integer.
<i>nbr_bad_lsreqs_counter</i>	Neighbor bad LS received requests counter; a positive integer.
<i>nbr_interval_expired_counter</i>	Neighbor dead-interval expirations counter; a positive integer.

Element	Description
<i>nbr_seq_number_mismatch</i>	Neighbor sequence number mismatches counter; a positive integer.
<i>spf_full</i>	Full SPF Computations counter; a positive integer.
<i>spf_summary</i>	Summary SPF Computations counter; a positive integer.
<i>spf_external</i>	External SPF Computations counter; a positive integer.
<i>recv_buf</i>	Received packet buffer; a positive integer.
<i>send_buf</i>	Sent packet buffer; a positive integer.
<i>lsa_buf</i>	LSA buffer; a positive integer.
<i>packet_unuse</i>	Unused packets number; a positive integer.
<i>packet_max</i>	Maximum packets number; a positive integer.
<i>lsa_unuse</i>	Unused LSAs number; a positive integer.
<i>lsa_max</i>	Maximum LSAs number; a positive integer.
<i>router_lsa_type</i>	Router LSA type name; a positive integer.
<i>routerLsa_generated</i>	Number of generated router LSAs; a positive integer.
<i>routerLsa_refreshed</i>	Number of refreshed router LSAs; a positive integer.
<i>routerLsa_flushed</i>	Number of flushed router LSAs; a positive integer.
<i>routerLsa_agedOut</i>	Number of aged out router LSAs; a positive integer.
<i>networkLsa_generated</i>	Number of generated network LSAs; a positive integer.
<i>networkLsa_refreshed</i>	Number of refreshed network LSAs; a positive integer.
<i>networkLsa_flushed</i>	Number of flushed network LSAs; a positive integer.
<i>networkLsa_agedOut</i>	Number of aged out network LSAs; a positive integer.
<i>summaryLsa_generated</i>	Number of generated summary LSAs; a positive integer.
<i>summaryLsa_refreshed</i>	Number of refreshed summary LSAs; a positive integer.

Element	Description
<i>summaryLsa_flushed</i>	Number of flushed summary LSAs; a positive integer.
<i>summaryLsa_agedOut</i>	Number of aged out summary LSAs; a positive integer.
<i>asbrSummaryLsa_generated</i>	Number of generated ASBR summary LSAs; a positive integer.
<i>asbrSummaryLsa_refreshed</i>	Number of refreshed ASBR summary LSAs; a positive integer.
<i>asbrSummaryLsa_flushed</i>	Number of flushed ASBR summary LSAs; a positive integer.
<i>asbrSummaryLsa_agedOut</i>	Number of aged out ASBR summary LSAs; a positive integer.
<i>asExternalLsa_generated</i>	Number of generated AS-External LSAs; a positive integer.
<i>asExternalLsa_refreshed</i>	Number of refreshed AS-External LSAs; a positive integer.
<i>asExternalLsa_flushed</i>	Number of flushed AS-External LSAs; a positive integer.
<i>asExternalLsa_agedOut</i>	Number of aged out AS-External LSAs; a positive integer.
<i>asNssaLsa_generated</i>	Number of generated AS-NSSA LSAs; a positive integer.
<i>asNssaLsa_refreshed</i>	Number of refreshed AS-NSSA LSAs; a positive integer.
<i>asNssaLsa_flushed</i>	Number of flushed AS-NSSA LSAs; a positive integer.
<i>asNssaLsa_agedOut</i>	Number of aged out AS-NSSA LSAs; a positive integer.
<i>type8Lsa_generated</i>	Number of generated type-8 LSAs; a positive integer.
<i>type8Lsa_refreshed</i>	Number of refreshed type-8 LSAs; a positive integer.
<i>type8Lsa_flushed</i>	Number of flushed type-8 LSAs; a positive integer.
<i>type8Lsa_agedOut</i>	Number of aged out type-8 LSAs; a positive integer.
<i>linkOpaqueLsa_generated</i>	Number of generated Link Opaque LSAs; a positive integer.

Element	Description
<i>linkOpaqueLs_a_refreshed</i>	Number of refreshed Link Opaque LSAs; a positive integer.
<i>linkOpaqueLs_a_flushed</i>	Number of flushed Link Opaque LSAs; a positive integer.
<i>linkOpaqueLs_a_agedOut</i>	Number of aged out Link Opaque LSAs; a positive integer.
<i>areaOpaque_lsa_type</i>	Area Opaque LSA type name; a positive integer.
<i>areaOpaqueLs_a_generated</i>	Number of generated Area Opaque LSAs; a positive integer.
<i>areaOpaqueLs_a_refreshed</i>	Number of refreshed Area Opaque LSAs; a positive integer.
<i>areaOpaqueLs_a_flushed</i>	Number of flushed Area Opaque LSAs; a positive integer.
<i>areaOpaqueLs_a_agedOut</i>	Number of aged out Area Opaque LSAs; a positive integer.
<i>asOpaque_lsa_type</i>	AS Opaque LSA type name; a positive integer.
<i>asOpaqueLsa_generated</i>	Number of generated AS External Opaque LSAs; a positive integer.
<i>asOpaqueLsa_refreshed</i>	Number of refreshed AS External Opaque LSAs; a positive integer.
<i>asOpaqueLsa_flushed</i>	Number of flushed AS External Opaque LSAs; a positive integer.
<i>asOpaqueLsa_agedOut</i>	Number of aged out AS External Opaque LSAs; a positive integer.
<i>vrf_name</i>	Default VRF name. Default value: <code>default</code> .

Get OSPF Traffic Statistics

Get the OSPF traffic statistics.

Request

Method Type	GET
Request URI	/nos/api/info/ospf/traffic-stats/< <i>vrf_name</i> >
Request Body (JSON)	

where:

Element	Description
<i>vrf_name</i>	(Optional) Default VRF name. Default value: default.

Response

Response Body (JSON)	<pre>[{ "traffic-stats": { "ospf_id": "<ospf_id>", "timer_str": "<timer_str>", "total_pkt_in": "<total_pkt_in>", "total_pkt_out": "<total_pkt_out>", "hello_in": "<hello_in>", "hello_out": "<hello_out>", "db_desc_in": "<db_desc_in>", "db_desc_out": "<db_desc_out>", "ls_req_in": "<ls_req_in>", "ls_req_out": "<ls_req_out>", "ls_upd_in": "<ls_upd_in>", "ls_upd_out": "<ls_upd_out>", "ls_ack_in": "<ls_ack_in>", "ls_ack_out": "<ls_ack_out>", "error_drops_in": "<error_drops_in>", "error_drops_out": "<error_drops_out>", "error_hellosin": "<error_hellosin>", "error_dbsin": "<error_dbsin>", "error_lsreqin": "<error_lsreqin>", "error_lsuin": "<error_lsuin>", "error_lsackin": "<error_lsackin>", "error_unknown_in": "<error_unknown_in>", "error_unknown_out": "<error_unknown_out>", "error_badcrc": "<error_badcrc>", "error_wrong_area": "<error_wrong_area>", "error_bad_version": "<error_bad_version>", "error_bad_auth": "<error_bad_auth>", "error_passive": "<error_passive>", "error_nonbr": "<error_nonbr>", "error_invalid_src": "<error_invalid_src>", "error_invalid_dst": "<error_invalid_dst>", "error_pklength": "<error_pklength>" }, "vrf_name": "<vrf_name>" }]</pre>
----------------------	--

where:

Element	Description
<i>ospf_id</i>	OSPF identifier. Default value: 0.
<i>timer_str</i>	Time since last OSPF process clear in HH:MM:SS format.
<i>total_pkt_in</i>	Number of total packets in; a positive integer.
<i>total_pkt_out</i>	Number of total packets out; a positive integer.
<i>hello_in</i>	Number of hello packets in; a positive integer.
<i>hello_out</i>	Number of hello packets out; a positive integer.
<i>db_desc_in</i>	Number of DB descriptor packets in; a positive integer.
<i>db_desc_out</i>	Number of DB descriptor packets out; a positive integer.

Element	Description
<i>ls_req_in</i>	Number of LS Request packets in; a positive integer.
<i>ls_req_out</i>	Number of LS Request packets out; a positive integer.
<i>ls_upd_in</i>	Number of LS Update packets in; a positive integer.
<i>ls_upd_out</i>	Number of LS Update packets out; a positive integer.
<i>ls_ack_in</i>	Number of LS ACK packets in; a positive integer.
<i>ls_ack_out</i>	Number of LS ACK packets out; a positive integer.
<i>error_drops_in</i>	Number of errors related to drops in; a positive integer.
<i>error_drops_out</i>	Number of errors related to drops out; a positive integer.
<i>error_hellosin</i>	Number of errors related to hellos in; a positive integer.
<i>error_dbsin</i>	Number of errors related to DB Descriptors; a positive integer.
<i>error_lsreqin</i>	Number of errors related to LS Requests; a positive integer.
<i>error_lsuin</i>	Number of errors related to LS Updates; a positive integer.
<i>error_lsackin</i>	Number of errors related to LS ACKs; a positive integer.
<i>error_unknown_in</i>	Number of errors related to unknown in; a positive integer.
<i>error_unknown_out</i>	Number of errors related to unknown out; a positive integer.
<i>error_badcrc</i>	Number of errors related to Bad CRC; a positive integer.
<i>error_wrong_area</i>	Number of errors related to Wrong Area; a positive integer.
<i>error_bad_version</i>	Number of errors related to Bad Version; a positive integer.
<i>error_bad_auth</i>	Number of errors related to Bad Authentication; a positive integer.
<i>error_passive</i>	Number of errors related to Passive; a positive integer.
<i>error_nnbr</i>	Number of errors related to No Neighbor; a positive integer.
<i>error_invalid_src</i>	Number of errors related to Invalid Source; a positive integer.
<i>error_invalid_dst</i>	Number of errors related to Invalid Destination; a positive integer.
<i>error_pktlengt</i>	Number of errors related to Packet Length; a positive integer.
<i>vrf_name</i>	Default VRF name. Default value: default .

Get OSPF Neighbors

Get the OSPF neighbors list.

Request

Method Type	GET
Request URI	/nos/api/info/ospf/neighbor
Request Body (JSON)	

Response

Response Body (JSON)	[{ "vrf_name": "<vrf_name>", "nbr_router_id": "<nbr_router_id>", "priority": "<priority>", "nbr_state": "<nbr_state>", "dead_timer": "<dead_timer>", "nbr_addr": "<nbr_addr>", "ifp_name": "<ifp_name>" }]
-------------------------	--

where:

Element	Description
<i>vrf_name</i>	Default VRF name. Default value: default .
<i>nbr_router_id</i>	Neighbor router ID identifier; a valid IPv4 or IPv6 address.
<i>priority</i>	The neighbor priority; an integer from 0-255.
<i>dead_timer</i>	The time left for dead interval expiry in HH:MM:SS format.
<i>nbr_addr</i>	Neighbor IP address; a valid IPv4 or IPv6 address.
<i>ifp_name</i>	Ethernet interface name.

Get OSPF Routes

Get the OSPF routes list.

Request

Method Type	GET
Request URI	/nos/api/info/ospf/route/<vrf_name>
Request Body (JSON)	

where:

Element	Description
vrf_name	(Optional) Default VRF name. Default value: default.

Response

Response Body (JSON)	[{ "Network": "<Network>", "pathcode": "<pathcode>", "pathCount": "<pathCount>", "route_path_cost": "<route_path_cost>", "route_type2path_cost": "<route_type2path_cost>", "next_hop_info": [{ "interface": "<interface>", "area_id": "<area_id>", "neighbor_addr": "<neighbor_addr>" }] }]
-------------------------	---

where:

Element	Description
<i>Network</i>	Network name; a string in the format "AA:BB:CC:DD/MM".
<i>pathcode</i>	Path type; one of: <ul style="list-style-type: none"> ● connected ● Discard ● OSPF ● OSPF inter area ● OSPF NSSA external type 1 ● OSPF NSSA external type 2 ● OSPF external type 1 ● OSPF external type 2
<i>pathCount</i>	Number of ecmp paths; a positive integer.
<i>route_path_cost</i>	Route-path cost; a positive integer.
<i>route_type2path_cost</i>	Route-type 2 path cost; a positive integer.
<i>next_hop_info</i>	Next-hop information; a list of dictionaries. Depending on the configuration, each dictionary may contain the following values: <ul style="list-style-type: none"> ● <i>interface</i>: Neighbor IP address; a valid IPv4 or IPv6 address. ● <i>area_id</i>: Neighbor area-id; a valid IPv4 or IPv6 address. ● <i>neighbor_addr</i>: Neighbor IP address; a valid IPv4 or IPv6 address.

Get OSPF Database

Get the OSPF database.

Request

Method Type	GET
Request URI	/nos/api/info/ospf/database/<vrf_name>
Request Body (JSON)	

where:

Element	Description
vrf_name	(Optional) Default VRF name. Default value: default.

Response

Response Body (JSON)	[{ "link_state_id": "<link_state_id>", "adv_router": "<adv_router>", "lsa_type": "<lsa_type>", "lsa_age": "<lsa_age>", "ls_seqnum_str": "<ls_seqnum_str>", "checksum": "<checksum>", "link count": "<link count>", "area_id": "<area_id>" }]
-------------------------	---

where:

Element	Description
link_state_id	VRF name; a valid IPv4 or IPv6 address.
adv_router	Advertising router ID; a valid IPv4 or IPv6 address.
lsa_type	LSA type; one of: <ul style="list-style-type: none">● Router-LSA● Network-LSA● Summary-LSA● ASBR-summary-LSA● AS-external-LSA● AS-NSSA-LSA
lsa_age	LSA age; a positive integer.

Element	Description
<i>ls_seqnum_str</i>	LS sequence number in hexadecimal format.
<i>checksum</i>	LSA checksum in hexadecimal format.
<i>link count</i>	Links number; a positive integer.
<i>area_id</i>	The area-id of the LSDB; a valid IPv4 or IPv6 address.

PKI

The following Private Key Infrastructure (PKI) URIs are available:

- /nos/api/cfg/pki GET, DELETE
- /nos/api/cfg/pki/ca GET, PUT, DELETE
- /nos/api/cfg/pki/hostcert GET, PUT, POST, DELETE
- /nos/api/cfg/pki/csr GET, PUT, POST

The following PKI commands are available:

- [Get PKI Profile Summary Information](#)
- [Delete PKI Profile](#)
- [Get CA Certificate](#)
- [Import CA Certificate](#)
- [Delete CA Certificate](#)
- [Get Host Certificate](#)
- [Import Host Certificate](#)
- [Generate Host Certificate](#)
- [Delete Host Certificate](#)
- [Generate CSR](#)
- [Get CSR](#)
- [Export CSR and Import Signed CSR](#)

Get PKI Profile Summary Information

This command returns summary information about a specific PKI profile or about all configured PKI profiles.

Request

Method Type	GET
Request URI	/nos/api/cfg/pki/{pki_name}
Request Body (JSON)	

where:

Element	Description
pki_name	The name of the PKI profile. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 16 characters) Note: If no PKI profile name is provided, then the command returns summary information about all configured PKI profiles.

Response

Response Body (JSON)	[{ "PKI_Profile_Name": "<pki_name>", "In_use": "{yes no}", "CA": "<ca_number>", "Host_certificate": "{existed non-existed}", "CSR": "{existed non-existed}" }]
----------------------	--

where:

Element	Description
PKI_Profile_Name	The name of the PKI profile. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 16 characters)
In_use	Whether the PKI profile is used by the switch. Valid values: <ul style="list-style-type: none">● <i>yes</i>● <i>no</i>
CA	The number of Certificate Authority (CA) stored in the PKI profile. Valid value: <ul style="list-style-type: none">● <i>0-5</i>

Element	Description
Host_certificate	<p>Whether host certificates are present in the PKI profile. Valid value:</p> <ul style="list-style-type: none"> ● <i>existed</i> ● <i>non-existed</i>
CSR	<p>Whether Certificate Signing Requests (CSR) are present in the PKI profile. Valid value:</p> <ul style="list-style-type: none"> ● <i>existed</i> ● <i>non-existed</i>

Delete PKI Profile

This command removes a configured PKI profile.

Request

Method Type	DELETE
Request URI	/nos/api/cfg/pki/{ <i>pki_name</i> }
Request Body (JSON)	

where:

Element	Description
<i>pki_name</i>	The name of the PKI profile. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 16 characters)

Get CA Certificate

This command returns the Certificate Authority (CA) stored in the PKI profile.

Request

Method Type	GET
Request URI	/nos/api/cfg/pki/ca/{pki_name}/{format}
Request Body (JSON)	

where:

Element	Description
<i>pki_name</i>	The name of the PKI profile. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 16 characters)
<i>format</i>	The format for displaying the CA. Valid values: <ul style="list-style-type: none">● <i>text</i>● <i>base64</i> Default value: <i>text</i>

Response

Example when chosen format is *text*:

Response Body (JSON)	["Certificate": { "Data": { "Version": "3 (0x2)", "Serial Number": "89:0f:d1:1e:d7:79:37:cb", "Signature Algorithm": "sha256WithRSAEncryption", "Issuer": "C=US, ST=Maryland, L=Baltimore, O=Test CA, Limited, OU=Server Research Department, CN=Test CA, emailAddress=test@example.com", "Validity": { "Not Before": "Dec 28 08:26:50 2016 GMT", "Not After": "Sep 24 08:26:50 2019 GMT", "Subject": "C=US, ST=Maryland, L=Baltimore, O=Test CA, Limited, OU=Server Research Department, CN=Test CA/emailAddress=test@example.com", "Subject Public Key Info": { "Public Key Algorithm": "rsaEncryption", "Public-Key": "(4096 bit)", "Modulus": "00:a8:cc:51:e8:18:c7:50:68:12:3c:7d:c4:9f:9a: d3:a3:4e:8d:0a:e3:b6:25:88:f6:07:0e:de:09:b3: 96:59:d7:e3:38:2c:2f:1d:50:e5:40:91:4f:29:9d: b6:45:4f:d6:f3:f9:27:09:04:85:13:50:91:6b:e8: 4e:6b:c0:f7:c5:b9:f0:9b:45:9a:90:80:49:5f:3b: ... } } } }
----------------------	---

Example when chosen format is *base64*:

Response Body (JSON)	["-----BEGIN CERTIFICATE-----" MIIGMzCCB BugAwIBAgIJAIkPOR7XeTfLMA0GCSqGSIb3DQEBCwUAMIGnMQSwCQYDVQQGEwJVUzERMA8GA1UECAwITWFyeWxhbmQxEjAQBgNVBAcMCUJhbHRpbW9yZTEZMBcGA1UECgwQVGVzdCBDQSwgTGltXR1ZDEjMCEGA1UECwwaU2Vyd mVyIFJlc2VhcmNoIERl cGFydG1lb nQxEDA0BgnVBAMMB1Rlc3QgQ0ExHzAdB gkqhkiG9w0BCQEW EHRl c3RAZXhhbxBsZS5jb20wHhcNMTYxMjI4MDgyNjUwWhcNMTkwOTI0MDgyNjUwWjCBpzELMAKGA1UEBhMCVVMxETAPB gNVBAgMCE1hc nlsYw5kM RI wEAYDVQHQDA1CYwxOaW1vc mUxGTAXB gNVBAoMEFRl c3QgQ0EsIEpbw10ZwQxIzAhB gNVBA sMG1n1cnZlciBSZ XN1YXjjaCBEZXBhcnRtZw50MRAwDgYDVQDDAdUZXNOIENBMR8wHQYJKoZIhvcNAQkBFhBOZXN0QGV4YW1wbGUuY29tMIICIjANB gkqhkiG9w0BAQEF AAOCAg8AMII CCgKCAgEAqMxR6BjHUGgSPH3En5rTo06NCu02JYj2Bw7eCb0Wdfj0CwvHVD1QJFPKZ22RU/w8/knCQSFE1CRa+h0a8D3xbnwmoWakIBJXzulscAII V78nDuqNzI6xbuHdTOP601dZiLugyqZypb0ScNfGkQnCMoSIDJBUpAgkqG9hGYD/ATpn3/RBzdr0GCPJZ3Zm/90i5qUBKHoQmXdk5/R29kf4bM2HLKW2tqh4+Ba/PJoWZ2wASVTAzU39JT kLU+HtKg8F2hEs4CtZ/sE1A+oKSGUzfTJPf50mM28xIb4a0H1ecgTY92i/6rbcdxZS10RnH3Z1VEN1HgQCeYf4XXBLI20kL1Bknm5IqqojK1BNP7Z61vEiLhxLqX8XdXyrjzqXK7P0+yc+7jXmwG9mhPxWDW05yvFFM1IhwMNh08uNE+dCo+REmtpjGkmi4gJdzUEDZwYfUXbIRZpdAtCYuIygZ0CX7kzvSoGn2IxG43svKhxZYvR038MxtjjBNW23jMcpMy+48bs04dVMBNYJd9LubI1+tMKqZZmTT8dcRP6woxL05DCVn79... Ay8jxzXX93uIKa0a3K+0B25iFT6xwK50ioVSLfaGqwf w71sf/k2vFViqhBTnoLux2oSiHoEHGGSAMw0pqz9DTdVFY eFieE+BaIfsOyEgmXoJC4sxUrDrcpzJydSfjJ6n5Pc2cZR V kJZoSWXR4oNfJ CsvpxTDJrN8A+3UqyIW/539shRBqUyxounE25ooYN49aORIjMDXm25bf7V7Xm+uHUw7gQeWACLIohJi qc7QS+0w1b9zBau5pU670NH+W7RLjE17rXskA== -----END CERTIFICATE-----"]
----------------------	---

Import CA Certificate

This command imports a CA certificate from a remote server to a specific PKI profile on the switch.

Request

Method Type	PUT
Request URI	/nos/api/cfg/pki/ca/{pki_name}
Request Body (JSON)	{ "server_ip": "{server_ip}", "src_file": "{src_file}", "username": "{username}", "passwd": "{password}", "vrf_name": "{management default}" }

where:

Element	Description
pki_name	The name of the PKI profile. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 16 characters) Note: If the specified PKI profile does not exist, then the switch creates a new PKI profile with that name.
server_ip	The IP address of the remote server from where the CA certificate is imported. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
src_file	The source filepath of the CA certificate on the server. Valid value: <ul style="list-style-type: none">● <i>string</i> representing the filepath of the CA certificate
username	The username used to log onto the remote server. Valid value: <ul style="list-style-type: none">● <i>string</i>
passwd	The password used to log onto the remote server. Valid value: <ul style="list-style-type: none">● <i>string</i>
vrf_name	The VRF instance used to connect to the remote server. Valid value: <ul style="list-style-type: none">● <i>default</i>● <i>management</i> Default value: <i>default</i>

Response

Response Body (JSON)	{ "status": "{successful failed}", "details": "{details}", "filename": "{filename}" }
----------------------	---

where:

Element	Description
status	The status of the CA certificate import. Valid values: <ul style="list-style-type: none">● <i>successful</i>● <i>failed</i>
details	The detailed description of the import status. Valid value: <ul style="list-style-type: none">● <i>string</i>
filename	The filename of the CA certificate. Valid value: <ul style="list-style-type: none">● <i>string</i>

Delete CA Certificate

This command deletes a CA certificate from a specific PKI profile.

Request

Method Type	DELETE
Request URI	/nos/api/cfg/pki/ca/{pki_name} ?subject={subject}
Request Body (JSON)	

where:

Element	Description
<i>pki_name</i>	The name of the PKI profile. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 16 characters)
<i>subject</i>	The subject of the CA certificate. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 255 characters), for example: "C=US, ST=Maryland, L=Baltimore, O=Test CA, Limited, OU=Server Research Department, CN=Test CA, emailAddress=test@example.com"

Get Host Certificate

This command returns the host certificate stored in a specific PKI profile.

Request

Method Type	GET
Request URI	/nos/api/cfg/pki/hostcert/{pki_name}/{format}
Request Body (JSON)	

where:

Element	Description
<i>pki_name</i>	The name of the PKI profile. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 16 characters)
<i>format</i>	The format for displaying the host certificate. Valid values: <ul style="list-style-type: none">● <i>text</i>● <i>base64</i> Default value: <i>text</i>

Response

Example when chosen format is *text*:

Response Body (JSON)	["Certificate: Data: Version: 3 (0x2) Serial Number: 89:0f:d1:1e:d7:79:37:cb Signature Algorithm: sha256WithRSAEncryption Issuer: C=US, ST=Maryland, L=Baltimore, O=Test CA, Limited, OU=Server Research Department, CN=Test CA, emailAddress=test@example.com Validity Not Before: Dec 28 08:26:50 2016 GMT Not After : Sep 24 08:26:50 2019 GMT Subject: C=US, ST=Maryland, L=Baltimore, O=Test CA, Limited, OU=Server Research Department, CN=Test CA/emailAddress=test@example.com Subject Public Key Info: Public Key Algorithm: rsaEncryption Public-Key: (4096 bit) Modulus: 00:a8:cc:51:e8:18:c7:50:68:12:3c:7d:c4:9f:9a: d3:a3:4e:8d:0a:e3:b6:25:88:f6:07:0e:de:09:b3: 96:59:d7:e3:38:2c:2f:1d:50:e5:40:91:4f:29:9d: b6:45:4f:d6:f3:f9:27:09:04:85:13:50:91:6b:e8: 4e:6b:c0:f7:c5:b9:f0:9b:45:9a:90:80:49:5f:3b: ...
----------------------	---

Example when chosen format is *base64*:

Response Body (JSON)	<pre>["-----BEGIN CERTIFICATE----- MIIGMzCCBrgAwIBAgIJAiKPOR7XeTfLMA0GCSqGSIb3DQEBCwUAMIGnMQSwCQYD VQQGEwJVUzERMA8GA1UECAwITWFyeWxhbmQxEjAQBgNVBAcMCUJhbHRpbW9yZTEZ MBcGA1UECgwQVGVzdCBDQSwgTGltaxRLZDEjMCEGA1UECwuaU2VydmyIFJlc2Vh cmNoIERlcGFydG1lbNQxEDAObgNVBAMMB1Rlc3QgQ0ExHzAdBgkqhkiG9wOBCQEW EHRLc3RAZXhhbXBsZS5jb20wHhcNMTYxMjI4MDgyNjUwWhcNMTkwOTIOMDgyNjUw WjCBpzELMAKGA1UEBhMCVVMxETAPBgNVBAgMCE1hcnlsYW5kMRIwEAYDVQQHDA1C Ywx0aw1vcvGTAxBgNVBAoMEFRlc3QgQ0EsIEpbw10ZWQxIzAhBgNVBAsMG1N1 cnZlcIBSZXN1YXJjaCBEZXhcnRtZW50MRAwDgYDVQQDDAdUZXNOIENBMR8wHQYJ KoZIhvcNAQkBFh0ZxN0QGV4YW1wbGUuY29tMIICIJANBgkqhkiG9wOBAQEFAAOC Ag8AMIIICCgKCAGEAqMxR6BjHUGgSPH3En5rTo06NCu02JYj2Bw7eCb0Wdfj0Cwv HVD1QJFPKZ22RU/W8/knCQSF1CRa+h0a8D3xbnwmoWakIBJXzuLscAIIV78nDuq NzI6xbuHdTOP60ldZiLUgqyZypb0ScNfgQnCMoSIdJBUpAgkqG9hGYD/ATpn3/R Bzdr0GCPJZ3Zm/90i5qUBKhoQmXdk5/R29kf4bM2HLKw2tqh4+Ba/PJoWZ2wASvT AzU39JTkLU+HtKg8F2hEs4Ctz/sE1A+oKSGUzfTJPf50mM28xIb4aOHlecgTY92i /6rbcdxzS10RnH3ZlVEN1HgQCeYf4XXBLI20kL1Bkm5IqqojK1BNP7Z61vEiLhx LqX8XdXyrjzqXK7P0+yc+7jXmwG9mhPxWDW05yvFFM1IhwMNh08uNE+dCo+REmt jGkmi4gJdzUEDzwYfUXbIRZpdAtCYuIygZOCX7kzvSoGn2IxG43svKhxZYvR038M xtjjBNW23jMcpMy+48bs04dVMBNYJd9LUbi1+tMKqZZmTT8dcRP6woxL05DCVn79 JCAqCVY0vFE1mVSUggF5CVG0n9/dylTmXIpaia0dAqj3DNjnPxpcnUYXn3NFIL ... Ay8jxzXX93uIKa0a3K+0B25iFT6xwK50ioVSLfaGqwfw7lsf/k2vFViqhBTnoLux 2oSiHoEHGGSAMw0pQz9DTdVFYeFieE+BaIfsOyEgmXoJC4sxUrDrcpzJydsfjJ6n 5Pc2cZRVkJzoSWXR4oNfJcsvpxTDJrN8A+3UqyIW/539shRBqUyxounE250oYN49 aORIjMDXm25bf7V7Xm+uHUw7gQewACLIohJiqc7QS+0w1b9zBau5pU670NH+w7R LjE17rXskA== -----END CERTIFICATE-----"]</pre>
----------------------	--

Import Host Certificate

This command imports a host certificate from a remote server to a specific PKI profile on the switch.

Request

Method Type	PUT
Request URI	/nos/api/cfg/pki/hostcert/{pki_name}
Request Body (JSON)	{ "server_ip": "{server_ip}", "src_file": "{src_file}", "dst_file": "{certificate private-key}", "username": "{username}", "passwd": "{password}", "vrf_name": "{management default}" }

where:

Element	Description
pki_name	The name of the PKI profile. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 16 characters) Note: If the specified PKI profile does not exist, then the switch creates a new PKI profile with that name.
server_ip	The IP address of the remote server from where the host certificate is imported. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
src_file	The source filepath of the host certificate on the server. Valid value: <ul style="list-style-type: none">● <i>string</i> representing the filepath of the CA certificate
dst_file	The destination filepath of the host certificate on the switch. Valid value: <ul style="list-style-type: none">● <i>certificate</i>● <i>private-key</i> Note: The host certificate is imported only when both the certificate and the private key are successfully imported.
username	The username used to log onto the remote server. Valid value: <ul style="list-style-type: none">● <i>string</i>

Element	Description
passwd	The password used to log onto the remote server. Valid value: <ul style="list-style-type: none">● <i>string</i>
vrf_name	The VRF instance used to connect to the remote server. Valid value: <ul style="list-style-type: none">● <i>default</i>● <i>management</i> Default value: <i>default</i>

Response

Response Body (JSON)	{ "status": "{successful failed}", "details": "{details}", "filename": "{filename}" }
----------------------	---

where:

Element	Description
status	The status of the host certificate import. Valid values: <ul style="list-style-type: none">● <i>successful</i>● <i>failed</i>
details	The detailed description of the import status. Valid value: <ul style="list-style-type: none">● <i>string</i> Note: If only the certificate has been imported, then this variable is " <i>still needs private-key</i> ". If only the private key has been imported, the this variable is " <i>still needs certificate</i> ".
filename	The filename of the host certificate. Valid value: <ul style="list-style-type: none">● <i>string</i>

where:

Element	Description
	Valid value: <ul style="list-style-type: none">●

Generate Host Certificate

This command generates a host certificate for a specific PKI profile.

Request

Method Type	POST
Request URI	/nos/api/cfg/pki/hostcert/{pki_name}
Request Body (JSON)	{ "CountryName": "{CountryName}", "StateName": "{StateName}", "LocalityName": "{LocalityName}", "OrganizationName": "{OrganizationName}", "OrganizationalUnitName": "{OrganizationalUnitName}", "CommonName": "{CommonName}", "Email": "{Email}" }

where:

Element	Description
pki_name	The name of the PKI profile. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 16 characters) Note: If the specified PKI profile does not exist, then the switch creates a new PKI profile with that name.
CountryName	The code of the country. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 2 characters), for example: US
StateName	The name of the state or province. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 16 characters), for example: California
LocalityName	The name of the locality (for example, a city). Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 32 characters), for example: Santa Clara
OrganizationName	The name of the organization (for example, a company). Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 64 characters), for example: Lenovo
OrganizationalUnitName	The name of the organizational unit (for example, a department). Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 32 characters), for example: Network Engineering

Element	Description
CommonName	The common name. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 32 characters), for example: TestHostCert
Email	The e-mail address. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 32 characters), for example: test@example.com

Response

Response Body (JSON)	{ "status": "{generation succeeded generation failed}", }
----------------------	---

where:

Element	Description
status	The status of the host certificate generation. Valid value: <ul style="list-style-type: none">● <i>generation succeeded</i>● <i>generation failed</i>

Delete Host Certificate

This command deletes the host certificate from a specific PKI profile.

Request

Method Type	DELETE
Request URI	/nos/api/cfg/pki/hostcert/{ <i>pki_name</i> }
Request Body (JSON)	

where:

Element	Description
<i>pki_name</i>	The name of the PKI profile. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 16 characters)

Generate CSR

This command generate the Certificate Signing Request (CSR) for a specific PKI profile.

Request

Method Type	POST
Request URI	/nos/api/cfg/pki/csr/{pki_name}
Request Body (JSON)	{ "CountryName": "{CountryName}", "StateName": "{StateName}", "LocalityName": "{LocalityName}", "OrganizationName": "{OrganizationName}", "OrganizationalUnitName": "{OrganizationalUnitName}", "CommonName": "{CommonName}", "Email": "{Email}" }

where:

Element	Description
pki_name	The name of the PKI profile. Valid value: <ul style="list-style-type: none">● string (up to 16 characters) Note: If the specified PKI profile does not exist, then the switch creates a new PKI profile with that name.
CountryName	The code of the country. Valid value: <ul style="list-style-type: none">● string (up to 2 characters), for example: US
StateName	The name of the state or province. Valid value: <ul style="list-style-type: none">● string (up to 16 characters), for example: California
LocalityName	The name of the locality (for example, a city). Valid value: <ul style="list-style-type: none">● string (up to 32 characters), for example: Santa Clara
OrganizationName	The name of the organization (for example, a company). Valid value: <ul style="list-style-type: none">● string (up to 64 characters), for example: Lenovo
OrganizationalUnitName	The name of the organizational unit (for example, a department). Valid value: <ul style="list-style-type: none">● string (up to 32 characters), for example: Network Engineering

Element	Description
CommonName	The common name. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 32 characters), for example: TestCSR
Email	The e-mail address. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 32 characters), for example: test@example.com

Response

Response Body (JSON)	<pre>{ "status": "{generation succeeded generation failed}", }</pre>
----------------------	--

where:

Element	Description
status	The status of the host certificate generation. Valid value: <ul style="list-style-type: none">● <i>generation succeeded</i>● <i>generation failed</i>

Get CSR

This command returns the CSR stored in a specific PKI profile.

Request

Method Type	GET
Request URI	/nos/api/cfg/pki/csr/{pki_name}/{format}
Request Body (JSON)	

where:

Element	Description
<i>pki_name</i>	The name of the PKI profile. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 16 characters)
<i>format</i>	The format for displaying the CSR. Valid values: <ul style="list-style-type: none">● <i>text</i>● <i>base64</i> Default value: <i>text</i>

Response

Example when chosen format is *text*:

Response Body (JSON)	["Certificate Request: Data: Version: 0 (0x0) Subject: C=US, ST=California, L=Santa Clara, O=Lenovo Networking Operating System, OU=Network Engineering, CN=cccc/emailAddress=cccc@lenovo.com Subject Public Key Info: Public Key Algorithm: rsaEncryption Public-Key: (2048 bit) Modulus: 00:c3:78:73:d2:6b:e6:64:3c:10:8a:63:3d:11:d0: bf:95:56:0b:a1:1c:12:39:6d:d8:5a:45:20:06:90: b4:a9:2f:a6:87:5c:bc:fd:d3:1f:08:e6:31:7c:82: 94:aa:50:20:14:5a:63:19:1e:26:52:b0:35:56:b2: 8c:b6:aa:e1:6e:1c:1b:32:79:08:bd:02:a6:1b:5d: 59:cc:f1:44:12:36:e3:7d:2b:73:7e:5e:70:9e:e2: b9:94:3c:38:5b:fd:30:10:2b:b7:7b:5d:d0:d9:08: ...]
----------------------	--

Example when chosen format is *base64*:

Response Body (JSON)	["-----BEGIN CERTIFICATE REQUEST-----" MIIC+DCC AeACAQAwgbIxCzAJBgNVBAYTA1VTMRMwEQYDVQQIDA�DYWxpZm9ybmlh MRQwEgYDVQQHDArTYW50YSBdbGFyYTErMCKGA1UECgwiTGVub3ZvIE5ldHdvcmtp bmcgT3BlcmFOaw5nIFN5c3R1bTEcMBBoGA1UECwvTTmV0d29yayBFbmdpbmVlcmlu ZzENMASGA1UEAwxEY2NjYzEeMBwGCSqGSIb3DQEJARYPY2NjY0BsZW5vdm8uY29t MIIBIjANBgkqhkiG9w0BAQEFAAOCAQ8AMIIIBCgKCAQE Aw3hz0mvmdZDwQimM9EdC/ 1VYLoRwSOW3YwUgBpCoqS+mh1y8/dMfCOYxfIKUq1AgFFpjGR4mUrA1VrKMtqrh bhwbMnkIVQKmG11ZzPFEEjbjfStzf15wnuK51Dw4W/0wECu3e13Q2QhK1CCu2gGx EQKXOMrC1cnnSEWp20koYSWMYAEGQkjy0uVNAEWxiMDB1EXf5yG2fnGNMSZ+0f/ qFQ+2cWIOWY/7GnyIrNwlWpZoD+oGAZBjhnlqrMTR9bZTwAQMvgI99Ry9LeSxaK6 KH5xe14cSHM1KqNrv9aht3w+GalEQ1EKUEgTwS40wmMhYfsff81ZexRQNidWVd2j SQIDAQABoAAwDQYJKoZIhvcNAQELBQADggEBALTGF7fkjtJgKclLA6Zy8tVjOs2WU kwDGphm/cLV/bBovCTV/nFsmNP4o6qvyyfd08t3wAz9PIcfceg7bkJM0uSw8Ii7c 5cKg59smpuNGNA9rnReB+M90cv3+Ah9SJQGYArbHImp8ApWpYPMADREKwkGW8YsAG KqiGXsSs9xJ20NAPCr/18+6pvVcAn5L7iyCyNb69X73S8FTbXks+3VRzQv5VuMz IwHIZjI6YniZVJjAZqpiqR90EK4KrV4wzeUL21JL/RLRRdRnRk3QfpJ09GxP+Hpe 1U4B2xvMIk1LXizUwHlaHqli34RscYW12mowh8/G125Qqfs0RE1YWXGPw24= -----END CERTIFICATE REQUEST-----"]
----------------------	---

Export CSR and Import Signed CSR

This command exports a CSR or imports a signed CSR.

Request

Method Type	PUT
Request URI	/nos/api/cfg/pki/csr/{pki_name}/{action}
Request Body (JSON)	{ "server_ip": "{server_ip}", "src_file": "{src_file}", "username": "{username}", "passwd": "{password}", "vrf_name": "{management default}" }

where:

Element	Description
pki_name	The name of the PKI profile. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 16 characters) Note: If the specified PKI profile does not exist, then the switch creates a new PKI profile with that name.
action	Whether to export a CSR or import a signed CSR. Valid values: <ul style="list-style-type: none">● <i>export</i>● <i>import</i>
server_ip	The IP address of the remote server from where the CA certificate is imported. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
src_file	The source filepath of the CA certificate on the server. Valid value: <ul style="list-style-type: none">● <i>string</i> representing the filepath of the CA certificate
username	The username used to log onto the remote server. Valid value: <ul style="list-style-type: none">● <i>string</i>

Element	Description
passwd	The password used to log onto the remote server. Valid value: <ul style="list-style-type: none">● <i>string</i>
vrf_name	The VRF instance used to connect to the remote server. Valid value: <ul style="list-style-type: none">● <i>default</i>● <i>management</i> Default value: <i>default</i>

Response

Response Body (JSON)	{ "status": "{successful failed}", "details": "{details}", "filename": "{filename}" }
----------------------	---

where:

Element	Description
status	The status of the CA certificate import. Valid values: <ul style="list-style-type: none">● <i>successful</i>● <i>failed</i>
details	The detailed description of the import status. Valid value: <ul style="list-style-type: none">● <i>string</i>
filename	The filename of the CA certificate. Valid value: <ul style="list-style-type: none">● <i>string</i>

RADIUS

The following Remote Authentication Dial-In User Service (RADIUS) URIs are available:

- /nos/api/cfg/radius GET, PUT
 - /nos/api/cfg/radius/hosts GET, POST, DELETE
 - /nos/api/cfg/radius/groups GET, POST, DELETE

The following RADIUS commands are available:

- Get RADIUS Configuration
 - Update RADIUS Configuration
 - Get RADIUS Server Configuration
 - Add RADIUS Server
 - Delete RADIUS Server
 - Get RADIUS Server Group Configuration
 - Add RADIUS Server Group
 - Delete RADIUS Server Group

Get RADIUS Configuration

This command returns the RADIUS configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/radius
Request Body (JSON)	{ "source_interface": "{ <i>source interface name not configured</i> }","retransmit": { <i>retransmit</i> }, "timeout": { <i>timeout</i> }, "global_key": "{ <i>configured not configured</i> }"} }

where:

Element	Description
source_interface	The name of the global RADIUS source interface. Valid values: <ul style="list-style-type: none">● <i>interface name</i>● <i>not configured</i>
retransmit	The number of retries the switch will make to establish a connection with a RADIUS server after the initial attempt failed. Valid value: <ul style="list-style-type: none">● 0-5
timeout	The amount of time, in seconds, before a RADIUS server connection attempt is considered to have failed. Valid value: <ul style="list-style-type: none">● 1-60
global_key	The status of the RADIUS global authentication key. Valid values: <ul style="list-style-type: none">● <i>configured</i>● <i>not configured</i>

Response

Response Body (JSON)	{ "source_interface": "{source interface name not configured}", "retransmit": {retransmit}, "timeout": {timeout}, "global_key": "{configured not configured}" }
----------------------	--

where:

Element	Description
source_interface	The name of the global RADIUS source interface. Valid value: <ul style="list-style-type: none">● <i>interface name</i>● <i>not configured</i>
retransmit	The number of retries the switch will make to establish a connection with a RADIUS server after the initial attempt failed. Valid value: <ul style="list-style-type: none">● 0-5
timeout	The amount of time, in seconds, before a RADIUS server connection attempt is considered to have failed. Valid value: <ul style="list-style-type: none">● 1-60
global_key	The status of the RADIUS global authentication key. Valid value: <ul style="list-style-type: none">● <i>configured</i>● <i>not configured</i>

Update RADIUS Configuration

This command updates the RADIUS configuration.

Request

Method Type	PUT
Request URI	/nos/api/cfg/radius
Request Body (JSON)	{ "retransmit": { <i>retransmit</i> }, "timeout": { <i>timeout</i> }, "global_key": "{ <i>global_key</i> }", "global_key_form": {0 7}, "source_interface": "{ <i>source interface name default</i> }" }

where:

Element	Description
retransmit	The number of retries the switch will make to establish a connection with a RADIUS server after the initial attempt failed. Valid value: <ul style="list-style-type: none">● 0-5
timeout	The amount of time, in seconds, before a RADIUS server connection attempt is considered to have failed. Valid value: <ul style="list-style-type: none">● 1-60
global_key	The status of the RADIUS global authentication key. Valid value: <ul style="list-style-type: none">● <i>configured</i>● <i>not configured</i>
global_key_form	The encryption method of the RADIUS global authentication key. Valid values: <ul style="list-style-type: none">● 0 (clear text)● 7 (encrypted)
source_interface	The name of the global RADIUS source interface. Valid value: <ul style="list-style-type: none">● <i>interface name</i>● <i>default</i> Note: If the variable is set to <i>default</i> , then it will reset to <i>not configured</i> .

Response

Response Body (JSON)	{ "source_interface": "{source interface name not configured}", "retransmit": {retransmit}, "timeout": {timeout}, "global_key": "{configured not configured}" }
----------------------	--

where:

Element	Description
source_interface	The name of the global RADIUS source interface. Valid values: <ul style="list-style-type: none">● <i>interface name</i>● <i>not configured</i>
retransmit	The number of retries the switch will make to establish a connection with a RADIUS server after the initial attempt failed. Valid value: <ul style="list-style-type: none">● 0-5
timeout	The amount of time, in seconds, before a RADIUS server connection attempt is considered to have failed. Valid value: <ul style="list-style-type: none">● 1-60
global_key	The status of the RADIUS global authentication key. Valid values: <ul style="list-style-type: none">● <i>configured</i>● <i>not configured</i>

Get RADIUS Server Configuration

This command returns the configuration of a specific configured RADIUS server or of all configured RADIUS servers.

Request

Method Type	GET
Request URI	/nos/api/cfg/radius/hosts/{IP_addr}
Request Body (JSON)	

where:

Element	Description
IP_addr	The IP address of the RADIUS server. Valid value: <ul style="list-style-type: none">● <i>IP address</i> Note: If no IP address is provided, then the command returns the configuration of all configured RADIUS servers.

Response

Response Body (JSON)	[{ "IP_addr": "{IP_addr}", "retransmit": {retransmit}, "timeout": {timeout}, "key": "{configured not configured}", "auth-port": {auth-port}, "acct-port": {acct-port} }]
----------------------	---

where:

Element	Description
IP_addr	The IP address of the RADIUS server. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
retransmit	The number of retries the switch will make to establish a connection with a RADIUS server after the initial attempt failed. Valid value: <ul style="list-style-type: none">● 0-5
timeout	The amount of time, in seconds, before a RADIUS server connection attempt is considered to have failed. Valid value: <ul style="list-style-type: none">● 1-60

Element	Description
key	The status of the RADIUS server authentication key. Valid value: <ul style="list-style-type: none">● <i>configured</i>● <i>not configured</i>
auth-port	The TCP port used for RADIUS server authentication. Valid value: <ul style="list-style-type: none">● <i>0-65535</i>
acct-port	The TCP port used for RADIUS server accounting. Valid value: <ul style="list-style-type: none">● <i>0-65535</i>

Add RADIUS Server

This command configures a RADIUS server.

Request

Method Type	POST
Request URI	/nos/api/cfg/radius/hosts
Request Body (JSON)	{ "IP_addr": "{IP_addr}", "retransmit": {retransmit}, "timeout": {timeout}, "key": "{key}", "key_form": {0 7}, "auth-port": {auth-port}, "acct-port": {acct-port} }

where:

Element	Description
IP_addr	The IP address of the RADIUS server. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
retransmit	The number of retries the switch will make to establish a connection with a RADIUS server after the initial attempt failed. Valid value: <ul style="list-style-type: none">● 0-5
timeout	The amount of time, in seconds, before a RADIUS server connection attempt is considered to have failed. Valid value: <ul style="list-style-type: none">● 1-60
key	The RADIUS server authentication key. Valid value: <ul style="list-style-type: none">● <i>string</i>
key_form	The encryption method of the RADIUS server authentication key. Valid values: <ul style="list-style-type: none">● 0 (clear text)● 7 (encrypted)
auth-port	The TCP port used for RADIUS server authentication. Valid value: <ul style="list-style-type: none">● 0-65535
acct-port	The TCP port used for RADIUS server accounting. Valid value: <ul style="list-style-type: none">● 0-65535

Response

Response Body (JSON)	<pre>{ "IP_addr": "{IP_addr}", "retransmit": {retransmit}, "timeout": {timeout}, "key": "{configured not configured}", "auth-port": {auth-port}, "acct-port": {acct-port} }</pre>
----------------------	---

where:

Element	Description
IP_addr	The IP address of the RADIUS server. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
retransmit	The number of retries the switch will make to establish a connection with a RADIUS server after the initial attempt failed. Valid value: <ul style="list-style-type: none">● 0-5
timeout	The amount of time, in seconds, before a RADIUS server connection attempt is considered to have failed. Valid value: <ul style="list-style-type: none">● 1-60
key	The status of the RADIUS server authentication key. Valid value: <ul style="list-style-type: none">● <i>configured</i>● <i>not configured</i>
auth-port	The TCP port used for RADIUS server authentication. Valid value: <ul style="list-style-type: none">● 0-65535
acct-port	The TCP port used for RADIUS server accounting. Valid value: <ul style="list-style-type: none">● 0-65535

Delete RADIUS Server

This command removes a configured RADIUS server.

Request

Method Type	DELETE
Request URI	/nos/api/cfg/radius/hosts/{IP_addr}
Request Body (JSON)	

where:

Element	Description
<i>IP_addr</i>	The IP address of the RADIUS server. Valid value: <ul style="list-style-type: none">• <i>IP address</i>

Get RADIUS Server Group Configuration

This command returns the configuration of a specific configured RADIUS server group or of all configured RADIUS server groups.

Request

Method Type	GET
Request URI	/nos/api/cfg/radius/groups/{group_name}
Request Body (JSON)	

where:

Element	Description
<i>group_name</i>	The name of the RADIUS server group. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 127 characters) Note: If no group name is provided, then the command returns the configuration of all configured RADIUS server groups.

Response

Response Body (JSON)	[{ "group_name": "{group_name}", "vrf_name": "{vrf_name}", "source_interface": "{source interface name not configured}", "hosts": [{ "IP_addr": "{IP_addr}", "retransmit": {retransmit}, "timeout": {timeout}, "key": "{configured not configured}", "auth-port": {auth-port}, "acct-port": {acct-port} }] }]]
----------------------	---

where:

Element	Description
group_name	The name of the RADIUS server group. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 127 characters)
vrf_name	The VRF instance for the RADIUS server group. Valid value: <ul style="list-style-type: none">● <i>VRF instance name</i>
source_interface	The name of the RADIUS group source interface. Valid values: <ul style="list-style-type: none">● <i>interface name</i>● <i>not configured</i>
hosts	The list of servers members of the RADIUS server group.
IP_addr	The IP address of the RADIUS server. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
retransmit	The number of retries the switch will make to establish a connection with a RADIUS server after the initial attempt failed. Valid value: <ul style="list-style-type: none">● <i>0-5</i>
timeout	The amount of time, in seconds, before a RADIUS server connection attempt is considered to have failed. Valid value: <ul style="list-style-type: none">● <i>1-60</i>
key	The status of the RADIUS server authentication key. Valid value: <ul style="list-style-type: none">● <i>configured</i>● <i>not configured</i>
auth-port	The TCP port used for RADIUS server authentication. Valid value: <ul style="list-style-type: none">● <i>0-65535</i>
acct-port	The TCP port used for RADIUS server accounting. Valid value: <ul style="list-style-type: none">● <i>0-65535</i>

Add RADIUS Server Group

This command configures a RADIUS server group.

Request

Method Type	POST
Request URI	/nos/api/cfg/radius/groups
Request Body (JSON)	{ "group_name": "{group_name}", "vrf_name": "{vrf_name}", "source_interface": "{source interface name default}", "hosts": ["{IP_addr}"] }

where:

Element	Description
group_name	The name of the RADIUS server group. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 127 characters)
vrf_name	The VRF instance for the RADIUS server group. Valid value: <ul style="list-style-type: none">● <i>VRF instance name</i>
source_interface	The name of the RADIUS group source interface. Valid value: <ul style="list-style-type: none">● <i>interface name</i>● <i>default</i> Note: If the variable is set to <i>default</i> , then it will reset to <i>not configured</i> .
hosts	The list of servers members of the RADIUS server group.
IP_addr	The IP address of the RADIUS server to be added to the group. Valid value: <ul style="list-style-type: none">● <i>IP address</i>

Response

Response Body (JSON)	<pre>[{ "group_name": "{group_name}", "vrf_name": "{vrf_name}", "source_interface": "{source interface name not configured}", "hosts": [{ "IP_addr": "{IP_addr}", "retransmit": {retransmit}, "timeout": {timeout}, "key": "{configured not configured}", "auth-port": {auth-port}, "acct-port": {acct-port} }] }]</pre>
----------------------	--

where:

Element	Description
<code>group_name</code>	The name of the RADIUS server group. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 127 characters)
<code>vrf_name</code>	The VRF instance for the RADIUS server group. Valid value: <ul style="list-style-type: none">● <i>VRF instance name</i>
<code>source_interface</code>	The name of the RADIUS group source interface. Valid values: <ul style="list-style-type: none">● <i>interface name</i>● <i>not configured</i>
<code>hosts</code>	The list of servers members of the RADIUS server group.
<code>IP_addr</code>	The IP address of the RADIUS server. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
<code>retransmit</code>	The number of retries the switch will make to establish a connection with a RADIUS server after the initial attempt failed. Valid value: <ul style="list-style-type: none">● <i>0-5</i>
<code>timeout</code>	The amount of time, in seconds, before a RADIUS server connection attempt is considered to have failed. Valid value: <ul style="list-style-type: none">● <i>1-60</i>

Element	Description
key	The status of the RADIUS server authentication key. Valid value: <ul style="list-style-type: none">● <i>configured</i>● <i>not configured</i>
auth-port	The TCP port used for RADIUS server authentication. Valid value: <ul style="list-style-type: none">● <i>0-65535</i>
acct-port	The TCP port used for RADIUS server accounting. Valid value: <ul style="list-style-type: none">● <i>0-65535</i>

Delete RADIUS Server Group

This command removes a configured RADIUS server group.

Request

Method Type	DELETE
Request URI	/nos/api/cfg/radius/groups/{group_name}
Request Body (JSON)	

where:

Element	Description
<i>group_name</i>	The name of the RADIUS server group. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 127characters)

Security Mode

The following security mode URI is available:

- /nos/api/cfg/secmode GET, PUT

The following security mode commands are available:

- Get Security Mode Configuration
 - Update Security Mode Configuration

Get Security Mode Configuration

This command returns the current security mode configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/secmode
Request Body (JSON)	

Response

Response Body (JSON)	{ "current":"{legacy_mode secure_mode}", "setting":"{legacy_mode secure_mode}" }
----------------------	---

where:

Element	Description
current	The currently configured security mode. Valid values: <ul style="list-style-type: none">● <i>legacy_mode</i>● <i>secure_mode</i>
setting	The security mode that takes effect after switch reload. Valid values: <ul style="list-style-type: none">● <i>legacy_mode</i>● <i>secure_mode</i>

Update Security Mode Configuration

This command updates the security mode configuration.

Request

Method Type	PUT
Request URI	/nos/api/cfg/secmode
Request Body (JSON)	{ "setting": "{legacy_mode secure_mode}" }

where:

Element	Description
setting	The security mode that takes effect after switch reload. Valid values: <ul style="list-style-type: none">● <i>legacy_mode</i>● <i>secure_mode</i>

Response

Response Body (JSON)	{ "current": "{legacy_mode secure_mode}", "setting": "{legacy_mode secure_mode}" }
----------------------	---

where:

Element	Description
current	The currently configured security mode. Valid values: <ul style="list-style-type: none">● <i>legacy_mode</i>● <i>secure_mode</i>
setting	The security mode that takes effect after switch reload. Valid values: <ul style="list-style-type: none">● <i>legacy_mode</i>● <i>secure_mode</i>

sFlow

The following sFlow URIs are available:

- /nos/api/cfg/sflow GET, PUT
- /nos/api/cfg/sflow/interface/<if_name> PUT
- /nos/api/info/sflow/stats GET, DELETE

The following sFlow commands are available:

- [Get sFlow Configuration](#)
- [Update sFlow Global Configuration](#)
- [Update sFlow Interface Configuration](#)
- [Get sFlow Statistics](#)
- [Clear sFlow Statistics](#)

Get sFlow Configuration

This command returns the current sFlow configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/sflow
Request Body (JSON)	

Response

Response Body (JSON)	{ enabled: [enabled disabled], sampling-rate: <sampling_rate>, max-sampled-size: <sampled_size>, polling-interval: <polling_interval>, max-datatype-size: <datatype_size>, collector: { ip: <ip_addr>, port: <port>, vrf: <vrf> }, interfaces: [<if_name>, ...] }
----------------------	--

where:

Element	Description
enabled	The status of sFlow on the switch. Valid value: <ul style="list-style-type: none">● <i>enabled</i>● <i>disabled</i>
sampling-rate	The sFlow sampling rate, in packets per sample. Valid value: <ul style="list-style-type: none">● 4096-1000000000 Default value: 4096
max-sampled-size	The maximum sFlow sampling size of packets. Valid value: <ul style="list-style-type: none">● 64-256 Default value: 128

Element	Description
polling-interval	The sFlow polling interval, in seconds. Valid value: <ul style="list-style-type: none">● 0-86400 Note: Setting this variable to 0 disables sFlow polling.
max-datatype-size	The maximum sFlow datagram size. Valid value: <ul style="list-style-type: none">● 200-9000 Default value: 1500
collector	The sFlow collector configuration.
ip	The IP address of the sFlow server. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
port	The UDP port of the sFlow server. Valid value: <ul style="list-style-type: none">● 1-65535 Default value: 6343
vrf	The VRF instance used by the sFlow server. Valid value: <ul style="list-style-type: none">● <i>VRF instance name</i>
interfaces	The interfaces on which sFlow sampling is enabled. Valid value: <ul style="list-style-type: none">● <i>interface name</i> (for example, <i>Ethernet1/12</i>)

Update sFlow Global Configuration

This command updates the global sFlow configuration on the switch.

Request

Method Type	PUT
Request URI	/nos/api/cfg/sflow
Request Body (JSON)	{ enabled: [enabled disabled], sampling-rate: <sampling_rate>, max-sampled-size: <sampled_size>, polling-interval: <polling_interval>, max-datatype-size: <datagram_size>, collector: { ip: <ip_addr>, port: <port>, vrf: <vrf> }, } }

where:

Element	Description
enabled	The status of sFlow on the switch. Valid value: <ul style="list-style-type: none">● <i>enabled</i>● <i>disabled</i>
sampling-rate	The sFlow sampling rate, in packets per sample. Valid value: <ul style="list-style-type: none">● 4096-1000000000 Default value: 4096
max-sampled-size	The maximum sFlow sampling size of packets. Valid value: <ul style="list-style-type: none">● 64-256 Default value: 128
polling-interval	The sFlow polling interval, in seconds. Valid value: <ul style="list-style-type: none">● 0-86400 Note: Setting this variable to 0 disables sFlow polling.
max-datatype-size	The maximum sFlow datagram size. Valid value: <ul style="list-style-type: none">● 200-9000 Default value: 1500

Element	Description
collector	The sFlow collector configuration.
ip	The IP address of the sFlow server. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
port	The UDP port of the sFlow server. Valid value: <ul style="list-style-type: none">● <i>1-65535</i> Default value: <i>6343</i>
vrf	The VRF instance used by the sFlow server. Valid value: <ul style="list-style-type: none">● <i>VRF instance name</i>

Update sFlow Interface Configuration

This command updates the sFlow configuration for a specific switch interface.

Request

Method Type	GET
Request URI	/nos/api/cfg/sflow/interface/<if_name>
Request Body (JSON)	{ enabled: [enabled disabled] }

where:

Element	Description
<i>if_name</i>	The name of the switch interface. Valid value: <ul style="list-style-type: none">• <i>interface name</i> (for example, <i>Ethernet1/12</i>)
enabled	The status of sFlow on the switch. Valid value: <ul style="list-style-type: none">• <i>enabled</i>• <i>disabled</i>

Get sFlow Statistics

This command returns sFlow statistics.

Request

Method Type	GET
Request URI	/nos/api/info/sflow/stats
Request Body (JSON)	

Response

Response Body (JSON)	{ processed_samples: <processed_samples>, dropped_samples: <dropped_samples>, sent_datagrams: <sent_datagrams>, dropped_datagrams: <dropped_datagrams> }
----------------------	---

where:

Element	Description
processed_samples	The number of processed sFlow samples. Valid value: <ul style="list-style-type: none">● <i>integer</i>
dropped_samples	The number of dropped sFlow samples. Valid value: <ul style="list-style-type: none">● <i>integer</i>
sent_datagrams	The number of sent sFlow datagrams. Valid value: <ul style="list-style-type: none">● <i>integer</i>
dropped_datagrams	The number of dropped sFlow datagrams. Valid value: <ul style="list-style-type: none">● <i>integer</i>

Clear sFlow Statistics

This command resets sFlow statistics.

Request

Method Type	DELETE
Request URI	/nos/api/info/sflow/stats/clear
Request Body (JSON)	

SNMP

The following SNMP-related URIs are available:

- /nos/api/cfg/snmp/hosuser GET, PUT, DELETE
 - /nos/api/hostraphost GET, PUT, DELETE

Note: These URIs and commands are necessary for XClarity support.

The following SNMP commands are available:

- Get the SNMPv3 Account for XClarity
 - Set the SNMPv3 Account for XClarity
 - Delete the SNMPv3 Account for XClarity
 - Get the SNMPv3 Trap Host IP Address for XClarity
 - Set the SNMPv3 Trap Host IP Address for XClarity
 - Delete the SNMPv3 Trap Host IP Address for XClarity

Get the SNMPv3 Account for XClarity

Get the special SNMPv3 user account for XClarity.

Request

Method Type	GET
Request URI	/nos/api/cfg/snmp/hosuser
Request Body (JSON)	

Response

Response Body (JSON)	{ "user_name": "<user_name>", "group_name": "<group_name>", "auth_type": "<auth_type>", "auth_passwd": "<password>", "priv_type": "<priv_type>", "priv_passwd": "<password>" "xclarity_id": "<identifier>" }
-------------------------	--

where:

Element	Description
<i>user_name</i>	User name; a text string from 5-32 characters long.
<i>group_name</i>	Group name; one of "network_operator," "network_admin". Default value: network-operator.
<i>auth_type</i>	Authentication type; one of "invalid", "md5", "sha".
<i>auth_passwd</i>	Authentication password; a string from 8-32 characters long.
<i>priv_type</i>	Privilege type; one of "invalid", "des", "aes".
<i>priv_passwd</i>	Privilege password; a string from 8-32 characters long.
<i>xclarity_id</i>	XClarity instance identifier; a string.

Note: If the user account does not exist, the request will return the error message "404 Resource not available: Snmp Hos User instance not present in DUT".

Set the SNMPv3 Account for XClarity

Set the special SNMPv3 user account for XClarity.

Note: This account is only for XClarity support and differs from SNMPv3 user accounts in the following ways:

- It cannot be set from the command line interface.
- It does not appear in any command.
- This information must be included in any tech support dump.

Request

Method Type	PUT
Request URI	/nos/api/cfg/snmp/hosuser
Request Body (JSON)	{ "user_name": "<user_name>", "group_name": "<group_name>", "auth_type": "<auth_type>", "auth_passwd": "<password>", "priv_type": "<priv_type>", "priv_passwd": "<password>" "xclarity_id": "<identifier>" }

where:

Element	Description
<i>user_name</i>	User name; a text string from 5-32 characters long.
<i>group_name</i>	Group name; one of "network_operator," "network_admin". Default value: network-operator.
<i>auth_type</i>	Authentication type; one of "invalid", "md5", "sha".
<i>auth_passwd</i>	Authentication password; a string from 8-32 characters long.
<i>priv_type</i>	Privilege type; one of "invalid", "des", "aes".
<i>priv_passwd</i>	Privilege password; a string from 8-32 characters long.
<i>xclarity_id</i>	XClarity instance identifier; a text string from 4-32 characters long.

Response

Response Body (JSON)	{ "username": "<username>", "group_name": "<group_name>", "auth_type": "<auth_type>", "auth_passwd": "<password>", "priv_type": "<priv_type>", "priv_passwd": "<password>" "xclarity_id": "<identifier>" }
----------------------	--

where:

Element	Description
<i>username</i>	User name; a text string from 5-32 characters long.
<i>group_name</i>	Group name; one of "network_operator," "network_admin". Default value: network-operator.
<i>auth_type</i>	Authentication type; one of "invalid", "md5", "sha".
<i>auth_passwd</i>	Encrypted text string of authentication password; a string from 8-32 characters long.
<i>priv_type</i>	Privilege type; one of "invalid", "des", "aes".
<i>priv_passwd</i>	Encrypted text string of privilege password; a string from 8-32 characters long.
<i>xclarity_id</i>	XClarity instance identifier; a text string from 4-32 characters long.

Delete the SNMPv3 Account for XClarity

Delete the special SNMPv3 user account for XClarity.

Request

Method Type	DELETE
Request URI	/nos/api/cfg/snmp/hosuser
Request Body (JSON)	

Response

True if the operation succeeded; otherwise False.

Get the SNMPv3 Trap Host IP Address for XClarity

Get the IP address of the special SNMPv3 trap host for XClarity.

Request

Method Type	GET
Request URI	/nos/api/cfg/snmp/hostraphost
Request Body (JSON)	

Response

Response Body (JSON)	{ "host_name": "<host_name>", "security_level": "<security_level>", "username": "<username>", "message_type": "<priv_type>", "port": "<port>" }
-------------------------	---

where:

Element	Description
<i>host_name</i>	Trap host name; a valid IPv4 or IPv6 address.
<i>security_level</i>	Security level; one of "auth", "authpriv", "noauth".
<i>username</i>	Username; a text string 5-32 characters long.
<i>message_type</i>	Message type; one of "trap", "inform". Default value: trap.
<i>port</i>	Host UDP port; an integer from 1-65535. Default value: 162.

Note: If the user name does not exist, the request will return the error message "404 Resource not available: Snmp Hos User instance not present in DUT".

Set the SNMPv3 Trap Host IP Address for XClarity

Set the IP address of the special SNMPv3 trap host for XClarity.

Note: The trap destination IP address is only for XClarity and differs from a standard SNMPv3 trap host in the following ways:

- It cannot be set from the command line interface.
- It does not appear in any command.
- This information must be included in any tech support dump.

Request

Method Type	PUT
Request URI	/nos/api/cfg/snmp/hostraphost
Request Body (JSON)	{ "host_name": "<host_name>", "security_level": "<security_level>", "username": "<username>", "message_type": " "<priv_type>", "port": "<port>" }

where:

Element	Description
<i>host_name</i>	Trap host name; a valid IPv4 or IPv6 address.
<i>security_level</i>	Security level; one of "auth", "authpriv", "noauth".
<i>username</i>	Username; a text string 5-32 characters long.
<i>message_type</i>	(Optional) Message type; one of "trap", "inform". Default value: trap.
<i>port</i>	(Optional) Host UDP port; an integer from 1-65535. Default value: 162.

Response

Response Body (JSON)	{ "host_name": "<host_name>", "security_level": "<security_level>", "username": "<username>", "message_type": " "<priv_type>", "port": "<port>" }
-------------------------	---

where:

Element	Description
<i>host_name</i>	Trap host name; a valid IPv4 or IPv6 address.
<i>security_level</i>	Security level; one of "auth", "authpriv", "noauth".

Element	Description
<i>username</i>	Username; a text string 5-32 characters long.
<i>message_type</i>	Message type; one of "trap", "inform". Default value: trap.
<i>port</i>	Host UDP port; an integer from 1-65535. Default value: 162.

Delete the SNMPv3 Trap Host IP Address for XClarity

Delete the special SNMPv3 trap host IP address for XClarity.

Request

Method Type	DELETE
Request URI	/nos/api/cfg/snmp/hostraphost
Request Body (JSON)	

Response

True if the operation succeeded; otherwise False.

Startup Information

The following startup information URIs are available:

- /nos/api/startup GET, PUT
- /nos/api/startup/ztp GET, PUT
- /nos/api/startup/software GET, PUT

The following interface commands are available:

- [Get System Startup Information](#)
- [Put System ZTP Interface](#)
- [Get System ZTP Setting](#)
- [Put System Startup Image](#)
- [Get System Startup Image](#)

Get System Startup Information

Get system boot information.

Note: This is required for XClarity support.

Request

Method Type	GET
Request URI	/nos/api/startup
Request Body (JSON)	

Response

Response Body (JSON)	{ "ztp" : "Forcedly Enabled", "active image" : "version 0.0.0.0, downloaded 19:20:29 UTC Tue Feb 16 2016", "standby image" : "version 0.0.0.0, downloaded 13:20:02 UTC Sun Feb 28 2016", "Uboot" : "version 0.0.0.0, downloaded 13:20:04 UTC Sun Feb 28 2016", "ONIE" : "empty", "boot software" : "active", "scheduled reboot": "none", "port mode" : "default" }
-------------------------	---

where:

Element	Description
ztp	Current zero touch provisioning setting.
active image	Active image information.
standby image	Standby image information.
Uboot	Uboot image information.
ONIE	ONIE image information.
boot software	Next boot image setting.
scheduled reboot	Scheduled reboot setting.
port mode	Current port mode.

Put System ZTP Interface

Update the system Zero Touch Provisioning setting.

Request

Method Type	PUT
Request URI	/nos/api/startup/ztp/<enable>
Request Body (JSON)	{ "ztp" : "<setting>" }

where:

Element	Description
<i>setting</i>	The ZTP provisioning setting; one of "Enable", "Forcedly Enabled", "Forcedly Disabled".

Response

Response Body (JSON)	{ "ztp" : "<setting>" }
-------------------------	-------------------------------

where:

Element	Description
<i>setting</i>	Current ZTP provisioning setting.

Get System ZTP Setting

Get the current system Zero Touch Provisioning setting.

Request

Method Type	GET
Request URI	/nos/api/startup/ztp
Request Body (JSON)	

Response

Response Body (JSON)	{ "ztp" : "<setting>" }
-------------------------	-------------------------------

where:

Element	Description
<i>setting</i>	Current ZTP provisioning setting.

Put System Startup Image

Update the system startup image.

Note: This request is required for XClarity support.

Request

Method Type	PUT
Request URI	/nos/api/startup/software
Request Body (JSON)	{ "boot software" : "<setting>" }

where:

Element	Description
<i>setting</i>	Next startup image setting; one of "active" or "standby".

Response

Response Body (JSON)	{ "boot software" : "<setting>" }
-------------------------	---

where:

Element	Description
<i>setting</i>	Next startup image setting; one of "active" or "standby".

Get System Startup Image

Get the system boot image.

Note: This request is required for XClarity support.

Request

Method Type	GET
Request URI	/nos/api/startup/software
Request Body (JSON)	

Response

Response Body (JSON)	{ "boot software" : "<setting>" }
-------------------------	---

where:

Element	Description
<i>setting</i>	Next startup image setting; one of "active" or "standby".

STP

The following STP URIs are available:

- /nos/api/cfg/stp_interface GET
- /nos/api/cfg/stp_interface/<if_name> GET, PUT
- /nos/api/cfg/stp/vlan/<vid> GET, PUT
- /nos/api/cfg/stp/interface/<if_name> GET, PUT
- /nos/api/cfg/stp/interface/<if_name>/vlan/<vlan_id> GET, PUT

The following STP interface property commands are available:

- [Get STP Properties for All Interfaces](#)
- [Get STP Interface Properties](#)
- [Update STP Interface Properties](#)
- [Get STP Properties Per VLAN](#)
- [Set STP Properties Per VLAN](#)
- [Get STP Interface Properties](#)
- [Update STP Interface Properties](#)
- [Get STP Interface VLAN Properties](#)
- [Update STP Interface VLAN Properties](#)

Get STP Properties for All Interfaces

Get STP properties of all interfaces. These properties are supported by all STP modes.

Request

Method Type	GET
Request URI	/nos/api/cfg/stp/interface
Request Body (JSON)	

Response

Response Body (JSON)	{ "if_name": "<if_name>", "edge_port": "<edge_port>", "bpdu_guard": "<bpdu_guard>", "loop_guard": "<loop_guard>", "root_guard": "<root_guard>" }
-------------------------	--

where:

Element	Description
<i>if_name</i>	The IP interface name; a string. Note: The interface must exist.
<i>edge_port</i>	Whether the interface is configured as an edge port, which allows the port to automatically transition to the STP forwarding state; one of yes, no. Default value: yes.
<i>bpdu_guard</i>	(Optional) Whether BPDU guard is enabled on a port, which automatically shuts down the interface upon receipt of a BPDU; one of enable, disable. Default value: disable.
<i>loop_guard</i>	(Optional) Whether loop guard is enabled on a port for additional checks for preventing STP looping; one of enable, disable. Default value: disable.
<i>root_guard</i>	(Optional) Whether guard mode is set to root guard on interface.

Get STP Interface Properties

Get STP properties of one interface. These properties are supported by all STP modes.

Request

Method Type	GET
Request URI	/nos/api/cfg/stp/interface/<if_name>
Request Body (JSON)	

Response

Response Body (JSON)	{ "if_name": "<if_name>", "edge_port": "<edge_port>", "bpdu_guard": "<bpdu_guard>", "loop_guard": "<loop_guard>", "root_guard": "<root_guard>" }
-------------------------	--

where:

Element	Description
<i>if_name</i>	The IP interface name; a string. Note: The interface must exist.
<i>edge_port</i>	Whether the interface is configured as an edge port, which allows the port to automatically transition to the STP forwarding state; one of yes, no. Default value: yes.
<i>bpdu_guard</i>	(Optional) Whether BPDU guard is enabled on a port, which automatically shuts down the interface upon receipt of a BPDU; one of enable, disable. Default value: disable.
<i>loop_guard</i>	(Optional) Whether loop guard is enabled on a port for additional checks for preventing STP looping; one of enable, disable. Default value: disable.
<i>root_guard</i>	(Optional) Whether guard mode is set to root guard on interface.

Update STP Interface Properties

Update STP properties of one interface. These properties are supported by all STP modes.

Note: If an element is not specified in a PUT request, no update for that element will be performed.

Request

Method Type	PUT
Request URI	/nos/api/cfg/stp/interface/<if_name>
Request Body (JSON)	{ "if_name": "<if_name>", "edge_port": "<edge_port>", "bpdu_guard": "<bpdu_guard>", "loop_guard": "<loop_guard>", "root_guard": "<root_guard>" }

where:

Element	Description
<i>if_name</i>	The IP interface name; a string. Note: The interface must exist.
<i>edge_port</i>	Whether the interface is configured as an edge port, which allows the port to automatically transition to the STP forwarding state; one of yes, no. Default value: yes.
<i>bpdu_guard</i>	(Optional) Whether BPDU guard is enabled on a port, which automatically shuts down the interface upon receipt of a BPDU; one of enable, disable. Default value: disable.
<i>loop_guard</i>	(Optional) Whether loop guard is enabled on a port for additional checks for preventing STP looping; one of enable, disable. Default value: disable.
<i>root_guard</i>	(Optional) Whether guard mode is set to root guard on interface.

Response

Response Body (JSON)	{ "if_name": "<if_name>", "edge_port": "<edge_port>", "bpdu_guard": "<bpdu_guard>", "loop_guard": "<loop_guard>", "root_guard": "<root_guard>" }
----------------------	--

where:

Element	Description
<i>if_name</i>	The IP interface name; a string. Note: The interface must exist.
<i>edge_port</i>	Whether the interface is configured as an edge port, which allows the port to automatically transition to the STP forwarding state; one of yes, no. Default value: yes.
<i>bpdu_guard</i>	(Optional) Whether BPDU guard is enabled on a port, which automatically shuts down the interface upon receipt of a BPDU; one of enable, disable. Default value: disable.
<i>loop_guard</i>	(Optional) Whether loop guard is enabled on a port for additional checks for preventing STP looping; one of enable, disable. Default value: disable.
<i>root_guard</i>	(Optional) Whether guard mode is set to root guard on interface.

Get STP Properties Per VLAN

Get STP parameters for each VLAN.

Note: This is designed only for rapid Per VLAN Spanning Tree (PVST) mode.

Request

Method Type	GET
Request URI	/nos/api/cfg/stp/vlan/<vlan_ID>
Request Body (JSON)	

where:

Element	Description
<i>vlan_ID</i>	VLAN ID; an integer from 2-3999.

Response

Response Body (JSON)	{ "forward-time": "<forward-time>", "hello-time": "<hello-time>", "max-age" : "<max-age>", "priority" : "<priority>" }
-------------------------	---

where:

Element	Description
<i>forward-time</i>	The forward delay for the spanning tree; an integer from 4-30.
<i>hello-time</i>	The hello interval for the spanning tree; an integer from 1-10.
<i>max-age</i>	The maximum age interval for the spanning tree; an integer from 6-40.
<i>priority</i>	The bridge priority for the spanning tree; an integer from 0-61440.

Set STP Properties Per VLAN

Set STP parameters for each VLAN.

Note: This is designed only for rapid Per VLAN Spanning Tree (PVST) mode.

Request

Method Type	PUT
Request URI	/nos/api/cfg/stp/vlan/<vlan_ID>
Request Body (JSON)	{ "forward-time": "<forward-time>", "hello-time": "<hello-time>", "max-age" : "<max-age>", "priority" : "<priority>" }

where:

Element	Description
<i>vlan_ID</i>	VLAN number.; an integer from 2-3999.
<i>forward-time</i>	The forward delay for the spanning tree; an integer from 4-30.
<i>hello-time</i>	The hello interval for the spanning tree; an integer from 1-10.
<i>max-age</i>	The maximum age interval for the spanning tree; an integer from 6-40.
<i>priority</i>	The bridge priority for the spanning tree; an integer from 0-61440.

Response

Response Body (JSON)	{ "forward-time": "<forward-time>", "hello-time": "<hello-time>", "max-age" : "<max-age>", "priority" : "<priority>" }
-------------------------	---

where:

Element	Description
<i>forward-time</i>	(Optional) The forward delay for the spanning tree; an integer from 4-30.
<i>hello-time</i>	(Optional) The hello interval for the spanning tree; an integer from 1-10.
<i>max-age</i>	(Optional) The maximum age interval for the spanning tree; an integer from 6-40.
<i>priority</i>	(Optional) The bridge priority for the spanning tree; an integer from 0-61440.

Get STP Interface Properties

Get the STP properties of the specified interface.

Note: These properties are supported by all STP modes.

Request

Method Type	GET
Request URI	/nos/api/cfg/stp/interface/<if_name>
Request Body (JSON)	

where:

Element	Description
<i>if_name</i>	The IP interface name; a string. Note: The interface must exist.

Response

Response Body (JSON)	{ "if_name": "<if_name>", "edge_port": "<edge_port>", "bpdu_guard": "<bpdu_guard>", "loop_guard": "<loop_guard>", "root_guard": "<root_guard>" }
-------------------------	--

where:

Element	Description
<i>if_name</i>	The IP interface name; a string. Note: The interface must exist.
<i>edge_port</i>	Whether the interface is configured as an edge port, which allows the port to automatically transition to the STP forwarding state; one of yes, no. Default value: yes.
<i>bpdu_guard</i>	(Optional) Whether BPDU guard is enabled on a port, which automatically shuts down the interface upon receipt of a BPDU; one of enable, disable. Default value: disable.
<i>loop_guard</i>	(Optional) Whether loop guard is enabled on a port for additional checks for preventing STP looping; one of enable, disable. Default value: disable.
<i>root_guard</i>	(Optional) Whether guard mode is set to root guard on interface.

Update STP Interface Properties

Update the STP properties of the specified interface.

Note: These properties are supported by all STP modes.

Request

Method Type	PUT
Request URI	/nos/api/cfg/stp/interface/<if_name>
Request Body (JSON)	{ "if_name": "<if_name>", "edge_port": "<edge_port>", "bpdu_guard": "<bpdu_guard>", "loop_guard": "<loop_guard>", "root_guard": "<root_guard>" }

where:

Element	Description
<i>if_name</i>	The IP interface name; a string. Note: The interface must exist.
<i>edge_port</i>	Whether the interface is configured as an edge port, which allows the port to automatically transition to the STP forwarding state; one of yes, no. Default value: yes.
<i>bpdu_guard</i>	(Optional) Whether BPDU guard is enabled on a port, which automatically shuts down the interface upon receipt of a BPDU; one of enable, disable. Default value: disable.
<i>loop_guard</i>	(Optional) Whether loop guard is enabled on a port for additional checks for preventing STP looping; one of enable, disable. Default value: disable.
<i>root_guard</i>	(Optional) Whether guard mode is set to root guard on interface.

Get STP Interface VLAN Properties

Get the STP interface VLAN properties of the specified interface and VLAN.

Note: This is designed only for rapid Per VLAN Spanning Tree (PVST) mode.

Request

Method Type	GET
Request URI	/nos/api/cfg/stp/interface/<if_name>/vlan/<vlan_id>
Request Body (JSON)	

where:

Element	Description
<i>if_name</i>	The IP interface name; a string. Note: The interface must exist.
<i>vlan_ID</i>	VLAN ID; an integer from 2-3999.

Response

Response Body (JSON)	{ "cost": "<cost>", "priority": "<priority>", }
-------------------------	--

where:

Element	Description
<i>cost</i>	The interface's spanning-tree port path cost; one of <code>auto</code> (based on port speed), an integer from 1-200000000.
<i>priority</i>	The interface's spanning-tree port path priority, in increments of 32; an integer from 0-224 that is a multiple of 32. Default value: 128.

Update STP Interface VLAN Properties

Update the STP interface VLAN properties of the specified interface and VLAN.

Note: This is designed only for rapid Per VLAN Spanning Tree (PVST) mode.

Request

Method Type	PUT
Request URI	/nos/api/cfg/stp/interface/<if_name>/vlan/<vlan_id>
Request Body (JSON)	{ "cost": "<cost>", "priority": "<priority>", }

where:

Element	Description
<i>if_name</i>	The IP interface name; a string. Note: The interface must exist.
<i>vlan_ID</i>	VLAN ID; an integer from 2-3999.
<i>cost</i>	The interface's spanning-tree port path cost; one of auto (based on port speed), an integer from 1-200000000.
<i>priority</i>	The interface's spanning-tree port path priority, in increments of 32; an integer from 0-224 that is a multiple of 32. Default value: 128.

Response

Response Body (JSON)	{ "if_name": "<if_name>", "edge_port": "<edge_port>", "bpdu_guard": "<bpdu_guard>", }
-------------------------	---

where:

Element	Description
<i>if_name</i>	The IP interface name; a string. Note: The interface must exist.
<i>edge_port</i>	Whether the interface is configured as an edge port, which allows the port to automatically transition to the STP forwarding state; one of yes, no. Default value: yes.
<i>bpdu_guard</i>	(Optional) Whether BPDU guard is enabled on a port, which automatically shuts down the interface upon receipt of a BPDU; one of enable, disable. Default value: disable.

System

The following system URI is available:

- /nos/api/system GET

Get System Properties

Gets basic properties of the system. All properties are version-independent.

Request

Request URI	/nos/api/system
Request Body (JSON)	

Response

```
{  
  "switch_type": "{switch_type}",  
  "fw_version": "{version}"  
}
```

where:

Element	Description
switch_type	Switch platform type.
fw_version	The version number of the firmware running on the switch.

System Configuration

The following system configuration-related URIs are available:

- /nos/api/cfg/hostname GET, PUT
 - /nos/api/cfg/clock GET, PUT
 - /nos/api/cfg/clock/format PUT
 - /nos/api/cfg/clock/protocol PUT
 - /nos/api/cfg/clock/timezone PUT
 - /nos/api/cfg/clock/summertime PUT
 - /nos/api/cfg/syscontact GET, PUT
 - /nos/api/cfg/sysdescr GET, PUT
 - /nos/api/cfg/rack_prop GET, PUT

Note: These requests are required for XClarity support.

The following system configuration commands are available:

- Get Hostname
 - Set Hostname
 - Get Clock Date
 - Set Clock Format
 - Set Clock Protocol
 - Set Clock Timezone
 - Set Clock Summer Time
 - Get Device Contact
 - Update Device Contact
 - Get Device Description
 - Update Device Description
 - Get Rack Properties
 - Update Rack Properties

Get Hostname

Get the hostname of the system.

Request

Method Type	GET
Request URI	/nos/api/cfg/hostname
Request Body (JSON)	

Response

Response Body (JSON)	{ "hostname": "<hostname>", }
-------------------------	-------------------------------------

where:

Element	Description
<i>hostname</i>	The hostname of the system; a string from 1-64 characters long.

Set Hostname

Set the hostname of the system.

Request

Method Type	PUT
Request URI	/nos/api/cfg/hostname
Request Body (JSON)	

Response

Response Body (JSON)	{ "hostname": "<hostname>", }
-------------------------	-------------------------------------

where:

Element	Description
<i>hostname</i>	The hostname of the system; a string from 1-64 characters long.

Get Clock Date

Gets the system date.

Request

Method Type	GET
Request URI	/nos/api/cfg/clock
Request Body (JSON)	

Response

Response Body (JSON)	{ "date": "<date>", }
-------------------------	-----------------------------

where:

Element	Description
<i>date</i>	System date in the format: HH:MM:SS xM ZZZ Wkd Mon Dy YEAR where: <ul style="list-style-type: none">• HH - hour• MM - minutes• SS - seconds• xM - one of "AM", "PM"• ZZZ - name of the time zone• Wkd - three-letter weekday abbreviation• Mon - three-letter month abbreviation• Dy - one or two-digit day• YEAR - four-digit year For example: 10:55:58 AM UTC Mon Jul 4 2016

Set Clock Date

Sets the system date and time.

Request

Method Type	PUT
Request URI	/nos/api/cfg/clock
Request Body (JSON)	{ "time": "<HH:MM:SS>" , "day": <day>, "month": <month> , "year": <year> }

where:

Element	Description
time	System time in the format "HH:MM:SS".
day	The day of the month; an integer from 1-31.
month	The month; one of the following case-insensitive strings: <ul style="list-style-type: none">● January● February● March● April● May● June● July● August● September● October● November● December
year	The year; an integer from 2000-2030.

Response

Response Body (JSON)	{ "date": "<date>", }
-------------------------	-----------------------------

where:

Element	Description
<i>date</i>	<p>System date in the format: HH:MM:SS xM ZZZ Wkd Mon Dy YEAR</p> <p>where:</p> <ul style="list-style-type: none">● HH - hour● MM - minutes● SS - seconds● xM - one of "AM", "PM"● ZZZ - name of the time zone● Wkd - three-letter weekday abbreviation● Mon - three-letter month abbreviation● Dy - one or two-digit day● YEAR - four-digit year <p>For example:</p> <p>10:55:58 AM UTC Mon Jul 4 2016</p>

Set Clock Format

Sets the system clock format to 12 hour or 24 hour format.

Request

Method Type	PUT
Request URI	/nos/api/cfg/clock/format/
Request Body (JSON)	{ "format": <format>, }

where:

Element	Description
<i>format</i>	System clock format; one of: <ul style="list-style-type: none">● 12 (12 hour format)● 24 (24 hour format)

Response

Response Body (JSON)	{ "format": <format>, }
-------------------------	-------------------------------

where:

Element	Description
<i>format</i>	System clock format; one of: <ul style="list-style-type: none">● 12 (12 hour format)● 24 (24 hour format)

Set Clock Protocol

Sets the clock protocol to either manual or Network Time Protocol (NTP).

Request

Method Type	PUT
Request URI	/nos/api/cfg/clock/protocol/
Request Body (JSON)	{ "protocol": "<protocol>", }

where:

Element	Description
protocol	System clock protocol; one of: <ul style="list-style-type: none">● none - the clock is manually configured● ntp - the clock is configured through NTP Default value: "ntp".

Response

Response Body (JSON)	{ "protocol": "<protocol>", }
-------------------------	-------------------------------------

where:

Element	Description
protocol	System clock protocol; one of: <ul style="list-style-type: none">● none - the clock is manually configured● ntp - the clock is configured through NTP Default value: "ntp".

Set Clock Timezone

Set the clock time zone for the switch.

Request

Method Type	PUT
Request URI	/nos/api/cfg/clock/timezone
Request Body (JSON)	{ "timezone": "<timezone>", "offsethour": "<offsethour>", "offsetmin": "<lag_mode>", }

where:

Element	Description
<i>timezone</i>	One to five letter string denoting the local system time zone.
<i>offsethour</i>	Hours offset from UTC; an integer from -23 through 23.
<i>offsetmin</i>	Minutes offset from UTC; an integer from 0-59.

Response

Response Body (JSON)	{ "date": "<date>", }
-------------------------	-----------------------------

where:

Element	Description
<i>date</i>	System date in the format: HH:MM:SS xM ZZZ Wkd Mon Dy YEAR where: <ul style="list-style-type: none">● HH - hour● MM - minutes● SS - seconds● xM - one of "AM", "PM"● ZZZ - name of the time zone● Wkd - three-letter weekday abbreviation● Mon - three-letter month abbreviation● Dy - one or two-digit day● YEAR - four-digit year For example: 10:55:58 AM UTC Mon Jul 4 2016

Set Clock Summer Time

Set the transition to and from a summer time zone adjustment.

Request

Method Type	PUT
Request URI	/nos/api/cfg/clock/summertime
Request Body (JSON)	{ "timezone": <time_zone>, "startweek": <start_week>, "startweekday": <start_weekday>, "startmonth": <start_month>, "starttime" : "<HH:MM>", "endweek" : <end_week>, "endweekday": <end_weekday>, "endmonth" : <end_month>, "endtime" : "<HH:MM>", "offsetmin" : <minutes> }

where:

Element	Description
timezone	Local time zone of the system; a three to five character string such as "PST", "MST", "CST", or "EST".
startweek	Week number in the month in which to start Daylight Saving time; an integer from 1-5 (first week=1, last week=5).
startweekday	Weekday on which to start DST; one of the following case-insensitive strings: <ul style="list-style-type: none">● monday● tuesday● wednesday● thursday● friday● saturday● sunday

Element	Description
startmonth	Month to start DST; one of the following case-insensitive strings: <ul style="list-style-type: none"> ● january ● february ● march ● april ● may ● june ● july ● august ● september ● october ● november ● december
starttime	Time to start DST; a string in the format "HH:MM".
endweek	Week number in which to end DST; an integer from 1-5 (first week=1, last week=5).
endweekday	Weekday on which to end DST; one of the following case-insensitive strings: <ul style="list-style-type: none"> ● monday ● tuesday ● wednesday ● thursday ● friday ● saturday ● sunday
endmonth	Month in which DST ends; one of the following case-insensitive strings: <ul style="list-style-type: none"> ● january ● february ● march ● april ● may ● june ● july ● august ● september ● october ● november ● december
endtime	Time to end DST; a string in the format "HH:MM"
offsetmin	Offset to add, in minutes; an integer from 1-1440.

Response

Response Body (JSON)	{ "date": "<date>", }
-------------------------	-----------------------------

where:

Element	Description
<i>date</i>	<p>System date in the format: HH:MM:SS xM ZZZ Wkd Mon Dy YEAR</p> <p>where:</p> <ul style="list-style-type: none">• HH - hour• MM - minutes• SS - seconds• xM - one of "AM", "PM"• ZZZ - name of the time zone• Wkd - three-letter weekday abbreviation• Mon - three-letter month abbreviation• Dy - one or two-digit day• YEAR - four-digit year <p>For example:</p> <p>10:55:58 AM UTC Mon Jul 4 2016</p>

Get Device Contact

Get the device contact.

Request

Method Type	GET
Request URI	/nos/api/cfg/contact
Request Body (JSON)	{ "contact": <contact>, }

where:

Element	Description
<i>contact</i>	Device contact; a string up to 256 characters long.

Response

Response Body (JSON)	{ "contact": <contact>, }
-------------------------	---------------------------------

where:

Element	Description
<i>contact</i>	Device contact; a string up to 256 characters long.

Update Device Contact

Update the device contact.

Request

Method Type	PUT
Request URI	/nos/api/cfg/contact
Request Body (JSON)	{ "contact": <contact>, }

where:

Element	Description
<i>contact</i>	Device contact; a string up to 256 characters long.

Response

Response Body (JSON)	{ "contact": <contact>, }
-------------------------	---------------------------------

where:

Element	Description
<i>contact</i>	Device contact; a string up to 256 characters long.

Get Device Description

Get the device description.

Request

Method Type	GET
Request URI	/nos/api/cfg/descr
Request Body (JSON)	{ "descr": <descr>, }

where:

Element	Description
<i>descr</i>	Device description; a string up to 256 characters long.

Response

Response Body (JSON)	{ "descr": <descr>, }
-------------------------	-----------------------------

where:

Element	Description
<i>descr</i>	Device description; a string up to 256 characters long.

Update Device Description

Update the device description.

Request

Method Type	PUT
Request URI	/nos/api/cfg/descr
Request Body (JSON)	{ "descr": <descr>, }

where:

Element	Description
<i>descr</i>	Device description; a string up to 256 characters long.

Response

Response Body (JSON)	{ "descr": <descr>, }
-------------------------	-----------------------------

where:

Element	Description
<i>descr</i>	Device description; a string up to 256 characters long.

Get Rack Properties

Get the rack properties for the switch.

Request

Method Type	GET
Request URI	/nos/api/cfg/rack_prop
Request Body (JSON)	

Response

Response Body (JSON)	{ "location": "<location>", "room": "<room>", "rack": "<rack>", "lru": "<lru>" }
-------------------------	---

where:

Element	Description
<i>location</i>	Device location; a string up to 256 characters long.
<i>room</i>	Device room ID; a string up to 256 characters long.
<i>rack</i>	Device Rack; a string up to 256 characters long.
<i>lru</i>	Device lowest rack unit; a string up to 256 characters long.

Update Rack Properties

Update the rack properties for the switch.

Request

Method Type	PUT
Request URI	/nos/api/cfg/rack_prop
Request Body (JSON)	{ "location": "<location>", "room": "<room>", "rack": "<rack>", "lru": "<lru>" }

where:

Element	Description
<i>location</i>	(Optional) Device location; a string up to 256 characters long.
<i>room</i>	(Optional) Device room ID; a string up to 256 characters long.
<i>rack</i>	(Optional) Device Rack; a string up to 256 characters long.
<i>lru</i>	(Optional) Device lowest rack unit; a string up to 256 characters long.

Response

Response Body (JSON)	{ "location": "<location>", "room": "<room>", "rack": "<rack>", "lru": "<lru>" }
-------------------------	---

where:

Element	Description
<i>location</i>	Device location; a string up to 256 characters long.
<i>room</i>	Device room ID; a string up to 256 characters long.
<i>rack</i>	Device Rack; a string up to 256 characters long.
<i>lru</i>	Device lowest rack unit; a string up to 256 characters long.

System Information

The following system information URIs are available:

- /nos/api/sysinfo GET
- /nos/api/sysinfo/<*fans*> GET
- /nos/api/sysinfo/<*power*> GET
- /nos/api/sysinfo/<*temperature*> GET
- /nos/api/sysinfo/<*inventory*> GET
- /nos/api/sysinfo/<*globalhealthstatus*> GET
- /nos/api/sysinfo/resources GET

The following system information commands are available:

- [Get All System Information](#)
- [Get System Fan Information](#)
- [Get System Power Information](#)
- [Get System Temperature Information](#)
- [Get System Inventory](#)
- [Get System Serial Number](#)
- [Get Panic Dump Information](#)
- [Get Global Health Status](#)
- [Get System Resource Statistics](#)

Get All System Information

Gets information about the system hardware.

Request

Request URI	/nos/api/sysinfo
Request Body (JSON)	

Response

Response Body (JSON)	{ "Fans": { "Fan 1": { "Module" : "1" "Air-flow" : "Front-to-Back", "Speed-percent" : "0", "Speed-rpm" : "4205" }, "Fan 2": { "Module" : "1" "Air-flow" : "Front-to-Back", "Speed-percent" : "24", "Speed-rpm" : "4402" } }, }
----------------------	--

```

"Power":
{
    "power1":
    {
        "Name" : "Power Supply 1",
        "Manufacturer" : " DELTA",
        "Model" : "XXXXXXXXXX",
        "State" : "Normal ON"
    },
    "power2":
    {
        "Name" : "Power Supply 2",
        "Manufacturer" : " DELTA",
        "Model" : "XXXXXXXXXX",
        "State" : "12V Output Fault"
    }
},
"Temperature" :
{
    "cpu":
    {
        "Temp" : "31",
        "State" : "OK"
    },
    "Ambient":
    {
        "Temp" : "30",
        "State" : "OK"
    },
    "Hot Spot" :
    {
        "Temp" : "46",
        "State": "OK"
    }
},
"Temperature threshold" :
{
    "System Warning" : 85,
    "System Shutdown" : 95,
    "System Set Point" : 70
},
},
"Inventory" :
{
    "Name" : "8272",
    "Description" : "G8272 (48x10GE + 6x40GE)",
    "Model" : "LENOVO G8272",
    "Manufacture Date" : "1452",
    "Serial Number" : "Y052MV4CT00J",
    "PCB Assembly" : "00CJ067",
    "Electronic Serial Number" : "MM01267",
    "Firmware Revision" : "0.0.0.0",
    "Software Revision" : "0.0.0.0",
    "Uuid" : "A48CDB33B600Y052MV4CT00J",
    "Last reset Reason" : "Reset by CLI reload
command",
    "Service Led" : "enabled"
}
}

```

	<pre> "Panic Dump": [{ "File 3" : { "Name" : "nsm.gz", "Date" : "2016-05-31 22:38:03" }, "File 2" : { "Name" : "hsl.gz", "Date" : "2016-05-31 22:38:10" }, "File 1" : { "Name" : "imish.gz", "Date" : "2016-05-31 22:38:34" } }] </pre>
--	---

where:

Element	Description
Fans	System fan information.
Powers	System power information.
Temperature	System temperature information.
Inventory	System inventory.
Panic Dump	Panic dump information.

Get System Fan Information

Gets information about the system fans.

Request

Request URI	/nos/api/sysinfo/fans
Request Body (JSON)	

Response

Response Body (JSON)	{ "Fan 1": { "Module" : "1" "Air-flow" : "Front-to-Back", "Speed-percent" : "0", "Speed-rpm" : "4205" }, "Fan 2": { "Module" : "1" "Air-flow" : "Front-to-Back", "Speed-percent" : "24", "Speed-rpm" : "4402" } }
----------------------	--

where:

Element	Description
Module	Module number.
Air-flow	Air flow type.
Speed-percent	Speed percentage.
Speed-rpm	Speed in RPM.

Get System Power Information

Gets information about the system power supplies.

Request

Request URI	/nos/api/sysinfo/power
Request Body (JSON)	

Response

Response Body (JSON)	{ "power1": { "Name" : "Power Supply 1" "Manufacturer" : " DELTA", "Model" : "XXXXXXXXXX", "State" : "Normal ON" }, "power2": { "Name" : "Power Supply 2" "Manufacturer" : " DELTA", "Model" : "XXXXXXXXXX", "State" : "12V Output Fault" } }
----------------------	--

where:

Element	Description
name	Power supply name.
manufacturer	Power supply manufacturer.
model	Power supply model.
state	Power supply state.

Get System Temperature Information

Gets information about the system temperature.

Request

Request URI	/nos/api/sysinfo/temperatures
Request Body (JSON)	

Response

Response Body (JSON)	{ "Cpu Local": { "Temp" : "31" "State" : "OK" }, "Ambient": { "Temp" : "30", "State" : "OK" }, "Hot Spot" : { "Temp" : "46", "State": "OK" } "Temperature threshold" : { "System Warning" : 85, "System Shutdown" : 95, "System Set Point" : 70 } }
----------------------	---

where:

Element	Description
temp	The temperature.
state	The state.
System warning	Temperature at which a system warning is issued.
System shutdown	The temperature at which the system shuts down
System set point	The system set point temperature.

Get System Inventory

Gets information about the system inventory.

Request

Request URI	/nos/api/sysinfo/inventory
Request Body (JSON)	

Response

Response Body (JSON)	{ "Name" : "8272", "Description" : "G8272 (48x10GE + 6x40GE)", "Model" : "LENOVO G8272", "Manufacture Date": "1452", "Serial Number" : "Y052MV4CT00J", "PCB Assembly" : "00CJ067", "Electronic Serial Number" : "MM01267", "Firmware Revision" : "0.0.0.0", "Software Revision" : "0.0.0.0", "Uuid" : "A48CDB33B600Y052MV4CT00J", "Last reset Reason" : "Reset by CLI reload command", "Service Led" : "enabled" },
----------------------	--

where:

Element	Description
name	System name.
description	System description.
model	System model.
Manufacture Date	System Manufacture Date.
Serial Number	System Serial Number.
PCB Assembly	System PCB Assembly.
Electronic Serial Number	System Electronic Serial Number.
Firmware Revision	System Firmware Revision.
Software Revision	System Software Revision.
Uuid	System UUID.
Last reset Reason	System last reset reason.
Service Led	Whether or not the Service LED is enabled.

Get System Serial Number

Gets the system serial number.

Request

Request URI	/nos/api/sysinfo/serial_number
Request Body (JSON)	

Response

Response Body (JSON)	{ "Serial Number" : "Y052MV4CT00J", }
----------------------	---

where:

Element	Description
Serial Number	System Serial Number.

Get Panic Dump Information

Gets information about system panic dumps.

Request

Request URI	/nos/api/sysinfo/panic_dump
Request Body (JSON)	

Response

Response Body (JSON)	{ { "File 3" : { "Name" : "nsm.gz", "Date" : "2016-05-31 22:38:03" }, "File 2" : { "Name" : "hsl.gz", "Date" : "2016-05-31 22:38:10" }, "File 1" : { "Name" : "imish.gz", "Date" : "2016-05-31 22:38:34" } } }
----------------------	---

where:

Element	Description
Name	File name.
Date	Date and time when the file was created.

Get Global Health Status

Gets information about system global health.

Request

Request URI	/nos/api/sysinfo/globalhealthstatus
Request Body (JSON)	

Response

Response Body (JSON)	{ "status": "<status>", "description": "<description>" }
----------------------	---

where:

Element	Description
<i>status</i>	System global health status; one of: <ul style="list-style-type: none">● OK● Noncritical● Critical
<i>description</i>	Detailed description of the status; one of: <ul style="list-style-type: none">● OK:<ul style="list-style-type: none">○ All temperature sensors are below the warning threshold;○ All fans are running at \geq 100 RPMs;○ All power supplies are on;○ No panic dump exists in flash.● Noncritical:<ul style="list-style-type: none">○ One or more temperature sensors is in the warning range;○ A panic dump exists in flash.● Critical:<ul style="list-style-type: none">○ One or more temperature sensors is in the failure range;○ One or more fans are running $<$ 100 RPM;○ One power supply is off.

Get System Resource Statistics

This command gets system resource statistics, such as CPU statistics, memory statistics, tasks and load average.

Request

Method Type	GET
Request URI	/nos/api/sysinfo/resources
Request Body (JSON)	

Response

Response Body (JSON)	{ "Cpu(s)": { "idle": "88.4", "hardware_interrupt": "0.0", "stolen_time": "0.0", "software_interrupt": "0.0", "io_wait": "0.1", "system": "2.9", "user_nice": "0.0", "user_un_nice": "8.7" }, "Mem": { "total": "4000796", "buffers": "355260", "free": "3159012", "used": "486524" }, "tasks": { "zombie": "0", "running": "1", "total": "108", "stopped": "0", "sleeping": "107" }, "load average": { "5 min": "0.36", "15 min": "0.35", "1 min": "0.26" } }
----------------------	---

Telemetry

The following telemetry configuration-related URIs are available:

- /nos/api/info/telemetry/switch-properties GET
- /nos/api/cfg/telemetry/feature GET, PUT
- /nos/api/cfg/telemetry/bst/tracking GET, PUT
- /nos/api/cfg/telemetry/bst/feature GET, PUT
- /nos/api/info/telemetry/bst/report POST
- /nos/api/info/telemetry/bst/congestion-drop-counters POST
- /nos/api/cfg/telemetry/bst/threshold PUT, POST
- /nos/api/cfg/telemetry/bst/clear/threshold GET
- /nos/api/cfg/telemetry/bst/clear/statistics GET
- /nos/api/cfg/telemetry/clear-cgsn-drop-counters GET
- nos/api/cfg/telemetry/cancel-request PUT
- /nos/api/info/statistics/interface/{if_name} GET
- /nos/api/cfg/statistics/clear/interface/{if_name} DELETE

The following telemetry configuration commands are available:

- [Get Switch Properties](#)
- [Set System Feature](#)
- [Get System Feature](#)
- [Set BST Tracking](#)
- [Get BST Tracking](#)
- [Set BST Feature](#)
- [Get BST Feature](#)
- [Get BST Report](#)
- [Get BST Congestion Drop Counters](#)
- [Set BST Threshold](#)
- [Get BST Threshold](#)
- [Clear BST Threshold](#)
- [Clear BST Statistics](#)
- [Clear BST Congestion Drops](#)
- [Cancel BST Request](#)
- [Get Interface Statistics](#)
- [Clear Interface Statistics](#)

Get Switch Properties

Retrieve system switch properties.

Request

Method Type	GET
Request URI	/nos/api/info/telemetry/switch-properties
Request Body (JSON)	

Response

Response Body (JSON)	<pre>"time-stamp": "2015-10-18 - 00:15:04", { "number-of-asics": 1, "asic-info": [[["1", "BCM56850", 78], ["BST"]], ["CNOS"], ["0000d80bb99bbbb"], ["192.168.1.2"], ["8080"], ["3.0.0.1"]] }</pre>
-------------------------	--

where:

Element	Description
number-of-asics	Number of asics in the switch; integer format.
asic-info	List of dictionaries; one of: <ul style="list-style-type: none">● asic-id: ASIC identifier; string● chip-id: part number of the silicon; string● num-ports: Number of ports available on the switch and managed by this ASIC; an integer
supported-features	A list of strings indicating the features supported by the Agent.
network-os	The Network Operating system currently used on the switch.
uid	Unique identifier for this switch. This unique ID is the key for the SDN controller to map the switch to the nodes existing in their discovery database.
agent-ip	IP address of the switch where the Agent is running; string

Element	Description
agent-port	TCP port number of the switch, at which the Agent is listening; string
agent-sw-version	Software version number for the Agent; string

Set System Feature

Set system feature.

Request

Method Type	PUT
Request URI	/nos/api/cfg/telemetry/feature
Request Body (JSON)	{ "heartbeat-enable" : 1, "msg-interval" : 10 }

where:

Element	Description
heartbeat-enable	When enabled, the Agent asynchronously sends the registration and heartbeat message to the collector. One of: <ul style="list-style-type: none">● 0: disable heartbeat● 1: enable heartbeat (default value)
msg-interval	Determines the interval with which the registration and heartbeat messages are sent to the collector; units of seconds from 1-600. Default value: 5 seconds.

Response

Response Body (JSON)	
-------------------------	--

Get System Feature

Retrieve system feature.

Request

Method Type	GET
Request URI	/nos/api/cfg/telemetry/feature
Request Body (JSON)	

Response

Response Body (JSON)	{ "heartbeat-enable" : 1, "msg-interval" : 5 }
-------------------------	---

where:

Element	Description
heartbeat-enable	When enabled, the Agent asynchronously sends the registration and heartbeat message to the collector. One of: <ul style="list-style-type: none">● 0: disable heartbeat● 1: enable heartbeat (default value)
msg-interval	Determines the interval with which the registration and heartbeat messages are sent to the collector; units of seconds from 1-600. Default value: 5 seconds.

Set BST Tracking

Set the BST trackers and the tracking-mode on the ASIC.

Request

Method Type	PUT
Request URI	/nos/api/cfg/telemetry/bst/tracking
Request Body (JSON)	{ "track-peak-stats":1, "track-ingress-port-priority-group":1, "track-ingress-port-service-pool":1, "track-ingress-service-pool":1, "track-egress-port-service-pool":1, "track-egress-service-pool":1, "track-egress-rqe-queue":1, "track-egress-cpu-queue":1, "track-egress-uc-queue":1, "track-egress-mc-queue":1, "track-device":1 }

where:

Element	Description
track-peak-stats	Set to 1 to peak statistics tracking, 0 to disable this feature
track-ingress-port-priority-group	Set to 1 to enable ingress port priority group tracking, 0 to disable this feature
track-ingress-port-service-pool	Set to 1 to enable ingress port service pool tracking, 0 to disable this feature
track-ingress-service-pool	Set to 1 to enable ingress service pool tracking, 0 to disable this feature
track-egress-port-service-pool	Set to 1 to enable egress port service pool tracking, 0 to disable this feature
track-egress-service-pool	Set to 1 to enable egress service pool tracking, 0 to disable this feature
track-egress-rqe-queue	Set to 1 to enable egress RQE queue tracking, 0 to disable this feature
track-egress-cpu-queue	Set to 1 to enable egress CPU queue tracking, 0 to disable this feature
track-egress-uc-queue	Set to 1 to enable egress unicast queue tracking, 0 to disable this feature

Element	Description
track-egress-mc-queue	Set to 1 to enable egress multicast queue tracking, 0 to disable this feature
track-device	Set to 1 to enable tracking of this device, 0 to disable this feature

Response

Response Body (JSON)	
-------------------------	--

Get BST Tracking

Retrieve the BST trackers and the tracking-mode on the ASIC.

Request

Method Type	GET
Request URI	/nos/api/cfg/telemetry/bst/tracking
Request Body (JSON)	

Response

Response Body (JSON)	{ "track-peak-stats":1, "track-ingress-port-priority-group":1, "track-ingress-port-service-pool":1, "track-ingress-service-pool":1, "track-egress-port-service-pool":1, "track-egress-service-pool":1, "track-egress-rqe-queue":1, "track-egress-cpu-queue":1, "track-egress-uc-queue":1, "track-egress-mc-queue":1, "track-device":1 }
-------------------------	---

where:

Element	Description
track-peak-stats	1 to peak statistics tracking, 0 to disable this feature
track-ingress-port-priority-group	1 to enable ingress port priority group tracking, 0 to disable this feature
track-ingress-port-service-pool	1 to enable ingress port service pool tracking, 0 to disable this feature
track-ingress-service-pool	1 to enable ingress service pool tracking, 0 to disable this feature
track-egress-port-service-pool	1 to enable egress port service pool tracking, 0 to disable this feature
track-egress-service-pool	1 to enable egress service pool tracking, 0 to disable this feature
track-egress-rqe-queue	1 to enable egress RQE queue tracking, 0 to disable this feature

Element	Description
track-egress-cpu-queue	Set to 1 to enable egress CPU queue tracking, 0 to disable this feature
track-egress-uc-queue	Set to 1 to enable egress unicast queue tracking, 0 to disable this feature
track-egress-mc-queue	Set to 1 to enable egress multicast queue tracking, 0 to disable this feature
track-device	1 to enable tracking of this device, 0 to disable this feature

Set BST Feature

Set BST feature.

Request

Method Type	PUT
Request URI	/nos/api/cfg/telemetry/bst/feature
Request Body (JSON)	{ "bst-enable": 1, "send-async-reports": 1, "collection-interval": 300, "trigger-rate-limit": 5, "trigger-rate-limit-interval": 2, "send-snapshot-on-trigger": 1, "async-full-reports": 1, }

where:

Element	Description
bst-enable	Set to 1 to enable BST, 0 to disable it. Enabling BST allows the switch to track buffer utilization statistics.
send-async-reports	Set to 1 to enable the transmission of periodic asynchronous reports, 0 to disable this feature.
collection-interval	The collection interval, in seconds. This defines how frequently periodic reports will be sent to the configured controller. Valid values: 10 - 600
trigger-rate-limit	The trigger rate limit, which defines the maximum number of threshold-driven triggered reports that the agent is allowed to send to the controller per trigger-rate-limit-interval ; an integer from 1-5.
trigger-rate-limit-interval	The trigger rate limit interval, in seconds; an integer from 10-60.

Element	Description
send-snapshot-on-trigger	Set to 1 to enable sending a complete snapshot of all buffer statistics counters when a trigger happens, 0 to disable this feature.
async-full-report	Set to 1 to enable the async full report feature, 0 to disable it. When this feature is enabled, the agent sends full reports containing data related to all counters. When the feature is disabled, the agent sends incremental reports containing only the counters that have changed since the last report.

Response

Response Body (JSON)	
-------------------------	--

Get BST Feature

Get BST information.

Request

Method Type	GET
Request URI	/nos/api/cfg/telemetry/bst/feature
Request Body (JSON)	

Response

Response Body (JSON)	{ "stat-units-in-cells": 0, "stats-in-percentage": 1, "collection-interval": 60, "send-async-reports": 0, "send-snapshot-on-trigger": 1, "trigger-rate-limit": 1, "async-full-report": 0, "trigger-rate-limit-interval": 10, "bst-enable": 0 }
-------------------------	--

where:

Element	Description
bst-enable	Set to 1 to enable BST, 0 to disable it. Enabling BST allows the switch to track buffer utilization statistics.
send-async-reports	Set to 1 to enable the transmission of periodic asynchronous reports, 0 to disable this feature.
collection-interval	The collection interval, in seconds. This defines how frequently periodic reports will be sent to the configured controller.
trigger-rate-limit	The trigger rate limit, which defines the maximum number of threshold-driven triggered reports that the agent is allowed to send to the controller per trigger-rate-limit-interval; an integer from 1-5.
trigger-rate-limit-interval	The trigger rate limit interval, in seconds; an integer from 10-60.
send-snapshot-on-trigger	Set to 1 to enable sending a complete snapshot of all buffer statistics counters when a trigger happens, 0 to disable this feature.

Element	Description
<code>async-full-report</code>	<p>Set to 1 to enable the async full report feature, 0 to disable it.</p> <p>When this feature is enabled, the agent sends full reports containing data related to all counters. When the feature is disabled, the agent sends incremental reports containing only the counters that have changed since the last report.</p>
<code>stat-units-in-cells</code>	<p>Whether the buffer statistics are reported in units of bytes or cells.</p> <p>Note: This value is always set to 0. It cannot be modified and it is always ignored because <code>stats-in-percentage</code> is always set to 1.</p>
<code>stats-in-percentage</code>	<p>When set to 1, the buffer usage statistics are reported as percentages. When this variable is set to 1, the parameter <code>stat-units-in-cells</code> is ignored while reporting the statistics. This variable is applicable for statistics and threshold reporting.</p> <p>Note: This variable is always set to 1 and cannot be modified. The percentage values in the BST/trigger report are an approximation of buffer utilization, not an exact value.</p>

Get BST Report

Get BST information.

Request

Method Type	POST
Request URI	/nos/api/info/telemetry/bst/report
Request Body (JSON)	{ "include-ingress-port-priority-group" : 1, "include-ingress-port-service-pool" : 0, "include-ingress-service-pool" : 0, "include-egress-port-service-pool" : 0, "include-egress-service-pool" : 1, "include-egress-rqe-queue" : 0, "include-egress-uc-queue" : 1, "include-egress-mc-queue" : 1, "include-egress-cpu-queue": 0, "include-device" : 0 }

where:

Element	Description
include-ingress-port-priority-group	Ingress port priority group; 1 to enable, 0 to disable.
include-ingress-port-service-pool	Ingress port service pool; 1 to enable, 0 to disable.
include-ingress-service-pool	Ingress service pool; 1 to enable, 0 to disable.
include-egress-port-service-pool	Egress port service pool; 1 to enable, 0 to disable.
include-egress-service-pool	Egress service pool; 1 to enable, 0 to disable.
include-egress-rqe-queue	Egress RQE queue; 1 to enable, 0 to disable.
include-egress-uc-queue	Egress unicast queue buffers. Set to 1 to enable in BST report, 0 to disable it.
include-egress-cpu-queue	Egress CPU queue buffers. Set to 1 to enable in BST report, 0 to disable it.
include-egress-mc-queue	Egress multicast queue buffers. Set to 1 to enable in BST report, 0 to disable it.
include-device	Device; 1 to enable, 0 to disable.

Response

Response Body (JSON)	<pre>{ "time-stamp": "2014-11-14 - 00:15:04 ", "report": [{ "realm": "device", "data": "46" }, { "realm": "ingress-port-priority-group", "data": [{ "interface": "Ethernet1/2", "data": [[5, "100", "100"]], { "interface": "Ethernet1/3", "data": [[5, "100", "100"]]}] }, { "realm": "ingress-port-service-pool", "data": [{ "interface": "Ethernet1/2", "data": [[5, "100"]], { "interface": "Ethernet1/3", "data": [[6, "100"]]}] }, { "realm": "ingress-service-pool", "data": [[1, "100"], [2, "100"]]}, { "realm": "egress-cpu-queue", "data": [[3, "100"]]}, { "realm": "egress-uc-queue", "data": [[3, "100"]]}, { "realm": "egress-mc-queue", "data": [[3, "100"]]}, { "realm": "egress-port-service-pool", "port-service-pool-ctr": [{ "interface": "Ethernet1/2", "data": [[5, "10", "10", "30"]], { "interface": "Ethernet1/3", "data": [[60, "30", "36", "45"]]}] }, { "realm": "egress-rqe-queue", "data": [[2, "33"], [5, "25"]]}, { "realm": "egress-service-pool", "data": [[1, "20", "10", "10", "32"], [3, "3660", 0, 0]]}],] }</pre>
----------------------	--

where:

Realm	Index # 1	Index # 2	Statistics
ingress-port-priority-group	<i>interface</i> (such as Ethernet1/7)	priority-group	um-share-buffer-count um-headroom-buffer-count
ingress-port-service-pool	<i>interface</i> (such as Ethernet1/7)	service-pool	um-share-buffer-count
ingress-service-pool	service-pool		um-share-buffer-count
egress-port-service-pool	<i>interface</i> (such as Ethernet1/7)	service-pool	uc-share-buffer-count, um-share-buffer-count, mc-share-buffer-count,
egress-cpu-queue	queue		cpu-buffer-count
egress-uc-queue	queue		uc-buffer-count
egress-mc-queue	queue		mc-buffer-count
egress-service-pool	service-pool		um-share-buffercount, mc-share-buffer-count
egress-rqe-queue	queue		rqe-buffer-count
device			data

Note: For more information on realm parameters and indexes, see the *CNOS Application Guide*.

Get BST Congestion Drop Counters

Get BST congestion drop counters information.

Request

Method Type	POST
Request URI	/nos/api/info/telemetry/bst/congestion-drop-counters
Request Body (JSON)	<pre>{ req_id : 1 "request-type" : "top-drops" or "top-port-queue-drops" or "port-drops" or " port-queue-drops" "request-params": { "count":8 "interface-list" :["if_name1", "if_name2", "if_name3"] "queue-type" : "ucast" or "mcast" or "all" "queue-list" : [1, 2, 3] }, "collection-interval": 30 }</pre>

where:

Element	Description
req-id	The request ID; an integer
request-type	One of the following: <ul style="list-style-type: none">● top-drops: Show ports with maximum congestion on the switch and their drop-counters● top-port-queue-drops: Show top port-queue level drop-counters on the switch● port-queue-drops: Show per port-queue level drop-counters on the switch● port-drops: Show per-port total drop counters on the switch

Element	Description
request-params	<p>Request parameters; one of the following strings:</p> <ul style="list-style-type: none"> ● count: Number of ports required in the report. The ports are sorted with the port suffering maximum congestion at the top; an integer. <p>Note: This parameter is configurable only if request-type is top-drops or top-port-queue-drops</p> <ul style="list-style-type: none"> ● queue-type: Filters the report on the queue type; one of the following strings: <ul style="list-style-type: none"> – ucast: Unicast queues – mcast: Multicast queues – all: All supported queues ● interface-list: Comma-separated list of ports for the congestion drop counter report; an array. A value of all requests all the ports. ● queue-list: An array of queue numbers to be considered for the drop report. ● collection-interval: (Optional) The period in which the counters are collected from ASIC; An integer from 1-60. Default value: 0

Response

Method Type	POST
Request URI	/nos/api/info/telemetry/bst/congestion-drop-counters
Request Body (JSON)	<pre>{ "time-stamp": "2017-01-02 - 14:54:22", "report-type": "port-drops", "congestion-ctr": [{"interface": "Ethernet1/1", "ctr": "56776"}, {"interface": "Ethernet1/2", "ctr": "56767"}, {"interface": "Ethernet1/3", "ctr": "76654"}] }</pre>

where:

Element	Description
time-stamp	Time of the report generation.

Element	Description
<code>report-type</code>	<p>One of the following:</p> <ul style="list-style-type: none"> ● <code>top-drops</code>: Show ports with maximum congestion on the switch and their drop-counters ● <code>top-port-queue-drops</code>: Show top port-queue level drop-counters on the switch ● <code>port-queue-drops</code>: Show per port-queue level drop-counters on the switch ● <code>port-drops</code>: Show per-port total drop counters on the switch
<code>congestion-ctr</code>	<p>Congestion counters contents; a list of dictionaries. Depending on the configuration, each dictionary may contain the following values:</p> <ul style="list-style-type: none"> ● <code>interface</code>: Interface name ● <code>ctr</code>: Counter value; a string. ● <code>queue-type</code>; one of ucast, mcast ● <code>queue-drop-ctr</code>; one of: <ul style="list-style-type: none"> – <code>queue-number</code>: an integer from 1-8. – <code>counter-value</code>: the 64 bit counter value; a string.

Port Drop Report Example

Request

Method Type	POST
Request URI	/nos/api/info/telemetry/bst/congestion-drop-counters
Request Body (JSON)	<pre>{ "req_id" : 1 "request-type" : "port-drops" "request-params": { "interface-list" : ["Ethernet1/1", "Ethernet1/2", "Ethernet1/3"] } }</pre>

Response

Response Body (JSON)	<pre>{ "time-stamp": "2017-01-02 - 14:54:22", "report-type": "port-drops", "congestion-ctr": [{"interface": "Ethernet1/1", "ctr": "56776"}, {"interface": "Ethernet1/2", "ctr": "56767"}, {"interface": "Ethernet1/3", "ctr": "76654"}] }</pre>
-------------------------	---

Top Drop Report Example

Request

Method Type	POST
Request URI	/nos/api/info/telemetry/bst/congestion-drop-counters
Request Body (JSON)	<pre>{ "req-id" : 2, "request-type" : "top-drops", "request-params": { "count":3 } }</pre>

Response

Response Body (JSON)	<pre>{ "time-stamp": "2017-01-02 - 14:54:22", "report-type": "top-drops", "congestion-ctr": [{"interface": "Ethernet1/1", "ctr": "1234"}, {"interface": "Ethernet1/2", "ctr": "3234"}, {"interface": "Ethernet1/3", "ctr": "3455"}] }</pre>
-------------------------	---

Port Queue Drops Report Example

Request

Method Type	POST
Request URI	/nos/api/info/telemetry/bst/congestion-drop-counters
Request Body (JSON)	<pre>{ "req-id" : 4, "request-type" : "port-queue-drops", "request-params": { "interface-list": ["Ethernet1/1", "Ethernet1/2"], "queue-type": "mcast", "queue-list" : [1,2] } }</pre>

Response

Response Body (JSON)	<pre>{ "time-stamp": "2017-01-02 - 14:40:01", "report-type": "port-queue-drops", "congestion-ctr": [{ "interface": "Ethernet1/1", "queue-type": "mcast", "queue-drop-ctr": [[1, "0"], [2, "0"]] }, { "interface": "Ethernet1/2", "queue-type": "mcast", "queue-drop-ctr": [[1, "0"], [2, "0"]] }] }</pre>
-------------------------	---

Top Port Queue Drops Report Example

Request

Method Type	POST
Request URI	/nos/api/info/telemetry/bst/congestion-drop-counters
Request Body (JSON)	<pre>{ "req-id" : 3, "request-type" : "top-port-queue-drops", "request-params": { "count":5 , "queue-type": "ucast" } }</pre>

Response

Response Body (JSON)	<pre>{ { "time-stamp": "2017-01-02 - 14:43:39 ", "report-type": "top-port-queue-drops", "congestion-ctr": [{ "interface": "Ethernet1/1", "queue-type": "ucast", "queue-drop-ctr": [[1, "0"], [2, "0"], [3, "0"], [4, "0"], [5, "0"]] }] } }</pre>
----------------------	---

Set BST Threshold

Set BST threshold to trigger BST reports. Use the following REST APIs to set thresholds for each realm.

Request

Method Type	PUT
Request URI	nos/api/cfg/telemetry/bst/threshold
Request Body (JSON)	{ "include-ingress-port-priority-group":1, "include-ingress-port-service-pool":1, "include-ingress-service-pool":1, "include-egress-port-service-pool":1, "include-egress-service-pool":1, "include-egress-uc-queue":1, "include-egress-rqe-queue":1, "include-egress-mc-queue":1, "include-egress-cpu-queue":1, "include-device":1 }

where:

Realm	Index # 1	Index # 2	Thresholds
ingress-port-priority-group	<i>interface</i> (such as Ethernet1/7)	priority-group	um-share-threshold
ingress-port-service-pool	<i>interface</i> (such as Ethernet1/7)	service-pool	um-share-threshold
ingress-service-pool	service-pool		um-share-threshold
egress-port-service-pool		service-pool	uc-share-threshold, um-share-threshold mc-share-threshold
egress-service-pool	service-pool		um-share-threshold mc-share-threshold
egress-rqe-queue	queue		rqe-threshold
egress-cpu-queue	queue		cpu-threshold
egress-uc-queue	queue		uc-threshold
egress-mc-queue	queue		mc-threshold
include-device			threshold

Note: For more information on realm parameters and indexes, see the CNOS Application Guide.

Response

Response Body (JSON)	
----------------------------	--

Get BST Threshold

Retrieve BST threshold.

Request

Method Type	POST
Request URI	nos/api/cfg/telemetry/bst/threshold
Request Body (JSON)	{ "include-ingress-port-priority-group" : 1, "include-ingress-port-service-pool" : 1, "include-ingress-service-pool" : 1, "include-egress-port-service-pool" : 1, "include-egress-service-pool" : 1, "include-egress-cpu-queue":1, "include-egress-uc-queue":1, "include-egress-mc-queue":1 }

where:

Element	Description
include-ingress-port-priority-group	Ingress port priority group; 1 to enable, 0 to disable.
include-ingress-port-service-pool	Ingress port service pool; 1 to enable, 0 to disable.
include-ingress-service-pool	Ingress service pool; 1 to enable, 0 to disable.
include-egress-port-service-pool	Egress port service pool; 1 to enable, 0 to disable.
include-egress-service-pool	Egress service pool; 1 to enable, 0 to disable.
include-egress-cpu-queue	Egress CPU queue buffers. Set to 1 to enable in BST threshold report, 0 to disable it.
include-egress-uc-queue	Egress unicast queue buffers. Set to 1 to enable in BST threshold report, 0 to disable it.
include-egress-mc-queue	Egress multicast queue buffers. Set to 1 to enable in BST threshold report, 0 to disable it.

Response

Response Body (JSON)	<pre>{ "report": [{ "realm": "ingress-port-service-pool", "data": [{ "interface": "Ethernet1/40", "data": [[0, "100"]], "data": [[0, "100"]], ... }, ...], "realm": "ingress-service-pool", "data": [[0, "100"]], ... }] }</pre>
-------------------------	--

where:

Realm	Index # 1	Index # 2	Thresholds
ingress-port-priority-group	<i>interface</i> (such as Ethernet1/7)	priority-group	um-share-threshold um-headroom-threshold
ingress-port-service-pool	<i>interface</i> (such as Ethernet1/7)	service-pool	um-share-threshold
ingress-service-pool	service-pool		um-share-threshold
egress-port-service-pool	<i>interface</i> (such as Ethernet1/7)	service-pool	uc-share-threshold, um-share-threshold mc-share-threshold
egress-service-pool	service-pool		um-share-threshold mc-share-threshold
egress-rqe-queue	queue		rqe-threshold
egress-cpu-queue	queue		cpu-threshold

Realm	Index # 1	Index # 2	Thresholds
egress-uc-queue	queue		uc-threshold
egress-mc-queue	queue		mc-threshold
device			threshold

Note: For more information on realm parameters and indexes, see the *CNOS Application Guide*.

Clear BST Threshold

Clear BST threshold.

Request

Method Type	GET
Request URI	nos/api/cfg/telemetry/bst/clear/threshold
Request Body (JSON)	

Response

Response Body (JSON)	
-------------------------	--

Clear BST Statistics

Clear BST statistics.

Request

Method Type	GET
Request URI	nos/api/cfg/telemetry/bst/clear/statistics
Request Body (JSON)	

Response

Response Body (JSON)	
-------------------------	--

Clear BST Congestion Drops

Clear BST congestion drop.

Request

Method Type	GET
Request URI	nos/api/cfg/telemetry/clear-cgsn-drop-counters
Request Body (JSON)	

Response

Response Body (JSON)	
-------------------------	--

Cancel BST Request

This command cancels BST request.

Request

Method Type	PUT
Request URI	nos/api/cfg/telemetry/cancel-request
Request Body (JSON)	{ "req-id":200, "cancel-req-id":1 }

where:

Element	Description
req-id	The unique request ID. Valid value: <ul style="list-style-type: none">● 1 - 10,000
cancel-req-id	The request id of the periodic report to cancel. Valid value: <ul style="list-style-type: none">● 1 - 10,000

Response

On success, a HTTP 200 OK response is sent with no JSON body.

Response Body (JSON)	
----------------------	--

Get Interface Statistics

This command returns statistics for a specific switch interface.

Request

Method Type	GET
Request URI	/nos/api/info/statistics/interface{if_name}
Request Body (JSON)	

where:

Element	Description
<i>if_name</i>	The name of the switch interface. Valid value: <ul style="list-style-type: none">• <i>interface name</i> (for example, <i>Ethernet1/12</i>)

Response

Following is a command response example:

Response Body (JSON)	{ "tx_pkts_65_to_127_bytes": "0", "rx_mcast_pkts": "0", "rx_pkts": "0", "tx_dropped": "0", "if_name": "Ethernet1/1", "rx_pkts_65_to_127_bytes": "0", "rx_rate": "0", "tx_oversize_pkts": "0", "tx_pkts_512_to_1023_bytes": "0", "rx_pkts_256_to_511_bytes": "0", "if_down_drops": "0", "rx_pkts_1519_to_1548_bytes": "0", "tx_bytes": "0", "rx_unicast_pkts": "0", "rx_crc_errors": "0", "tx_mcast_pkts": "0", "tx_rate": "0", "tx_unicast_pkts": "0", "rx_pkts_1024_to_1518_bytes": "0", "tx_pkts_128_to_255_bytes": "0", "rx_pkts_1519_to_1548_bytes": "0", "rx_pkts_0_to_64_bytes": "0", "rx_bcast_pkts": "0", "rx_bytes": "0", "tx_errors": "0", "tx_pkts_0_to_64_bytes": "0", "tx_bcast_pkts": "0", "rx_bytes": "0", "tx_errors": "0", "tx_pkts_0_to_64_bytes": "0", "tx_bcast_pkts": "0", "rx_pause": "0", "tx_pkts_1024_to_1518_bytes": "0", "rx_undersize_pkts": "0", "tx_pkts_256_to_511_bytes": "0", "rx_input_discards": "0", "tx_pause": "0", "rx_pkts_128_to_255_bytes": "0", "rx_errors": "0", "tx_pkts": "0", "rx_pkts_512_to_1023_bytes": "0", "tx_bit_rate": "0", "rx_bit_rate": "0", "tx_pkts_1519_to_1548_bytes": "0", "rx_oversize_pkts": "0" }
----------------------	---

Clear Interface Statistics

This command resets the statistics for a specific switch interface.

Request

Method Type	DELETE
Request URI	/nos/api/cfg/statistics/clear/interface/{ <i>if_name</i> }
Request Body (JSON)	

where:

Element	Description
<i>if_name</i>	The name of the switch interface. Valid value: <ul style="list-style-type: none">• <i>interface name</i> (for example, <i>Ethernet1/12</i>)

TACACS+

The following Terminal Access Controller Access-Control System Plus (TACACS+) URIs are available:

- /nos/api/cfg/tacacs GET, PUT
 - /nos/api/cfg/tacacs/hosts GET, POST, DELETE
 - /nos/api/cfg/tacacs/groups GET, POST, DELETE

The following TACACS+ commands are available:

- Get TACACS+ Configuration
 - Update TACACS+ Configuration
 - Get TACACS+ Server Configuration
 - Add TACACS+ Server
 - Delete TACACS+ Server
 - Get TACACS+ Server Group Configuration
 - Add TACACS+ Server Group
 - Delete TACACS+ Server Group

Get TACACS+ Configuration

This command returns the TACACS+ configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/tacacs
Request Body (JSON)	

Response

Response Body (JSON)	{ "status":"{enable disable}", "global_key":"{configured not configured}" }
----------------------	--

where:

Element	Description
status	The status of the TACACS+ service on the switch. Valid value: <ul style="list-style-type: none">● <i>enable</i>● <i>disable</i>
global_key	The status of the global TACACS+ encryption/decryption key. Valid value: <ul style="list-style-type: none">● <i>configured</i>● <i>not configured</i>

Update TACACS+ Configuration

This command updates the TACACS+ configuration.

Request

Method Type	PUT
Request URI	/nos/api/cfg/tacacs
Request Body (JSON)	{ "status": "{enable disable}", "global_key": "{global_key}", "global_key_form": {0 7} }

where:

Element	Description
status	The status of the TACACS+ service on the switch. Valid values: <ul style="list-style-type: none">● <i>enable</i>● <i>disable</i>
global_key	The global TACACS+ encryption/decryption key. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 63 characters)
global_key_form	The encryption method for the global TACACS+ key. Valid values: <ul style="list-style-type: none">● <i>0</i> (clear text)● <i>7</i> (encrypted)

Response

Response Body (JSON)	{ "status":"{enable disable}", "global_key":"{configured not configured}" }
----------------------	--

where:

Element	Description
status	The status of the TACACS+ service on the switch. Valid value: <ul style="list-style-type: none">● <i>enable</i>● <i>disable</i>
global_key	The status of the global TACACS+ encryption/decryption key. Valid value: <ul style="list-style-type: none">● <i>configured</i>● <i>not configured</i>

Get TACACS+ Server Configuration

This command returns the configuration of a specific configured TACACS+ server or of all configured TACACS+ servers.

Request

Method Type	GET
Request URI	/nos/api/cfg/tacacs/hosts/{IP_addr}
Request Body (JSON)	

where:

Element	Description
IP_addr	The IP address of the configured TACACS+ server. Valid value: <ul style="list-style-type: none">● <i>IP address</i> Note: If no IP address is provided, then the command returns the configuration of all configured TACACS+ servers.

Response

Response Body (JSON)	[{ "IP_addr": "{IP_addr}", "port": {port}, "key": "{configured not configured}" }]
----------------------	--

where:

Element	Description
IP_addr	The IP address of the configured TACACS+ server. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
port	The TCP port used to connect to the TACACS+ server. Valid value: <ul style="list-style-type: none">● <i>1-65535</i>
key	The status of the TACACS+ server encryption/decryption key. Valid value: <ul style="list-style-type: none">● <i>configured</i>● <i>not configured</i>

Add TACACS+ Server

This command configures a TACACS+ server.

Request

Method Type	POST
Request URI	/nos/api/cfg/tacacs/hosts
Request Body (JSON)	{ "IP_addr": "{IP_addr}", "port": {port}, "key": "{key}", "key_form": {0 7} }

where:

Element	Description
IP_addr	The IP address of the TACACS+ server. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
port	The TCP port used to connect to the TACACS+ server. Valid value: <ul style="list-style-type: none">● 1-65535
key	The TACACS+ server encryption/decryption key. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 63 characters)
key_form	The encryption method for the TACACS+ server key. Valid value: <ul style="list-style-type: none">● 0 (clear text)● 7 (encrypted)

Response

Response Body (JSON)	{ "IP_addr": "{IP_addr}", "port": {port}, "key": "{configured not configured}" }
----------------------	--

where:

Element	Description
IP_addr	The IP address of the TACACS+ server. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
port	The TCP port used to connect to the TACACS+ server. Valid value: <ul style="list-style-type: none">● <i>1-65535</i>
key	The status of the TACACS+ server encryption/decryption key. Valid value: <ul style="list-style-type: none">● <i>configured</i>● <i>not configured</i>

Delete TACACS+ Server

This command removes a configured TACACS+ server.

Request

Method Type	DELETE
Request URI	/nos/api/cfg/tacacs/hosts/{IP_addr}
Request Body (JSON)	

where:

Element	Description
<i>IP_addr</i>	The IP address of the TACACS+ server. Valid value: <ul style="list-style-type: none">• <i>IP address</i>

Get TACACS+ Server Group Configuration

This command returns the configuration of a specific configured TACACS+ server group or of all configured TACACS+ server groups.

Request

Method Type	GET
Request URI	/nos/api/cfg/tacacs/groups/{group_name}
Request Body (JSON)	

where:

Element	Description
group_name	The name of the TACACS+ server group. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 127 characters) Note: If no group name is provided, then the command returns the configuration of all configured TACACS+ server groups.

Response

Response Body (JSON)	[{ "group_name": "{group_name}", "vrf_name": "{vrf_name}", "hosts": [{ "IP_addr": "{IP_addr}", "port": {port}, "key": "{configured not configured}" }] }]]
----------------------	---

where:

Element	Description
group_name	The name of the TACACS+ server group. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 127 characters)
vrf_name	The VRF instance for the TACACS+ server group. Valid value: <ul style="list-style-type: none">● <i>VRF instance name</i>
hosts	The list of servers members of the TACACS+ server group.

Element	Description
IP_addr	The IP address of the TACACS+ server. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
port	The TCP port used to connect to the TACACS+ server. Valid value: <ul style="list-style-type: none">● <i>1-65535</i>
key	The status of the TACACS+ server encryption/decryption key. Valid value: <ul style="list-style-type: none">● <i>configured</i>● <i>not configured</i>

Add TACACS+ Server Group

This command configures a TACACS+ server group.

Request

Method Type	POST
Request URI	/nos/api/cfg/tacacs/groups
Request Body (JSON)	{ "group_name": "{group_name}", "vrf_name": "{vrf_name}", "hosts": ["{IP_addr}"] }

where:

Element	Description
group_name	The name of the TACACS+ server group. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 127 characters)
vrf_name	The VRF instance for the TACACS+ server group. Valid value: <ul style="list-style-type: none">● <i>VRF instance name</i>
hosts	The list of servers members of the TACACS+ server group.
IP_addr	The IP address of the TACACS+ server to be added to the group. Valid value: <ul style="list-style-type: none">● <i>IP address</i>

Response

Response Body (JSON)	[{ "group_name": "{group_name}" "vrf_name": "{vrf_name}" "hosts": [{ "IP_addr": "{IP_addr}" "port": {port} "key": "{configured not configured}" }] }]
----------------------	--

where:

Element	Description
group_name	The name of the TACACS+ server group. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 127 characters)
vrf_name	The VRF instance for the TACACS+ server group. Valid value: <ul style="list-style-type: none">● <i>VRF instance name</i>
hosts	The list of servers members of the TACACS+ server group.
IP_addr	The IP address of the TACACS+ server. Valid value: <ul style="list-style-type: none">● <i>IP address</i>
port	The TCP port used to connect to the TACACS+ server. Valid value: <ul style="list-style-type: none">● <i>1-65535</i>
key	The status of the TACACS+ server encryption/decryption key. Valid value: <ul style="list-style-type: none">● <i>configured</i>● <i>not configured</i>

Delete TACACS+ Server Group

This command removes a configured TACACS+ server group.

Request

Method Type	DELETE
Request URI	/nos/api/cfg/tacacs/groups/{group_name}
Request Body (JSON)	

where:

Element	Description
<i>group_name</i>	The name of the TACACS+ server group. Valid value: <ul style="list-style-type: none">● <i>string</i> (up to 127characters)

vLAG

The following Virtual Link Aggregation Group (vLAG) URIs are available:

- /nos/api/cfg/vlag GET, PUT
- /nos/api/info/vlag GET
- /nos/api/info/vlag/isl GET
- /nos/api/cfg/vlag/isl PUT
- /nos/api/info/vlag/health_check GET
- /nos/api/cfg/vlag/health_check PUT
- /nos/api/cfg/vlag/instance POST
- /nos/api/cfg/vlag/instance/<instance_id> GET, PUT
- /nos/api/info/vlag/instance/<instance_id> GET

The following vLAG commands are available:

- [Get vLAG Configuration](#)
- [Update vLAG Configuration](#)
- [Get Global vLAG Information](#)
- [Get vLAG ISL Information](#)
- [Configure vLAG ISL](#)
- [Get vLAG Health Check Information](#)
- [Configure vLAG Health Check Parameters](#)
- [Create vLAG Instance](#)
- [Update vLAG Instance](#)
- [Delete vLAG Instance](#)
- [Get vLAG Instance Configuration](#)
- [Get vLAG Instance Information](#)

Get vLAG Configuration

Get the Virtual Link Aggregation Group (vLAG) global configuration.

Request

Method Type	GET
Request URI	/nos/api/cfg/vlag
Request Body (JSON)	

Response

Response Body (JSON)	{ "status": "<status>", "tier_id": "<tier_id>", "priority": "<priority>", "auto_recover" : "<auto_recover>", "startup_delay": "<startup_delay>", }
-------------------------	--

where:

Element	Description
<i>status</i>	Whether the vLAG is enabled or disabled; one of enable, disable. Default value: disable
<i>tier_id</i>	vLAG tier ID value; an intger from 1-512. Default value: 0.
<i>priority</i>	vLAG priority value; an integer from 0-65535. Default value: 0.
<i>auto_recover</i>	Time interval, in seconds; an integer from 240-3600. Default value: 300.
<i>startup_delay</i>	Delay time, in seconds; an integer from 0-3600. Default value: 120.

Update vLAG Configuration

Update the Virtual Link Aggregation Group (vLAG) global configuration.

Request

Method Type	PUT
Request URI	/nos/api/cfg/vlag
Request Body (JSON)	{ "status": "<status>", "tier_id": "<tier_id>", "priority": "<priority>", "auto_recover" : "<auto_recover>", "startup_delay": "<startup_delay>", }

where:

Element	Description
<i>status</i>	Whether the vLAG is enabled or disabled; one of enable, disable. Default value: disable
<i>tier_id</i>	vLAG tier ID value; an integer from 1-512. Default value: 0.
<i>priority</i>	vLAG priority value; an integer from 0-65535. Default value: 0.
<i>auto_recover</i>	Time interval, in seconds; an integer from 240-3600. Default value: 300.
<i>startup_delay</i>	Delay time, in seconds; an integer from 0-3600. Default value: 120.

Note: At least one parameter must be specified in the request body.

Response

Response Body (JSON)	{ "status": "<status>", "tier_id": "<tier_id>", "priority": "<priority>", "auto_recover" : "<auto_recover>", "startup_delay": "<startup_delay>", }
-------------------------	--

where:

Element	Description
<i>status</i>	Whether the vLAG is enabled or disabled; one of enable, disable. Default value: disable
<i>tier_id</i>	vLAG tier ID value; an integer from 1-512. Default value: 0.
<i>priority</i>	vLAG priority value; an integer from 0-65535. Default value: 0.

Element	Description
<i>auto_recover</i>	Time interval, in seconds; an integer from 240-3600. Default value: 300.
<i>startup_delay</i>	Delay time, in seconds; an integer from 0-3600. Default value: 120.

Get Global vLAG Information

Get global vLAG information.

Request

Method Type	GET
Request URI	/nos/api/info/vlag
Request Body (JSON)	

Response

Response Body (JSON)	{ "status": "<status>", "system_mac": "<system_mac>", "fdb_refresh": "<fdb_refresh>", "fdb_synch": "<fdb_synch>", "auto_recovery": { "interval": "<interval>", "state": "<state>", } "startup_delay": { "interval": "<interval>", "state": "<state>", } "local": { "tier_id": "<tier_id>", "sys_type": "<sys_type>", "os_version": "<os_version>", "admin_role": "<admin_role>", "oper_role": "<oper_role>", "priority": "<priority>", "system_mac": "<system_mac>", "match": "<match>" } "peer": { "tier_id": "<tier_id>", "sys_type": "<sys_type>", "os_version": "<os_version>", "admin_role": "<admin_role>", "oper_role": "<oper_role>", "priority": "<priority>", "system_mac": "<system_mac>", "match": "<match>" } }
-------------------------	---

where:

Element	Description
status	Whether the vLAG is enabled or disabled; one of <code>enable</code> , <code>disable</code> . Default value: <code>disable</code> .
system_mac	Unique vLAG system MAC used for LACP negotiation on the vLAG ports so the access switch forms a single LAG. The vLAG <code>tier_id</code> is used to form this vLAG system MAC.
fdb_refresh	Whether FDB refresh is configured; one of <code>yes</code> , <code>no</code> .
fdb_synch	Whether FDB is synchronized; one of <code>yes</code> , <code>no</code> .
auto_recovery	A dictionary consisting of the following values: <ul style="list-style-type: none"> • <code>interval</code>: Time interval, in seconds; an integer from 240-3600. Default value: 300. • <code>state</code>: Auto-recovery state; one of <code>unstarted</code>, <code>running</code>, <code>finished</code>.
startup_delay	A dictionary consisting of the following values: <ul style="list-style-type: none"> • <code>interval</code>: Delay time, in seconds; an integer from 0-3600. Default value: 120. • <code>state</code>: Startup delay state; one of <code>unstarted</code>, <code>running</code>, <code>finished</code>.
local	Dictionary containing the following values: <ul style="list-style-type: none"> • <code>tier_id</code>: vLAG tier ID of the local switch. • <code>sys_type</code>: Lenovo hardware model number. • <code>os_version</code>: CNOS version. • <code>admin_role</code>: One of Primary, Secondary, Unselected. • <code>oper_role</code>: One of Primary, Secondary, Unselected, • <code>priority</code>: The local vLAG priority • <code>system_mac</code>: Local switch MAC. • <code>match</code>: Whether there is an ISL local match or mismatch; one of Match, Mis-Match.
peer	Dictionary containing the following values: <ul style="list-style-type: none"> • <code>tier_id</code>: vLAG tier ID of the peer switch. • <code>sys_type</code>: Lenovo hardware model number. • <code>os_version</code>: CNOS version. • <code>admin_role</code>: One of Primary, Secondary, Unselected. • <code>oper_role</code>: One of Primary, Secondary, Unselected, • <code>priority</code>: The peer vLAG priority • <code>system_mac</code>: Peer switch MAC. • <code>match</code>: Whether there is an ISL local match or mismatch; one of Match, Mis-Match.

Get vLAG ISL Information

Get Virtual Link Aggregation Group (vLAG) Inter-Switch Link (ISL) information.

Request

Method Type	GET
Request URI	/nos/api/info/vlag/isl
Request Body (JSON)	

Response

Response Body (JSON)	{ "port_aggregator": "<port_aggregator>", "if_index": "<if_index>", "state": "<state>", "prev_state" : "<prev_state>", }
-------------------------	---

where:

Element	Description
<i>port_aggregator</i>	LAG identifier; an integer from 1-4096.
<i>if_index</i>	ISL interface index.
<i>state</i>	ISL state; one of Down , Inactive , Active .
<i>prev_state</i>	Previous ISL state; one of Down , Inactive , Active .

Configure vLAG ISL

Configures the port aggregator for the vLAG ISL.

Request

Method Type	PUT
Request URI	/nos/api/cfg/vlag/isl
Request Body (JSON)	{ "port_aggregator": "<port_aggregator>", }

where:

Element	Description
<i>port_aggregator</i>	Port aggregator for the vLAG ISL.

Response

Response Body (JSON)	
-------------------------	--

Get vLAG Health Check Information

Get vLAG health check information.

Request

Method Type	GET
Request URI	/nos/api/info/vlag/health_check
Request Body (JSON)	

Response

Response Body (JSON)	{ "status" : "<status>", "peer_ip": "<peer_ip>", "vrf": "<vrf>", "local_ip": "<local_ip>", "retry_interval": "<retry_interval>", "keepalive_attempts" : "<keepalive_attempts>", "keepalive_interval" : "<keepalive_interval>", }
-------------------------	--

where:

Element	Description
<i>status</i>	vLAG health check status; one of up, down.
<i>peer_ip</i>	IP address of peer switch. This can be the management IP address of the peer switch.
<i>vrf</i>	VRF context string.
<i>local_ip</i>	IP address of local switch. This can be the management IP address of the local switch.
<i>retry_interval</i>	Time interval, in seconds; an integer from 1-300. Default value: 30.
<i>keepalive_attempts</i>	Number of keepalive attempts made before declaring the peer is down; an integer from 1-24. Default value: 3.
<i>keepalive_interval</i>	Time interval, in seconds; an integer from 2-300. Default value: 5.

Configure vLAG Health Check Parameters

Configure vLAG health check parameters.

Request

Method Type	PUT
Request URI	/nos/api/cfg/vlag/health_check
Request Body (JSON)	{ "peer_ip": "<peer_ip>", "vrf": "<vrf>", "retry_interval": "<retry_interval>", "keepalive_attempts" : "<keepalive_attempts>", "keepalive_interval" : "<keepalive_interval>", }

where:

Element	Description
<i>peer_ip</i>	IP address of peer switch. This can be the management IP address of the peer switch.
<i>vrf</i>	VRF context string.
<i>retry_interval</i>	Time interval, in seconds; an integer from 1-300. Default value: 30.
<i>keepalive_attempts</i>	Number of keepalive attempts made before declaring the peer is down; an integer from 1-24. Default value: 3.
<i>keepalive_interval</i>	Time interval, in seconds; an integer from 2-300. Default value: 5.

Response

Response Body (JSON)	{ "status" : "<status>", "peer_ip": "<peer_ip>", "vrf": "<vrf>", "local_ip": "<local_ip>", "retry_interval": "<retry_interval>", "keepalive_attempts" : "<keepalive_attempts>", "keepalive_interval" : "<keepalive_interval>", }
-------------------------	--

where:

Element	Description
<i>peer_ip</i>	IP address of peer switch. This can be the management IP address of the peer switch.
<i>vrf</i>	VRF context string.

Element	Description
<i>retry_interval</i>	Time interval, in seconds; an integer from 1-300. Default value: 30.
<i>keepalive_attempts</i>	Number of keepalive attempts made before declaring the peer is down; an integer from 1-24. Default value: 3.
<i>keepalive_interval</i>	Time interval, in seconds; an integer from 2-300. Default value: 5.

Create vLAG Instance

Create a Virtual Link Aggregation Group (vLAG) instance.

Request

Method Type	POST
Request URI	/nos/api/cfg/vlag/instance
Request Body (JSON)	{ "inst_id": "<inst_id>", "port_aggregator": "<port_aggregator>", "status": "<status>", }

where:

Element	Description
<i>inst_id</i>	vLAG instance ID number; an integer from 1-64.
<i>port_aggregator</i>	LAG identifier; an integer from 1-4096.
<i>status</i>	vLAG status; one of <code>enable</code> , <code>disable</code> . Default value: <code>disable</code> .

Response

Response Body (JSON)	
-------------------------	--

Update vLAG Instance

Update a Virtual Link Aggregation Group (vLAG) instance.

Request

Method Type	PUT
Request URI	/nos/api/cfg/vlag/instance/<instance_id>
Request Body (JSON)	{ "port_aggregator": "<port_aggregator>", "status": "<status>", }

where:

Element	Description
<i>instance_id</i>	vLAG instance ID number; an integer from 1-64.
<i>port_aggregator</i>	LAG identifier; an integer from 1-4096.
<i>status</i>	vLAG status; one of <code>enable</code> , <code>disable</code> . Default value: <code>disable</code> .

Response

Response Body (JSON)	
-------------------------	--

Delete vLAG Instance

Delete a vLAG instance.

Request

Method Type	DELETE
Request URI	/nos/api/cfg/vlag/instance/<instance_id>
Request Body (JSON)	

where:

Element	Description
<i>instance_id</i>	vLAG instance ID number; an integer from 1-64.

Response

True if the operation succeeded; otherwise False.

Get vLAG Instance Configuration

Get configuration parameters for the specified vLAG instance.

Note: An *instance_id* value of None returns configuration parameters for all vLAG instances.

Request

Method Type	GET
Request URI	/nos/api/cfg/vlag/instance/<instance_id>
Request Body (JSON)	

where:

Element	Description
<i>instance_id</i>	vLAG instance ID; either None or an integer from 1-64.

Response

Response Body (JSON)	{ "port_aggregator": 6, "status": "enable", "inst_id": 2 }
-------------------------	--

where:

Element	Description
<i>inst_id</i>	vLAG instance ID number; an integer from 1-64.
<i>port_aggregator</i>	LAG identifier; an integer from 1-4096.
<i>status</i>	vLAG status; one of enable, disable. Default value: disable.

Get vLAG Instance Information

Get information about a vLAG instance.

Note: An *instance_id* value of None returns information about all vLAG instances.

Request

Method Type	GET
Request URI	/nos/api/info/vlag/instance/<instance_id>
Request Body (JSON)	

where:

Element	Description
<i>instance_id</i>	vLAG instance ID; either None or an integer from 1-64.

Response

Response Body (JSON)	{ "port_aggregator": "<port_aggregator>", "inst_id": "<inst_id>", "state": "<state>", "prev_state" : "<prev_state>", }
-------------------------	---

where:

Element	Description
<i>port_aggregator</i>	LAG identifier; an integer from 1-4096.
<i>inst_id</i>	ISL interface index.
<i>state</i>	ISL state; one of Down, Inactive, Active.
<i>prev_state</i>	Previous ISL state; one of Down, Inactive, Active.

VLAN

The following VLAN-related URIs are available:

- /nos/api/cfg/vlan GET, POST
- /nos/api/cfg/vlan/<vlan_id> GET, PUT, DELETE
- /nos/api/cfg/vlan_interface GET, PUT
- /nos/api/info/subnetvlan GET
- /nos/api/cfg/subnetvlan POST, DELETE
- /nos/api/cfg/subnetvlan/state/{if_name} GET, PUT

The following VLAN commands are available:

- [Get All VLANs](#)
- [Create VLAN](#)
- [Get VLAN](#)
- [Delete VLAN](#)
- [Get VLAN Properties of All Interfaces](#)
- [Get VLAN Interface Properties](#)
- [Update VLAN Interface Properties](#)
- [Add and Modify Subnet VLAN Rule](#)
- [Delete Subnet VLAN Rule](#)
- [Get Subnet VLAN Rule](#)
- [Get Interface Subnet VLAN Control Status](#)
- [Update Interface Subnet VLAN Control Status](#)

Get All VLANs

Get properties of all VLANs.

Request

Method Type	GET
Request URI	/nos/api/cfg/vlan/
Request Body (JSON)	

Response

Response Body (JSON)	[{ "vlan_name": "<vlan_name>", "vlan_id": "<vlan_id>", "admin_state": "<admin_state>", "mst_inst_id": "<mst_inst_id>", "interfaces": [{ "if_name": "<if_name>", "bridgeport_mode": "<bridgeport_mode>", "pvid": "<pvid>" }] }]
-------------------------	---

where:

Element	Description
<i>vlan_name</i>	The name of the VLAN.
<i>vlan_id</i>	VLAN number; an integer from 2-3999.
<i>admin_state</i>	The admin status; one of up, down.
<i>mst_inst_id</i>	MST instance ID; an integer from 0-64. Default value: 0. Note: Instance 0 refers to the CIST.
<i>interfaces</i>	Interface members of a VLAN. Note: The interface members must exist.
<i>if_name</i>	Ethernet interface name (String). Note: The ethernet interface must exist.
<i>bridgeport_mode</i>	Bridge port mode; one of access, trunk.
<i>pvid</i>	Native VLAN for a port (he access VLAN for access ports or the native VLAN for trunk ports); an integer from 1-3999. Default value: 1.

Create VLAN

Create a VLAN.

Request

Method Type	POST
Request URI	/nos/api/cfg/vlan
Request Body (JSON)	{ "vlan_name": "<vlan_name>", "vlan_id": "<vlan_id>", "admin_state": "<admin_state>", }

where:

Element	Description
<i>vlan_name</i>	VLAN name; a string up to 32 characters long. To create a VLAN with the default name, the <i>vlan_name</i> field must be null.
<i>vlan_id</i>	VLAN number.; an integer from 2-3999.
<i>admin_state</i>	The admin status; one of up, down

Response

Response Body (JSON)	{ "vlan_name": "Vlan10", "interfaces": [], "admin_state": "up", "vlan_id": 10, "mst_inst_id": 1 }
-------------------------	---

where:

Element	Description
<i>vlan_name</i>	The name of the VLAN.
<i>vlan_id</i>	VLAN number.; an integer from 2-3999.
<i>admin_state</i>	The admin status; one of up, down.

Get VLAN

Get properties of a VLAN.

Request

Method Type	GET
Request URI	/nos/api/cfg/vlan/<vlan_id>
Request Body (JSON)	

Response

Response Body (JSON)	{ "vlan_name": "<vlan_name>", "vlan_id": "<vlan_id>", "admin_state": "<admin_state>", "mst_inst_id": "<mst_inst_id>", "interfaces": [{ "if_name": "<if_name>", "bridgeport_mode": "<bridgeport_mode>", "pvid": "<pvid>" }] }
-------------------------	---

where:

Element	Description
<i>vlan_name</i>	The name of the VLAN.
<i>vlan_id</i>	VLAN number.; an integer from 2-3999.
<i>admin_state</i>	The admin status; one of up, down.
<i>mst_inst_id</i>	MST instance ID; an integer from 0-64. Default value: 0. Note: Instance 0 refers to the CIST.
<i>interfaces</i>	Interface members of a VLAN. Note: The interface members must exist.
<i>if_name</i>	Ethernet interface name (String). Note: The ethernet interface must exist.
<i>bridgeport_mode</i>	Bridge port mode; one of access, trunk.
<i>pvid</i>	Native VLAN for a port (he access VLAN for access ports or the native VLAN for trunk ports); an integer from 1-3999. Default value: 1.

Update VLAN

Update properties of a VLAN.

Note: If an element is not specified in a PUT request, no update for that element will be performed.

Request

Method Type	PUT
Request URI	/nos/api/cfg/vlan/<vlan_id>
Request Body (JSON)	{ "vlan_name": "<vlan_name>", "admin_state": "<admin_state>", }

where:

Element	Description
<i>vlan_name</i>	VLAN name; a string up to 32 characters long. To change a VLAN name with default name, the <i>vlan_name</i> field must be null.
<i>admin_state</i>	The admin status; one of up, down

Response

Response Body (JSON)	{ "vlan_name": "<vlan_name>", "vlan_id": "<vlan_id>", "admin_state": "<admin_state>", "mst_inst_id": "<mst_inst_id>", "interfaces": [{ "if_name": "<if_name>", "bridgeport_mode": "<bridge_port_mode>", "pvid": "<pvid>" }] }
-------------------------	---

where:

Element	Description
<i>vlan_name</i>	The name of the VLAN.
<i>vlan_id</i>	VLAN number.; an integer from 2-3999.
<i>admin_state</i>	The admin status; one of up, down.
<i>mst_inst_id</i>	MST instance ID; an integer from 0-64. Default value: 0. Note: Instance 0 refers to the CIST.
<i>interfaces</i>	Interface members of a VLAN. Note: The interface members must exist.

Element	Description
<i>if_name</i>	Ethernet interface name (String). Note: The ethernet interface must exist.
<i>bridgeport_mode</i>	Bridge port mode; one of <code>access</code> , <code>trunk</code> .
<i>pvid</i>	Native VLAN for a port (the access VLAN for access ports or the native VLAN for trunk ports); an integer from 1-3999. Default value: 1.

Delete VLAN

Delete a VLAN.

Note: If the specified *vlan_id* is all, all user-created VLANs will be deleted.

Request

Method Type	DELETE
Request URI	/nos/api/cfg/vlan/<vlan_id>
Request Body (JSON)	

Get VLAN Properties of All Interfaces

This command returns VLAN properties for all switch interfaces.

Request

Method Type	GET
Request URI	/nos/api/cfg/vlan_interface
Request Body (JSON)	

Response

Response Body (JSON)	[{ "if_name": "{if_name}", "bridgeport_mode": "{bridgeport_mode}", "pvid": "{pvid}", "vlans": ["{vlan_id}"], "egress_type": "{egress_type}", "egress_type_vlans" : ["{vlan_id}"] }]
----------------------	--

where:

Element	Description
if_name	The name of the switch interface. Valid value: <ul style="list-style-type: none">● string (for example, <i>Ethernet1/12</i>)
bridgeport_mode	The bridge port mode. Valid values: <ul style="list-style-type: none">● access● trunk
pvid	The Native VLAN ID for switch ports set up as trunk ports, or the Access VLAN ID for switch ports set up as access ports. Valid value: <ul style="list-style-type: none">● 1 - 3999 Default value: 1
vlans	The VLANs that the switch port is a member of. Valid values: <ul style="list-style-type: none">● all● none● 1 - 3999

Element	Description
vlan_id	The VLAN ID. Valid values: <ul style="list-style-type: none">● 1- 3999
egress_type	Whether traffic is egress tagged when the interface is in Hybrid mode. Valid values: <ul style="list-style-type: none">● tagged● untagged
egress_type_vlans	The VLANs on which traffic is egress tagged.

Get VLAN Interface Properties

This command returns VLAN properties for a specific switch interface.

Request

Method Type	GET
Request URI	/nos/api/cfg/vlan_interface/{if_name}
Request Body (JSON)	

Response

Response Body (JSON)	{ "if_name": "{if_name}", "bridgeport_mode": "{bridgeport_mode}", "pvid": "{pvid}", "vlans": ["{vlan_id}"], "egress_type": "{egress_type}", "egress_type_vlans" : ["{vlan_id}"] }
----------------------	--

where:

Element	Description
if_name	The name of the switch interface. Valid value: <ul style="list-style-type: none">● string (for example, <i>Ethernet1/12</i>)
bridgeport_mode	The bridge port mode. Valid values: <ul style="list-style-type: none">● access● trunk
pvid	The Native VLAN ID for switch ports set up as trunk ports, or the Access VLAN ID for switch ports set up as access ports. Valid value: <ul style="list-style-type: none">● 1 - 3999 Default value: 1
vlans	The VLANs that the switch port is a member of. Valid values: <ul style="list-style-type: none">● all● none● 1 - 3999
vlan_id	The VLAN ID. Valid values: <ul style="list-style-type: none">● 1- 3999

Element	Description
<code>egress_type</code>	Whether traffic is egress tagged when the interface is in Hybrid mode. Valid values: <ul style="list-style-type: none">● <code>tagged</code>● <code>untagged</code>
<code>egress_type_vlans</code>	The VLANs on which traffic is egress tagged.

Update VLAN Interface Properties

This command updates the VLAN properties for a specific switch interface.

Request

Method Type	PUT
Request URI	/nos/api/cfg/vlan_interface/{if_name}
Request Body (JSON)	{ "if_name": "{if_name}", "bridgeport_mode": "{bridgeport_mode}", "pvid": "{pvid}", "vlans": ["{vlan_id}"], "egress_type": "{egress_type}", "egress_type_vlans" : ["{vlan_id}"] }

where:

Element	Description
if_name	The name of the switch interface. Valid value: <ul style="list-style-type: none">● string (for example, <i>Ethernet1/12</i>)
bridgeport_mode	The bridge port mode. Valid values: <ul style="list-style-type: none">● access● trunk
pvid	The Native VLAN ID for switch ports set up as trunk ports, or the Access VLAN ID for switch ports set up as access ports. Valid value: <ul style="list-style-type: none">● 1 - 3999 Default value: 1
vlans	The VLANs that the switch port is a member of. Valid values: <ul style="list-style-type: none">● all● none● 1 - 3999
vlan_id	The VLAN ID. Valid values: <ul style="list-style-type: none">● 1- 3999

Element	Description
egress_type	Whether traffic is egress tagged when the interface is in Hybrid mode. Valid values: <ul style="list-style-type: none">● tagged● untagged
egress_type_vlans	The VLANs on which traffic is egress tagged.

Response

Response Body (JSON)	{ "if_name": "{if_name}", "bridgeport_mode": "{bridgeport_mode}", "pvid": "{pvid}", "vlans": ["{vlan_id}"], "egress_type": "{egress_type}", "egress_type_vlans" : ["{vlan_id}"] }
----------------------	--

where:

Element	Description
if_name	The name of the switch interface. Valid value: <ul style="list-style-type: none">● string (for example, <i>Ethernet1/12</i>)
bridgeport_mode	The bridge port mode. Valid values: <ul style="list-style-type: none">● access● trunk
pvid	The Native VLAN ID for switch ports set up as trunk ports, or the Access VLAN ID for switch ports set up as access ports. Valid value: <ul style="list-style-type: none">● 1 - 3999 Default value: 1
vlans	The VLANs that the switch port is a member of. Valid values: <ul style="list-style-type: none">● all● none● 1 - 3999
vlan_id	The VLAN ID. Valid values: <ul style="list-style-type: none">● 1- 3999

Element	Description
<code>egress_type</code>	Whether traffic is egress tagged when the interface is in Hybrid mode. Valid values: <ul style="list-style-type: none">● tagged● untagged
<code>egress_type_vlans</code>	The VLANs on which traffic is egress tagged.

Add and Modify Subnet VLAN Rule

This command creates a new IP subnet based VLAN classification rule or modifies an existing rule.

Request

Method Type	POST
Request URI	/nos/api/cfg/subnetvlan/
Request Body (JSON)	{ "ip_addr": "{ip_addr}", "ip_prefix_len": "{ip_prefix_len}", "vlan_id": "{vlan_id}", "priority": "{priority}" }

where:

Element	Description
ip_addr	The source IP address. Valid value: <ul style="list-style-type: none">● <i>string</i>
ip_prefix_len	The IP prefix length. Valid value: <ul style="list-style-type: none">● 0 - 32
vlan_id	The VLAN that is the target of the classification rule. Valid value: <ul style="list-style-type: none">● 1 - 4093
priority	The assigned VLAN priority. Valid value: <ul style="list-style-type: none">● 0 - 7

Response

Response Body (JSON)	{ "ip_addr": "{ip_addr}", "ip_prefix_len": "{ip_prefix_len}", "vlan_id": "{vlan_id}", "priority": "{priority}" }
----------------------	---

where:

Element	Description
ip_addr	The source IP address. Valid value: <ul style="list-style-type: none">● <i>string</i>
ip_prefix_len	The IP prefix length. Valid value: <ul style="list-style-type: none">● 0 - 32
vlan_id	The VLAN that is the target of the classification rule. Valid value: <ul style="list-style-type: none">● 1 - 4093
priority	The assigned VLAN priority. Valid value: <ul style="list-style-type: none">● 0 - 7

Delete Subnet VLAN Rule

This command deletes an existing IP subnet based VLAN classification rule by specifying its IP address/prefix or VLAN.

Note: If an IP address/prefix or a VLAN are not specified, this command deletes all IP subnet based VLAN classification rules.

Request

Method Type	PUT
Request URI	/nos/api/cfg/subnetvlan
Request Body (JSON)	{ "ip_addr": "{ip_addr}", "ip_prefix_len": "{ip_prefix_len}", "vlan_id": "{vlan_id}" }

where:

Element	Description
ip_addr	The source IP address. Valid value: <ul style="list-style-type: none">● <i>string</i>
ip_prefix_len	The IP prefix length. Valid value: <ul style="list-style-type: none">● 0 - 32
vlan_id	The VLAN that is the target of the classification rule. Valid value: <ul style="list-style-type: none">● 1 - 4093

Response

Response Body (JSON)	
----------------------	--

Get Subnet VLAN Rule

This command returns IP subnet based VLAN classification rule information.

Note: If no IP address/prefix or VLAN are specified, this command returns information about all IP subnet based VLAN classification rules.

Request

Method Type	POST
Request URI	/nos/api/info/subnetvlan
Request Body (JSON)	{ "ip_addr": "{ip_addr}", "ip_prefix_len": "{ip_prefix_len}", "vlan_id": "{vlan_id}" }

where:

Element	Description
ip_addr	The source IP address. Valid value: <ul style="list-style-type: none">● <i>string</i>
ip_prefix_len	The IP prefix length. Valid value: <ul style="list-style-type: none">● 0 - 32
vlan_id	The VLAN that is the target of the classification rule. Valid value: <ul style="list-style-type: none">● 1 - 4093

Response

Response Body (JSON)	{ "ip_addr": "{ip_addr}", "ip_prefix_len": "{ip_prefix_len}", "vlan_id": "{vlan_id}", "priority": "{priority}" }
----------------------	---

where:

Element	Description
ip_addr	The source IP address. Valid value: <ul style="list-style-type: none">● <i>string</i>
ip_prefix_len	The IP prefix length. Valid value: <ul style="list-style-type: none">● 0 - 32

Element	Description
vlan_id	The VLAN that is the target of the classification rule. Valid value: <ul style="list-style-type: none">● 1 - 4093
priority	The assigned VLAN priority. Valid value: <ul style="list-style-type: none">● 0 - 7

Get Interface Subnet VLAN Control Status

This command returns IP subnet based VLAN control status for a specific switch interface.

Request

Method Type	GET
Request URI	/nos/api/cfg/subnetvlan/state/{if_name}
Request Body (JSON)	

Response

Response Body (JSON)	{ "subnet_vlan_status": "{enabled disabled}" }
----------------------	--

where:

Element	Description
subnet_vlan_status	The IP subnet based VLAN control status of the interface. Valid value: <ul style="list-style-type: none">• enabled• disabled

Update Interface Subnet VLAN Control Status

This command updates the IP subnet based VLAN control status for a specific switch interface.

Request

Method Type	PUT
Request URI	/nos/api/cfg/subnetvlan/state/{if_name}
Request Body (JSON)	{ "subnet_vlan_status": "{enabled disabled}" }

where:

Element	Description
<i>if_name</i>	The name of the switch interface. Valid value: <ul style="list-style-type: none">● <i>string</i> (for example, <i>Ethernet1/12</i>)
<i>subnet_vlan_status</i>	The IP subnet based VLAN control status of the interface. Valid value: <ul style="list-style-type: none">● enabled● disabled

Response

Response Body (JSON)	{ "subnet_vlan_status": "{enabled disabled}" }
----------------------	--

where:

Element	Description
<i>subnet_vlan_status</i>	The IP subnet based VLAN control status of the interface. Valid value: <ul style="list-style-type: none">● enabled● disabled

VLAN Interface Properties

The following VLAN interface property URIs are available:

- /nos/api/cfg/vlan_interface GET, PUT

The following VLAN interface property commands are available:

- Get VLAN Properties of All Interfaces
 - Get VLAN Interface Properties
 - Update VLAN Interface Properties

Get VLAN Properties of All Interfaces

Get the VLAN properties of all Ethernet interfaces.

Request

Method Type	GET
Request URI	/nos/api/cfg/vlan_interface
Request Body (JSON)	

Response

Response Body (JSON)	[{ "if_name": "<if_name>", "bridgeport_mode": "<bridgeport_mode>", "pvid": "<pvid>", "vlans": ["<vlan_id>"] }]
-------------------------	---

where:

Element	Description
<i>if_name</i>	Ethernet interface name (String). Note: The Ethernet interface must exist.
<i>bridgeport_mode</i>	Bridge port mode; one of access , trunk .
<i>pvid</i>	Native VLAN for a port (the access VLAN for access ports or the native VLAN for trunk ports); an integer from 1-3999. Default value: 1.
<i>vlans</i>	VLAN memberships; either all , none , or an integer from 1-3999.

Get VLAN Interface Properties

Get the VLAN properties of an Ethernet interface.

Request

Method Type	GET
Request URI	/nos/api/cfg/vlan_interface/<if_name>
Request Body (JSON)	

Response

Response Body (JSON)	{ "if_name": "<if_name>", "bridgeport_mode": "<bridge_port_mode>", "pvid": "<pvid>", "vlans": ["<vlan_id>"] }
-------------------------	--

where:

Element	Description
<i>if_name</i>	Ethernet interface name (String). Note: The Ethernet interface must exist.
<i>bridgeport_mode</i>	Bridge port mode; one of access , trunk .
<i>pvid</i>	Native VLAN for a port (the access VLAN for access ports or the native VLAN for trunk ports); an integer from 1-3999. Default value: 1.
<i>vlans</i>	VLAN memberships; either all , none , or an integer from 1-3999.

Update VLAN Interface Properties

Update the VLAN properties of an Ethernet interface.

Request

Method Type	PUT
Request URI	/nos/api/cfg/vlan_interface/<if_name>
Request Body (JSON)	{ "if_name": "<if_name>", "bridgeport_mode": "<bridgeport_mode>" "pvid": "<pvid>", "vlans": ["<vlan_id>"] }

where:

Element	Description
<i>if_name</i>	Ethernet interface name (String). Note: The Ethernet interface must exist.
<i>bridgeport_mode</i>	Bridge port mode; one of <code>access</code> , <code>trunk</code>
<i>pvid</i>	Native VLAN for a port (the access VLAN for access ports or the native VLAN for trunk ports); an integer from 1-3999. Default value: 1.
<i>vlans</i>	(Optional) VLAN memberships; <code>all</code> , <code>none</code> , or an integer from 1-3999.

Note: If an element is not specified in a PUT request, no update for that element will be performed.

Response

Response Body (JSON)	{ "if_name": "<if_name>", "bridge_port": "<bridge_port>", "bridgeport_mode": "<bridgeport_mode>", "pvid": "<pvid>", "vlans": ["<vlans>"] }
-------------------------	--

where:

Element	Description
<i>if_name</i>	Ethernet interface name (String). Note: The Ethernet interface must exist.
<i>bridge_port</i>	Whether or not the port is a bridge port; one of <code>yes</code> (default), <code>no</code> .

Element	Description
<i>bridgeport_mode</i>	Bridge port mode; one of <code>access</code> , <code>trunk</code>
<i>pvid</i>	Native VLAN for a port (the access VLAN for access ports or the native VLAN for trunk ports); an integer from 1-3999. Default value: 1.
<i>vlans</i>	(Optional) VLAN memberships; <code>all</code> , <code>none</code> , or an integer from 1-3999.

Update VLAN Interface Allowed VLAN List

This command updates the allowed VLAN list for a specific VLAN interface.

Request

Method Type	PUT
Request URI	/nos/api/cfg/vlan_interface
Request Body (JSON)	<pre>{ "if_name": "{if_name}", "bridgeport_mode": "{access trunk hybrid}", "pvid": "{pvid}", "vlans": ["operation": "{add remove except}", "vlan_id": "{vlan_id}"] "egress_type": "{tagged untagged}", "egress_type_vlans": "{vlan_range}" }</pre>

where:

Element	Description
if_name	The name of the switch interface. Valid value: <ul style="list-style-type: none">● <i>interface name</i>
bridgeport_mode	The bridge port mode. Valid values: <ul style="list-style-type: none">● <i>access</i>● <i>trunk</i>● <i>hybrid</i>
pvid	The access VLAN, if bridge port mode is configured to access. The native VLAN, if bridge port mode is configured to trunk. Valid value: <ul style="list-style-type: none">● 1-3999 Default value: 1
vlans	The list of allowed VLANs.
operation	The type of operation to perform. Valid values: <ul style="list-style-type: none">● <i>add</i> - adds the VLAN to the allowed VLAN list● <i>remove</i> - removes the VLAN from the allowed VLAN list● <i>except</i> - excepts the VLAN from the allowed VLAN list
vlan_id	The VLANs to add, remove, or make an exception for. Valid value: <ul style="list-style-type: none">● 1-3999

Element	Description
egress_type	<p>Whether the switch tags egress traffic when in hybrid bridge port mode.</p> <p>Valid values:</p> <ul style="list-style-type: none"> ● <i>tagged</i> ● <i>untagged</i>
egress_type_vlans	<p>The VLANs on which the switch tags egress traffic.</p> <p>Valid value:</p>
	<ul style="list-style-type: none"> ● 1-3999

Response

```
Response  
Body (JSON) {  
    "if_name": "{if_name}",  
    "bridgeport_mode": "{access|trunk|hybrid}",  
    "pvid": "{pvid}",  
    "vlans":  
        [  
            "operation": "{add|remove|except}",  
            "vlan_id": "{vlan_id}"  
        ]  
    "egress_type": "{tagged|untagged}",  
    "egress_type_vlans": "{vlan_range}"  
}
```

where:

Element	Description
<code>if_name</code>	<p>The name of the switch interface. Valid value:</p> <ul style="list-style-type: none">● <i>interface name</i>
<code>bridgeport_mode</code>	<p>The bridge port mode. Valid values:</p> <ul style="list-style-type: none">● <i>access</i>● <i>trunk</i>● <i>hybrid</i>
<code>pvid</code>	<p>The access VLAN, if bridge port mode is configured to access. The native VLAN, if bridge port mode is configured to trunk. Valid value:</p> <ul style="list-style-type: none">● 1-3999 <p>Default value: 1</p>
<code>vlans</code>	The list of allowed VLANs.

Element	Description
operation	The type of operation to perform. Valid values: <ul style="list-style-type: none">● <i>add</i> - adds the VLAN to the allowed VLAN list● <i>remove</i> - removes the VLAN from the allowed VLAN list● <i>except</i> - excepts the VLAN from the allowed VLAN list
vlan_id	The VLANs to add, remove, or make an exception for. Valid value: <ul style="list-style-type: none">● <i>1-3999</i>
egress_type	Whether the switch tags egress traffic when in hybrid bridge port mode. Valid values: <ul style="list-style-type: none">● <i>tagged</i>● <i>untagged</i>
egress_type_vlans	The VLANs on which the switch tags egress traffic. Valid value: <ul style="list-style-type: none">● <i>1-3999</i>

VRF

The following VRF URIs are available:

- /nos/api/cfg/vrf GET
- /nos/api/cfg/vrf/<vrf_name> GET

The following VRF commands are available:

- [Get All VRFs](#)
- [Get VRF](#)

Get All VRFs

Get properties of all VRFs.

Request

Method Type	GET
Request URI	/nos/api/cfg/vrf
Request Body (JSON)	

Response

Response Body (JSON)	[{ "vrf_name": "<vrf_name>", "interfaces": ["<if_name>"] }]
-------------------------	--

where:

Element	Description
<i>vrf_name</i>	VRF name; a string up to 64 characters long.
<i>interfaces</i>	Interface members of the VRF. Note: The interfaces must exist.

Get VRF

Get properties of one VRF.

Request

Method Type	GET
Request URI	/nos/api/cfg/vrf/<vrf_name>
Request Body (JSON)	

Response

Response Body (JSON)	[{ "vrf_name": "<vrf_name>", "interfaces": ["<if_name>"] }]
-------------------------	--

where:

Element	Description
<i>vrf_name</i>	VRF name; a string up to 64 characters long.
<i>interfaces</i>	Interface members of the VRF. Note: The interfaces must exist.

VRRP

The following VRRP URIs are available:

- /nos/api/cfg/vrrp GET
- /nos/api/cfg/vrrp/<if_name> GET, POST
- /nos/api/cfg/vrrp/<if_name>/<vr_id> GET, PUT, DELETE

The following VRRP commands are available:

- [Get VRRP VRs of All Interfaces](#)
- [Get VRRP VRs of One Interface](#)
- [Create VRRP VR](#)
- [Get VRRP VR](#)
- [Update VRRP VR](#)
- [Delete VRRP VR](#)

Get VRRP VRs of All Interfaces

Get properties of all VRRP VRs of all interfaces.

Request

Method Type	GET
Request URI	/nos/api/cfg/vrrp
Request Body (JSON)	

Response

Response Body (JSON)	[{ "if_name": "<if_name>", "vr_id": "<vr_id>", "ip_addr": "<ip_addr>", "ad_intvl": "<ad_intvl>", "preempt": "<preempt>", "prio": "<prio>", "admin_state": "<admin_state>", "oper_state": "<oper_state>", "track_if": "<track_if>", "accept_mode": "<accept_mode>", "switch_back_delay": "<switch_back_delay>", "v2_compt": "<v2_compt>" }]
-------------------------	---

where:

Element	Description
<i>if_name</i>	Interface name. Note: The interface must exist.
<i>vr_id</i>	The VRRP session Virtual Router (VR) ID; an integer from 1-255. Default value is 0.
<i>ip_addr</i>	The IP address of the VR; a valid IPv4 address.
<i>ad_intvl</i>	Advertisement interval (The number of centi-seconds between advertisements for VRRPv3); a multiple of 5 from 5-4095. Default value: 100 centi-seconds.
<i>preempt</i>	Enable the preemption of a lower priority master; one of yes (default), no.
<i>prio</i>	The priority of the VR on the switch; an integer from 1-254. Default value: 100.
<i>admin_state</i>	Enable the VR one of up (default), down.

Element	Description
<i>oper_state</i>	The operation state of the VR; one of master , backup , init .
<i>track_if</i>	The interface to track by this VR. Default value: none . Note: If an interface is specified, it must exist.
<i>accept_mode</i>	Enables or disables the accept mode for this session; one of yes (default), no .
<i>switch_back_delay</i>	The switch back delay interval; an integer from 1-500000, or 0 to disable (default).
<i>v2_compt</i>	Enables backward compatibility for VRRPv2 for the VR; one of yes , no (default).

Get VRRP VRs of One Interface

Get properties of all VRRP VRs under one specified interface.

Request

Method Type	GET
Request URI	/nos/api/cfg/vrrp/<if_name>
Request Body (JSON)	

where:

Element	Description
<i>if_name</i>	Interface name. Note: The interface must exist.

Response

Response Body (JSON)	[{ "if_name": "<if_name>", "vr_id": "<vr_id>", "ip_addr": "<ip_addr>", "ad_intvl": "<ad_intvl>", "preempt": "<preempt>", "prio": "<prio>", "admin_state": "<admin_state>", "oper_state": "<oper_state>", "track_if": "<track_if>", "accept_mode": "<accept_mode>", "switch_back_delay": "<switch_back_delay>", "v2_compt": "<v2_compt>" }]
-------------------------	---

where:

Element	Description
<i>if_name</i>	Interface name. Note: The interface must exist.
<i>vr_id</i>	Virtual Router (VR) identifier; an integer from 1-255.
<i>ip_addr</i>	The IP address of the VR; a valid IPv4 address.
<i>ad_intvl</i>	Advertisement interval (The number of centi-seconds between advertisements for VRRPv3); a multiple of 5 from 5-4095. Default value: 100 centi-seconds.

Element	Description
<i>preempt</i>	Enable the preemption of a lower priority master; one of yes (default), no.
<i>prio</i>	The priority of the VR on the switch; an integer from 1-254. Default value: 100.
<i>admin_state</i>	Enable the VR one of up (default), down.
<i>oper_state</i>	The operation state of the VR; one of master, backup, init.
<i>track_if</i>	The interface to track by this VR. Default value: none. Note: If an interface is specified, it must exist.
<i>accept_mode</i>	Enables or disables the accept mode for this session; one of yes (default), no.
<i>switch_back_delay</i>	The switch back delay interval; an integer from 1-500000, or 0 to disable (default).
<i>v2_compt</i>	Enables backward compatibility for VRRPv2 for the VR; one of yes, no (default).

Create VRRP VR

Create a VRRP VR.

Request

Method Type	POST
Request URI	/nos/api/cfg/vrrp/<if_name>
Request Body (JSON)	{ "if_name": "<if_name>", "vr_id": "<vr_id>", "ip_addr": "<ip_addr>", "ad_intvl": "<ad_intvl>", "preempt": "<preempt>", "prio": "<prio>", "admin_state": "<admin_state>", "track_if": "<track_if>", "accept_mode": "<accept_mode>", "switch_back_delay": "<switch_back_delay>", "v2_compt": "<v2_compt>" }

where:

Element	Description
<i>if_name</i>	Interface name. Note: The interface must exist.
<i>vr_id</i>	Virtual Router (VR) identifier; an integer from 1-255.
<i>ip_addr</i>	The IP address of the VR; a valid IPv4 address.
<i>ad_intvl</i>	Advertisement interval (The number of centi-seconds between advertisements for VRRPv3); a multiple of 5 from 5-4095. Default value: 100 centi-seconds.
<i>preempt</i>	Enable the preemption of a lower priority master; one of yes (default), no.
<i>prio</i>	The priority of the VR on the switch; an integer from 1-254. Default value: 100.
<i>admin_state</i>	Enable the VR one of up (default), down.
<i>oper_state</i>	The operation state of the VR; one of master, backup, init.
<i>track_if</i>	The interface to track by this VR. Default value: none. Note: If an interface is specified, it must exist.
<i>accept_mode</i>	Enables or disables the accept mode for this session; one of yes (default), no.

Element	Description
<i>switch_back_delay</i>	The switch back delay interval; an integer from 1-500000, or 0 to disable (default).
<i>v2_compt</i>	Enables backward compatibility for VRRPv2 for the VR; one of yes, no (default).

Response

Response Body (JSON)	[{ "if_name": "<if_name>", "vr_id": "<vr_id>", "ip_addr": "<ip_addr>", "ad_intvl": "<ad_intvl>", "preempt": "<preempt>", "prio": "<prio>", "admin_state": "<admin_state>", "oper_state": "<oper_state>", "track_if": "<track_if>", "accept_mode": "<accept_mode>", "switch_back_delay": "<switch_back_delay>", "v2_compt": "<v2_compt>" }]
-------------------------	---

where:

Element	Description
<i>if_name</i>	Interface name. Note: The interface must exist.
<i>vr_id</i>	Virtual Router (VR) identifier; an integer from 1-255.
<i>ip_addr</i>	The IP address of the VR; a valid IPv4 address.
<i>ad_intvl</i>	Advertisement interval (The number of centi-seconds between advertisements for VRRPv3); a multiple of 5 from 5-4095. Default value: 100 centi-seconds.
<i>preempt</i>	Enable the preemption of a lower priority master; one of yes (default), no.
<i>prio</i>	The priority of the VR on the switch; an integer from 1-254. Default value: 100.
<i>admin_state</i>	Enable the VR one of up (default), down.
<i>oper_state</i>	The operation state of the VR; one of master, backup, init.
<i>track_if</i>	The interface to track by this VR. Default value: none. Note: If an interface is specified, it must exist.
<i>accept_mode</i>	Enables or disables the accept mode for this session; one of yes (default), no.

Element	Description
<i>switch_back_delay</i>	The switch back delay interval; an integer from 1-500000, or 0 to disable (default).
<i>v2_compt</i>	Enables backward compatibility for VRRPv2 for the VR; one of yes, no (default).

Get VRRP VR

Get properties of a VRRP VR.

Request

Method Type	GET
Request URI	/nos/api/cfg/vrrp/<if_name>/<vr_id>
Request Body (JSON)	

Response

Response Body (JSON)	{ "if_name": "<if_name>", "vr_id": "<vr_id>", "ip_addr": "<ip_addr>", "ad_intvl": "<ad_intvl>", "preempt": "<preempt>", "prio": "<prio>", "admin_state": "<admin_state>", "oper_state": "<oper_state>", "track_if": "<track_if>", "accept_mode": "<accept_mode>", "switch_back_delay": "<switch_back_delay>", "v2_compt": "<v2_compt>" }
-------------------------	---

where:

Element	Description
<i>if_name</i>	Interface name. Note: The interface must exist.
<i>vr_id</i>	Virtual Router (VR) identifier; an integer from 1-255.
<i>ip_addr</i>	The IP address of the VR; a valid IPv4 address.
<i>ad_intvl</i>	Advertisement interval (The number of centi-seconds between advertisements for VRRPv3); a multiple of 5 from 5-4095. Default value: 100 centi-seconds.
<i>preempt</i>	Enable the preemption of a lower priority master; one of yes (default), no.
<i>prio</i>	The priority of the VR on the switch; an integer from 1-254. Default value: 100.
<i>admin_state</i>	Enable the VR one of up (default), down.
<i>oper_state</i>	The operation state of the VR; one of master, backup, init.

Element	Description
<i>track_if</i>	The interface to track by this VR. Default value: none . Note: If an interface is specified, it must exist.
<i>accept_mode</i>	Enables or disables the accept mode for this session; one of yes (default), no .
<i>switch_back_delay</i>	The switch back delay interval; an integer from 1-500000, or 0 to disable (default).
<i>v2_compt</i>	Enables backward compatibility for VRRPv2 for the VR; one of yes , no (default).

Update VRRP VR

Update the properties of a VRRP VR.

Request

Method Type	PUT
Request URI	/nos/api/cfg/vrrp/<if_name>/<vr_id>
Request Body (JSON)	{ "if_name": "<if_name>", "vr_id": "<vr_id>", "ip_addr": "<ip_addr>", "ad_intvl": "<ad_intvl>", "preempt": "<preempt>", "prio": "<prio>", "admin_state": "<admin_state>", "track_if": "<track_if>", "accept_mode": "<accept_mode>", "switch_back_delay": "<switch_back_delay>", "v2_compt": "<v2_compt>" }

where:

Element	Description
<i>if_name</i>	Interface name. Note: The interface must exist.
<i>vr_id</i>	Virtual Router (VR) identifier; an integer from 1-255.
<i>ip_addr</i>	The IP address of the VR; a valid IPv4 address.
<i>ad_intvl</i>	Advertisement interval (The number of centi-seconds between advertisements for VRRPv3); a multiple of 5 from 5-4095. Default value: 100 centi-seconds.
<i>preempt</i>	Enable the preemption of a lower priority master; one of yes (default), no.
<i>prio</i>	The priority of the VR on the switch; an integer from 1-254. Default value: 100.
<i>admin_state</i>	Enable the VR; one of up (default), down.
<i>oper_state</i>	The operation state of the VR; one of master, backup, init.
<i>track_if</i>	The interface to track by this VR. Default value: none. Note: If an interface is specified, it must exist.
<i>accept_mode</i>	Enables or disables the accept mode for this session; one of yes (default), no.

Element	Description
<i>switch_back_delay</i>	The switch back delay interval; an integer from 1-500000, or 0 to disable (default).
<i>v2_compt</i>	Enables backward compatibility for VRRPv2 for the VR; one of yes, no (default).

Response

Response Body (JSON)	<pre>{ "if_name": "<if_name>", "vr_id": "<vr_id>", "ip_addr": "<ip_addr>", "ad_intvl": "<ad_intvl>", "preempt": "<preempt>", "prio": "<prio>", "admin_state": "<admin_state>", "oper_state": "<oper_state>", "track_if": "<track_if>", "accept_mode": "<accept_mode>", "switch_back_delay": "<switch_back_delay>", "v2_compt": "<v2_compt>" }</pre>
----------------------	---

where:

Element	Description
<i>if_name</i>	Interface name. Note: The interface must exist.
<i>vr_id</i>	Virtual Router (VR) identifier; an integer from 1-255.
<i>ip_addr</i>	The IP address of the VR; a valid IPv4 address.
<i>ad_intvl</i>	Advertisement interval (The number of centi-seconds between advertisements for VRRPv3); a multiple of 5 from 5-4095. Default value: 100 centi-seconds.
<i>preempt</i>	Enable the preemption of a lower priority master; one of yes (default), no.
<i>prio</i>	The priority of the VR on the switch; an integer from 1-254. Default value: 100.
<i>admin_state</i>	Enable the VR one of up (default), down.
<i>oper_state</i>	The operation state of the VR; one of master, backup, init.
<i>track_if</i>	The interface to track by this VR. Default value: none. Note: If an interface is specified, it must exist.
<i>accept_mode</i>	Enables or disables the accept mode for this session; one of yes (default), no.

Element	Description
<i>switch_back_delay</i>	The switch back delay interval; an integer from 1-500000, or 0 to disable (default).
<i>v2_compt</i>	Enables backward compatibility for VRRPv2 for the VR; one of yes, no (default).

Delete VRRP VR

Delete a VRRP VR.

Note: If the specified *vrid* is **all**, all VRRP VRs entries in the specified interface will be deleted.

Request

Method Type	DELETE
Request URI	/nos/api/cfg/vrrp/<if_name>/<vrid>
Request Body (JSON)	

Appendix A. Getting Help and Technical Assistance

If you need help, service, or technical assistance or just want more information about Lenovo products, you will find a wide variety of sources available from Lenovo to assist you.

Use this information to obtain additional information about Lenovo and Lenovo products, and determine what to do if you experience a problem with your Lenovo system or optional device.

Note: This section includes references to IBM web sites and information about obtaining service. IBM is Lenovo's preferred service provider for the System x, Flex System, and NeXtScale System products.

Before you call, make sure that you have taken these steps to try to solve the problem yourself.

If you believe that you require warranty service for your Lenovo product, the service technicians will be able to assist you more efficiently if you prepare before you call.

- Check all cables to make sure that they are connected.
- Check the power switches to make sure that the system and any optional devices are turned on.
- Check for updated software, firmware, and operating-system device drivers for your Lenovo product. The Lenovo Warranty terms and conditions state that you, the owner of the Lenovo product, are responsible for maintaining and updating all software and firmware for the product (unless it is covered by an additional maintenance contract). Your service technician will request that you upgrade your software and firmware if the problem has a documented solution within a software upgrade.
- If you have installed new hardware or software in your environment, check the [IBM ServerProven website](#) to make sure that the hardware and software is supported by your product.
- Go to the [IBM Support portal](#) to check for information to help you solve the problem.
- Gather the following information to provide to the service technician. This data will help the service technician quickly provide a solution to your problem and ensure that you receive the level of service for which you might have contracted.
 - Hardware and Software Maintenance agreement contract numbers, if applicable
 - Machine type number (if applicable—Lenovo 4-digit machine identifier)
 - Model number
 - Serial number
 - Current system UEFI and firmware levels
 - Other pertinent information such as error messages and logs

- Start the process of determining a solution to your problem by making the pertinent information available to the service technicians. The IBM service technicians can start working on your solution as soon as you have completed and submitted an Electronic Service Request.

You can solve many problems without outside assistance by following the troubleshooting procedures that Lenovo provides in the online help or in the Lenovo product documentation. The Lenovo product documentation also describes the diagnostic tests that you can perform. The documentation for most systems, operating systems, and programs contains troubleshooting procedures and explanations of error messages and error codes. If you suspect a software problem, see the documentation for the operating system or program.

Appendix B. Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area.

Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service.

Lenovo may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

Lenovo (United States), Inc.
1009 Think Place - Building One
Morrisville, NC 27560
U.S.A.

Attention: Lenovo Director of Licensing

LENOVO PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. Lenovo may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties.

Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary.

Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk.

Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

Trademarks

Lenovo, the Lenovo logo, Flex System, System x, NeXtScale System, and X-Architecture are trademarks of Lenovo in the United States, other countries, or both.

Intel and Intel Xeon are trademarks of Intel Corporation in the United States, other countries, or both.

Internet Explorer, Microsoft, and Windows are trademarks of the Microsoft group of companies.

Linux is a registered trademark of Linus Torvalds.

Other company, product, or service names may be trademarks or service marks of others.

Important Notes

Processor speed indicates the internal clock speed of the microprocessor; other factors also affect application performance.

CD or DVD drive speed is the variable read rate. Actual speeds vary and are often less than the possible maximum.

When referring to processor storage, real and virtual storage, or channel volume, KB stands for 1 024 bytes, MB stands for 1 048 576 bytes, and GB stands for 1 073 741 824 bytes.

When referring to hard disk drive capacity or communications volume, MB stands for 1 000 000 bytes, and GB stands for 1 000 000 000 bytes. Total user-accessible capacity can vary depending on operating environments.

Maximum internal hard disk drive capacities assume the replacement of any standard hard disk drives and population of all hard-disk-drive bays with the largest currently supported drives that are available from Lenovo.

Maximum memory might require replacement of the standard memory with an optional memory module.

Each solid-state memory cell has an intrinsic, finite number of write cycles that the cell can incur. Therefore, a solid-state device has a maximum number of write cycles that it can be subjected to, expressed as total bytes written (TBW). A device that has exceeded this limit might fail to respond to system-generated commands or might be incapable of being written to. Lenovo is not responsible for replacement of a device that has exceeded its maximum guaranteed number of program/erase cycles, as documented in the Official Published Specifications for the device.

Lenovo makes no representations or warranties with respect to non-Lenovo products. Support (if any) for the non-Lenovo products is provided by the third party, not Lenovo.

Some software might differ from its retail version (if available) and might not include user manuals or all program functionality.

Recycling Information

Lenovo encourages owners of information technology (IT) equipment to responsibly recycle their equipment when it is no longer needed. Lenovo offers a variety of programs and services to assist equipment owners in recycling their IT products. For information on recycling Lenovo products, go to:

<http://www.lenovo.com/recycling>

Particulate Contamination

Attention: Airborne particulates (including metal flakes or particles) and reactive gases acting alone or in combination with other environmental factors such as humidity or temperature might pose a risk to the device that is described in this document.

Risks that are posed by the presence of excessive particulate levels or concentrations of harmful gases include damage that might cause the device to malfunction or cease functioning altogether. This specification sets forth limits for particulates and gases that are intended to avoid such damage. The limits must not be viewed or used as definitive limits, because numerous other factors, such as temperature or moisture content of the air, can influence the impact of particulates or environmental corrosives and gaseous contaminant transfer. In the absence of specific limits that are set forth in this document, you must implement practices that maintain particulate and gas levels that are consistent with the protection of human health and safety. If Lenovo determines that the levels of particulates or gases in your environment have caused damage to the device, Lenovo may condition provision of repair or replacement of devices or parts on implementation of appropriate remedial measures to mitigate such environmental contamination. Implementation of such remedial measures is a customer responsibility..

Contaminant	Limits
Particulate	<ul style="list-style-type: none">The room air must be continuously filtered with 40% atmospheric dust spot efficiency (MERV 9) according to ASHRAE Standard 52.2¹.Air that enters a data center must be filtered to 99.97% efficiency or greater, using high-efficiency particulate air (HEPA) filters that meet MIL-STD-282.The deliquescent relative humidity of the particulate contamination must be more than 60%².The room must be free of conductive contamination such as zinc whiskers.
Gaseous	<ul style="list-style-type: none">Copper: Class G1 as per ANSI/ISA 71.04-1985³Silver: Corrosion rate of less than 300 Å in 30 days

¹ ASHRAE 52.2-2008 - *Method of Testing General Ventilation Air-Cleaning Devices for Removal Efficiency by Particle Size*. Atlanta: American Society of Heating, Refrigerating and Air-Conditioning Engineers, Inc.

² The deliquescent relative humidity of particulate contamination is the relative humidity at which the dust absorbs enough water to become wet and promote ionic conduction.

³ ANSI/ISA-71.04-1985. *Environmental conditions for process measurement and control systems: Airborne contaminants*. Instrument Society of America, Research Triangle Park, North Carolina, U.S.A.

Telecommunication Regulatory Statement

This product may not be certified in your country for connection by any means whatsoever to interfaces of public telecommunications networks. Further certification may be required by law prior to making any such connection. Contact a Lenovo representative or reseller for any questions.

Electronic Emission Notices

When you attach a monitor to the equipment, you must use the designated monitor cable and any interference suppression devices that are supplied with the monitor.

Federal Communications Commission (FCC) Statement

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Properly shielded and grounded cables and connectors must be used to meet FCC emission limits. Lenovo is not responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that might cause undesired operation.

Industry Canada Class A Emission Compliance Statement

This Class A digital apparatus complies with Canadian ICES-003.

Avis de Conformité à la Réglementation d'Industrie Canada

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

Australia and New Zealand Class A Statement

Attention: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

European Union - Compliance to the Electromagnetic Compatibility Directive

This product is in conformity with the protection requirements of EU Council Directive 2004/108/EC (until April 19, 2016) and EU Council Directive 2014/30/EU (from April 20, 2016) on the approximation of the laws of the Member States relating to electromagnetic compatibility. Lenovo cannot accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product, including the installation of option cards from other manufacturers.

This product has been tested and found to comply with the limits for Class A equipment according to European Standards harmonized in the Directives in compliance. The limits for Class A equipment were derived for commercial and industrial environments to provide reasonable protection against interference with licensed communication equipment.



Lenovo, Einsteinova 21, 851 01 Bratislava, Slovakia

Warning: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Germany Class A Statement

Deutschsprachiger EU Hinweis:

Hinweis für Geräte der Klasse A EU-Richtlinie zur Elektromagnetischen Verträglichkeit

Dieses Produkt entspricht den Schutzanforderungen der EU-Richtlinie 2014/30/EU (früher 2004/108/EC) zur Angleichung der Rechtsvorschriften über die elektromagnetische Verträglichkeit in den EU-Mitgliedsstaaten und hält die Grenzwerte der Klasse A der Norm gemäß Richtlinie.

Um dieses sicherzustellen, sind die Geräte wie in den Handbüchern beschrieben zu installieren und zu betreiben. Des Weiteren dürfen auch nur von der Lenovo empfohlene Kabel angeschlossen werden. Lenovo übernimmt keine Verantwortung für die Einhaltung der Schutzanforderungen, wenn das Produkt ohne Zustimmung der Lenovo verändert bzw. wenn Erweiterungskomponenten von Fremdherstellern ohne Empfehlung der Lenovo gesteckt/eingebaut werden.

Deutschland:

Einhaltung des Gesetzes über die elektromagnetische Verträglichkeit von Betriebsmittein

Dieses Produkt entspricht dem „Gesetz über die elektromagnetische Verträglichkeit von Betriebsmitteln“ EMVG (früher „Gesetz über die elektromagnetische Verträglichkeit von Geräten“). Dies ist die Umsetzung der EU-Richtlinie 2014/30/EU (früher 2004/108/EC) in der Bundesrepublik Deutschland.

Zulassungsbescheinigung laut dem Deutschen Gesetz über die elektromagnetische Verträglichkeit von Betriebsmitteln, EMVG vom 20. Juli 2007 (früher Gesetz über die elektromagnetische Verträglichkeit von Geräten), bzw. der EMV EU Richtlinie 2014/30/EU (früher 2004/108/EC), für Geräte der Klasse A.

Dieses Gerät ist berechtigt, in Übereinstimmung mit dem Deutschen EMVG das EG-Konformitätszeichen - CE - zu führen. Verantwortlich für die Konformitätserklärung nach Paragraf 5 des EMVG ist die Lenovo (Deutschland) GmbH, Meitnerstr. 9, D-70563 Stuttgart.

Informationen in Hinsicht EMVG Paragraf 4 Abs. (1) 4:

Das Gerät erfüllt die Schutzanforderungen nach EN 55024 und EN 55022 Klasse A.

Nach der EN 55022: „Dies ist eine Einrichtung der Klasse A. Diese Einrichtung kann im Wohnbereich Funkstörungen verursachen; in diesem Fall kann vom Betreiber verlangt werden, angemessene Maßnahmen durchzuführen und dafür aufzukommen.“

Nach dem EMVG: „Geräte dürfen an Orten, für die sie nicht ausreichend entstört sind, nur mit besonderer Genehmigung des Bundesministers für Post und Telekommunikation oder des Bundesamtes für Post und Telekommunikation betrieben werden. Die Genehmigung wird erteilt, wenn keine elektromagnetischen Störungen zu erwarten sind.“ (Auszug aus dem EMVG, Paragraph 3, Abs. 4). Dieses Genehmigungsverfahren ist nach Paragraph 9 EMVG in Verbindung mit der entsprechenden Kostenverordnung (Amtsblatt 14/93) kostenpflichtig.

Anmerkung: Um die Einhaltung des EMVG sicherzustellen sind die Geräte, wie in den Handbüchern angegeben, zu installieren und zu betreiben.

Japan VCCI Class A Statement

この装置は、クラス A 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。 VCCI-A

This is a Class A product based on the standard of the Voluntary Control Council for Interference (VCCI). If this equipment is used in a domestic environment, radio interference may occur, in which case the user may be required to take corrective actions.

Japan Electronics and Information Technology Industries Association (JEITA) Statement

高調波ガイドライン適合品

Japan Electronics and Information Technology Industries Association (JEITA)
Confirmed Harmonics Guidelines (products less than or equal to 20 A per phase)

高調波ガイドライン準用品

Japan Electronics and Information Technology Industries Association (JEITA)
Confirmed Harmonics Guidelines with Modifications (products greater than 20 A per phase).

Korea Communications Commission (KCC) Statement

이 기기는 업무용(A급)으로 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

This is electromagnetic wave compatibility equipment for business (Type A).
Sellers and users need to pay attention to it. This is for any areas other than home.

Russia Electromagnetic Interference (EMI) Class A statement

ВНИМАНИЕ! Настоящее изделие относится к классу А.
В жилых помещениях оно может создавать радиопомехи, для снижения которых необходимы дополнительные меры

People's Republic of China Class A electronic emission statement

中华人民共和国“A类”警告声明

声 明

此为A级产品，在生活环境巾，该产品可能会造成无线电干扰。在这种情况下，可能需要用户对其干扰采取切实可行的措施。

Taiwan Class A compliance statement

警告使用者：
這是甲類的資訊產品，在
居住的環境中使用時，可
能會造成射頻干擾，在這
種情況下，使用者會被要
求採取某些適當的對策。

